

ASSEMBLY INSTRUCTIONS

Malaguti



Date: 13.05.2019 Version: 1

ASSEMBLY INSTRUCTIONS RST 125

1. Cut the straps with a knife



2. Remove the carton



3. Remove the straps of the fixed handlebar



4. Remove the straps of the fixed upper plate

Report Nr.:

-

Created by:

Model:

RST 125

Checked by:

VIN Nr.:

Page 1/4

ASSEMBLY INSTRUCTIONS

Malaguti




Date: 13.05.2019 Version: 1

ASSEMBLY INSTRUCTIONS RST 125

5. Remove the dust bag, protective carton, paper partition, and then remove the vehicle from the iron frame



6. Install the left and right handlebars on the upper connecting plate with M8X30 bolts: first position the handlebars with bolts and then adjust the scale on the left and right handlebars to align with the mark on the mounting seat; After final tightening, use the torque wrench to adjust the torque to 17-19 Nm

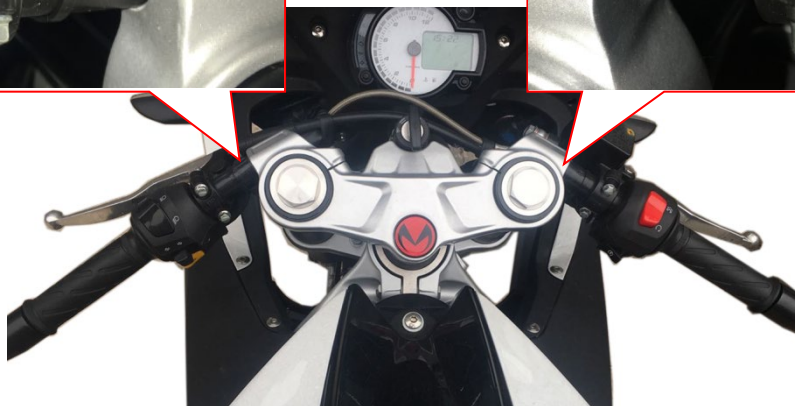

Report Nr.:

-

Created by:

Model:

RST 125

Checked by:

VIN Nr.:

Page 2/4

ASSEMBLY INSTRUCTIONS

Malaguti



Date:

13.05.2019

Version:

1

ASSEMBLY INSTRUCTIONS RST 125

7. Install the left and right rearview mirrors on the vehicle with M8X30 bolts, and cover the rear with a dust cover



8. Use M6X20 stainless steel bolts and nuts (bolts and nuts on the turn signal) to install the left and right turn signals on the right and left flow deflector housing



Report Nr.:

-

Created by:

Model:

RST 125

Checked by:

VIN Nr.:

Page 3/4

ASSEMBLY INSTRUCTIONS

Malaguti




Date: 13.05.2019 Version: 1

ASSEMBLY INSTRUCTIONS RST 125

9. Install the battery

* Disassemble some parts before installing the battery (see the illustration on the right) so that the battery can be placed in the battery case.

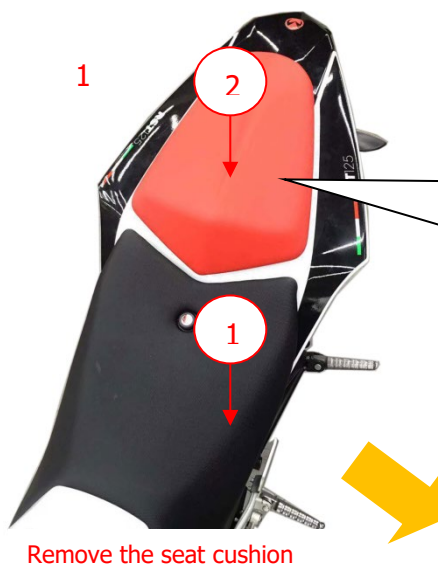

Remove the seat cushion



Remove the passenger seat cushion by removing the upper bolt



Attach the battery to the battery box as shown in the picture

10. After the end, check the vehicle according to the PDI.

Report Nr.:

-

Created by:

Model:

RST 125

Checked by:

VIN Nr.:

Page 4/4