Wiring diagram Malaguti Madison 300

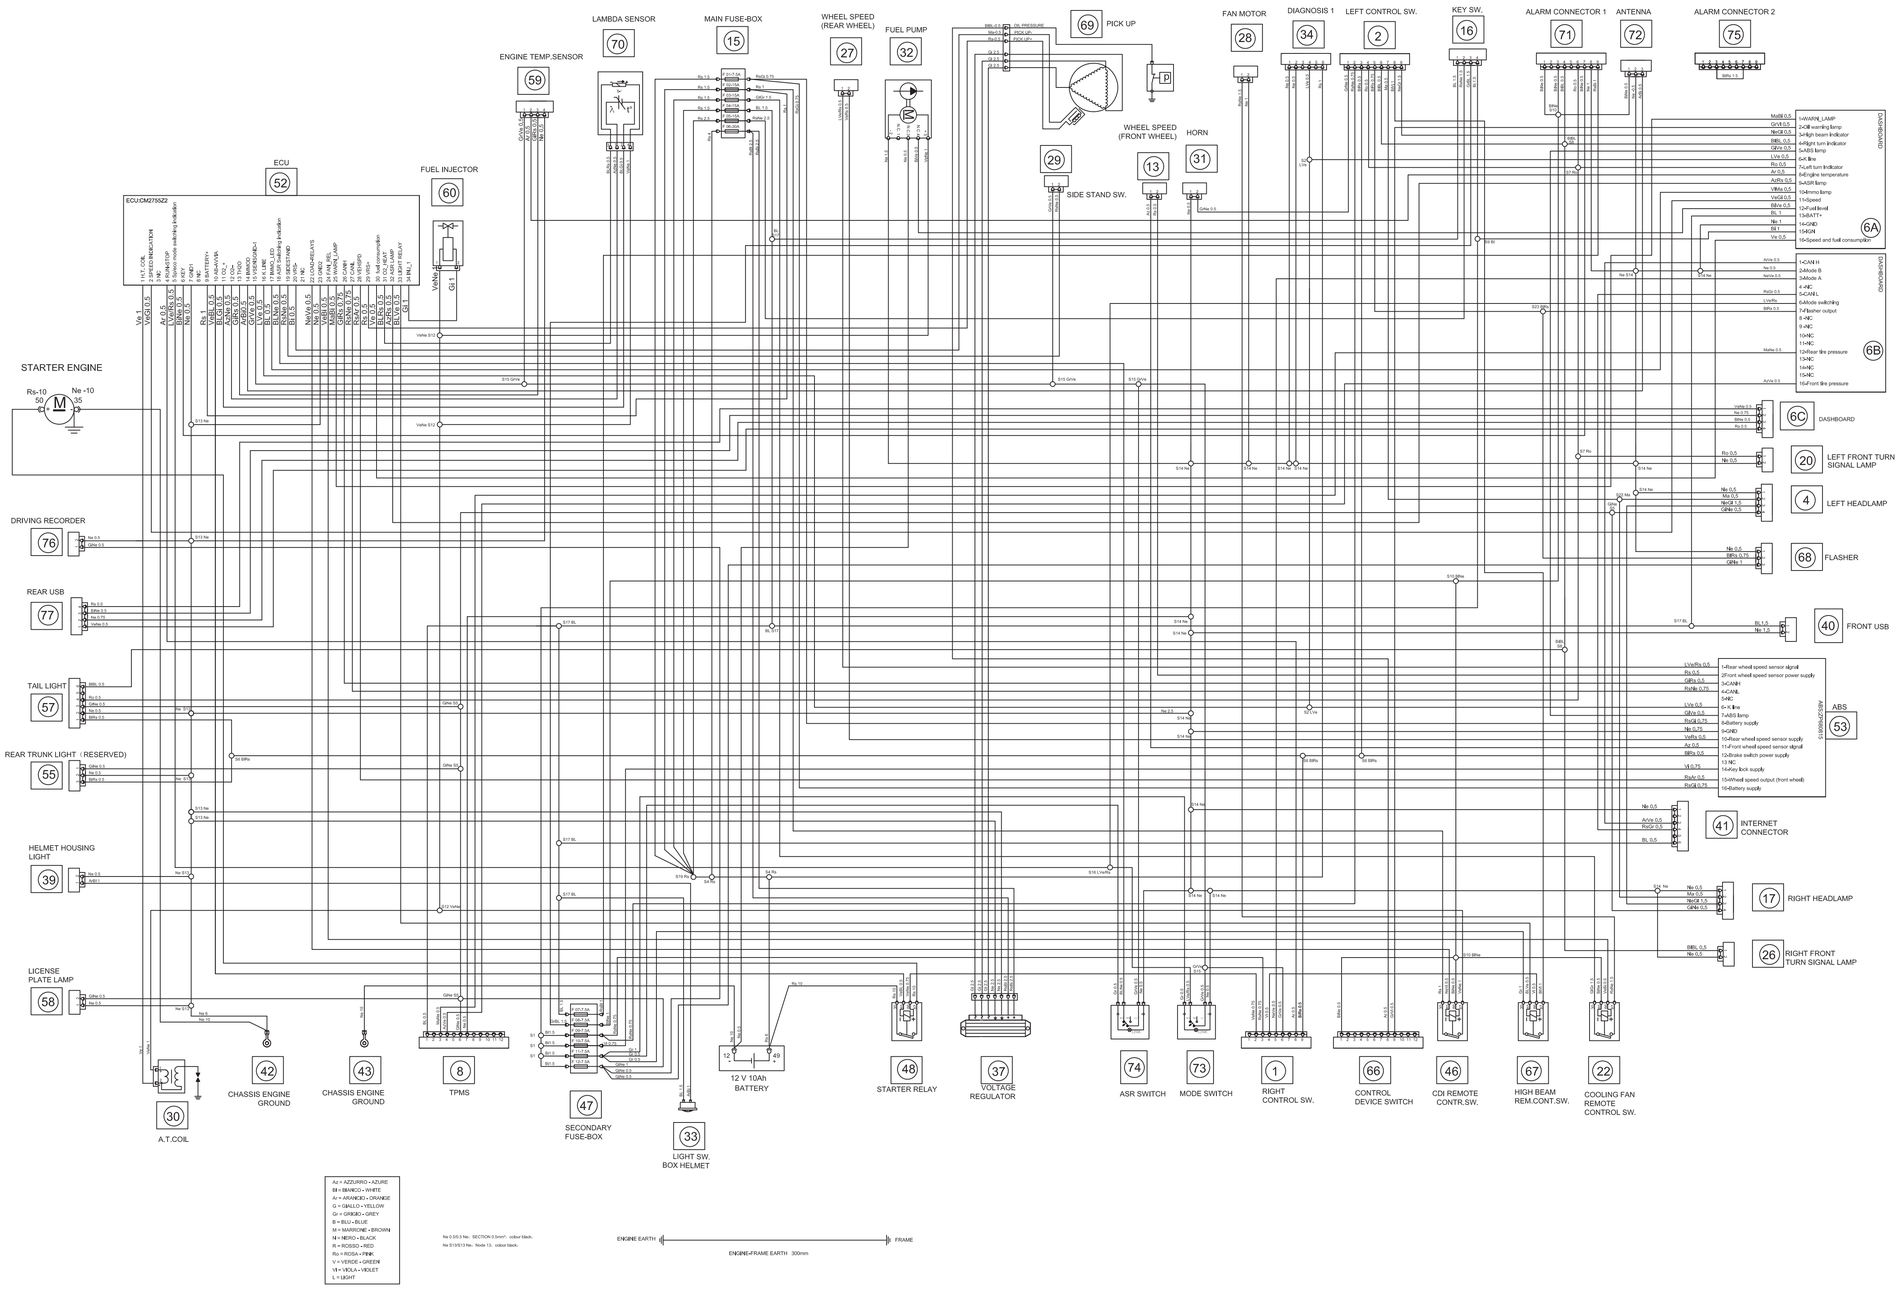

1.RIGHT CONTROL SW.
2.LEFT CONTROL SW.
4.LEFT HEADLAMP
6A.DASHBOARD
6B.DASHBOARD
6C.DASHBOARD
8.TPMS
12.BATTERY NEGATIVE
13.WHEEL SPEED (FRONT WHEEL)
15.MAIN FUSE-BOX
16.KEY SW.
17.RIGHT HEADLAMP
20.LEFT FRONT TURN SIGNAL LAMP
22.COOLING FAN REMOTE CONTROL SW.
26.RIGHT FRONT TURN SIGNAL LAMP
27.WHEEL SPEED (REAR WHEEL)
28.FAN MOTOR
29.SIDE STAND SW.
30.A.T.COIL
31.HORN
32.FUEL PUMP
33.LIGHT SW. BOX HELMET
34.DIAGNOSIS 1
35.STARTER ENGINE NEGATIVE
37.VOLTAGE REGULATOR
39.HELMET HOUSING LIGHT
40.FRONT USB
41.INTERNET CONNECTOR
42.CHASSIS ENGINE GROUND
43.CHASSIS ENGINE GROUND
46.CDI REMOTE CONTR.SW.
47.SECONDARY FUSE-BOX
48.STARTER RELAY
49.BATTERY POSITIVE
50.STARTER ENGINE
52.ECU
53.ABS
55.REAR TRUNK LIGHT（RESERVED)
57.TAIL LIGHT
58.LICENSE PLATE LAMP
59ENGINE TEMP.SENSOR
60.FUEL INJECTOR
66.CONTROL DEVICE SWITCH
67.HIGH BEAM REM.CONT.SW.
68.FLASHER
69.PICK UP
70.LAMBDA SENSOR
71.ALARM CONNECTOR 1
72.ANTENNA
73.MODE SWITCH
74.ASR SWITCH
75.ALARM CONNECTOR 2
76.DRIVING RECORDER
77.REAR USB