


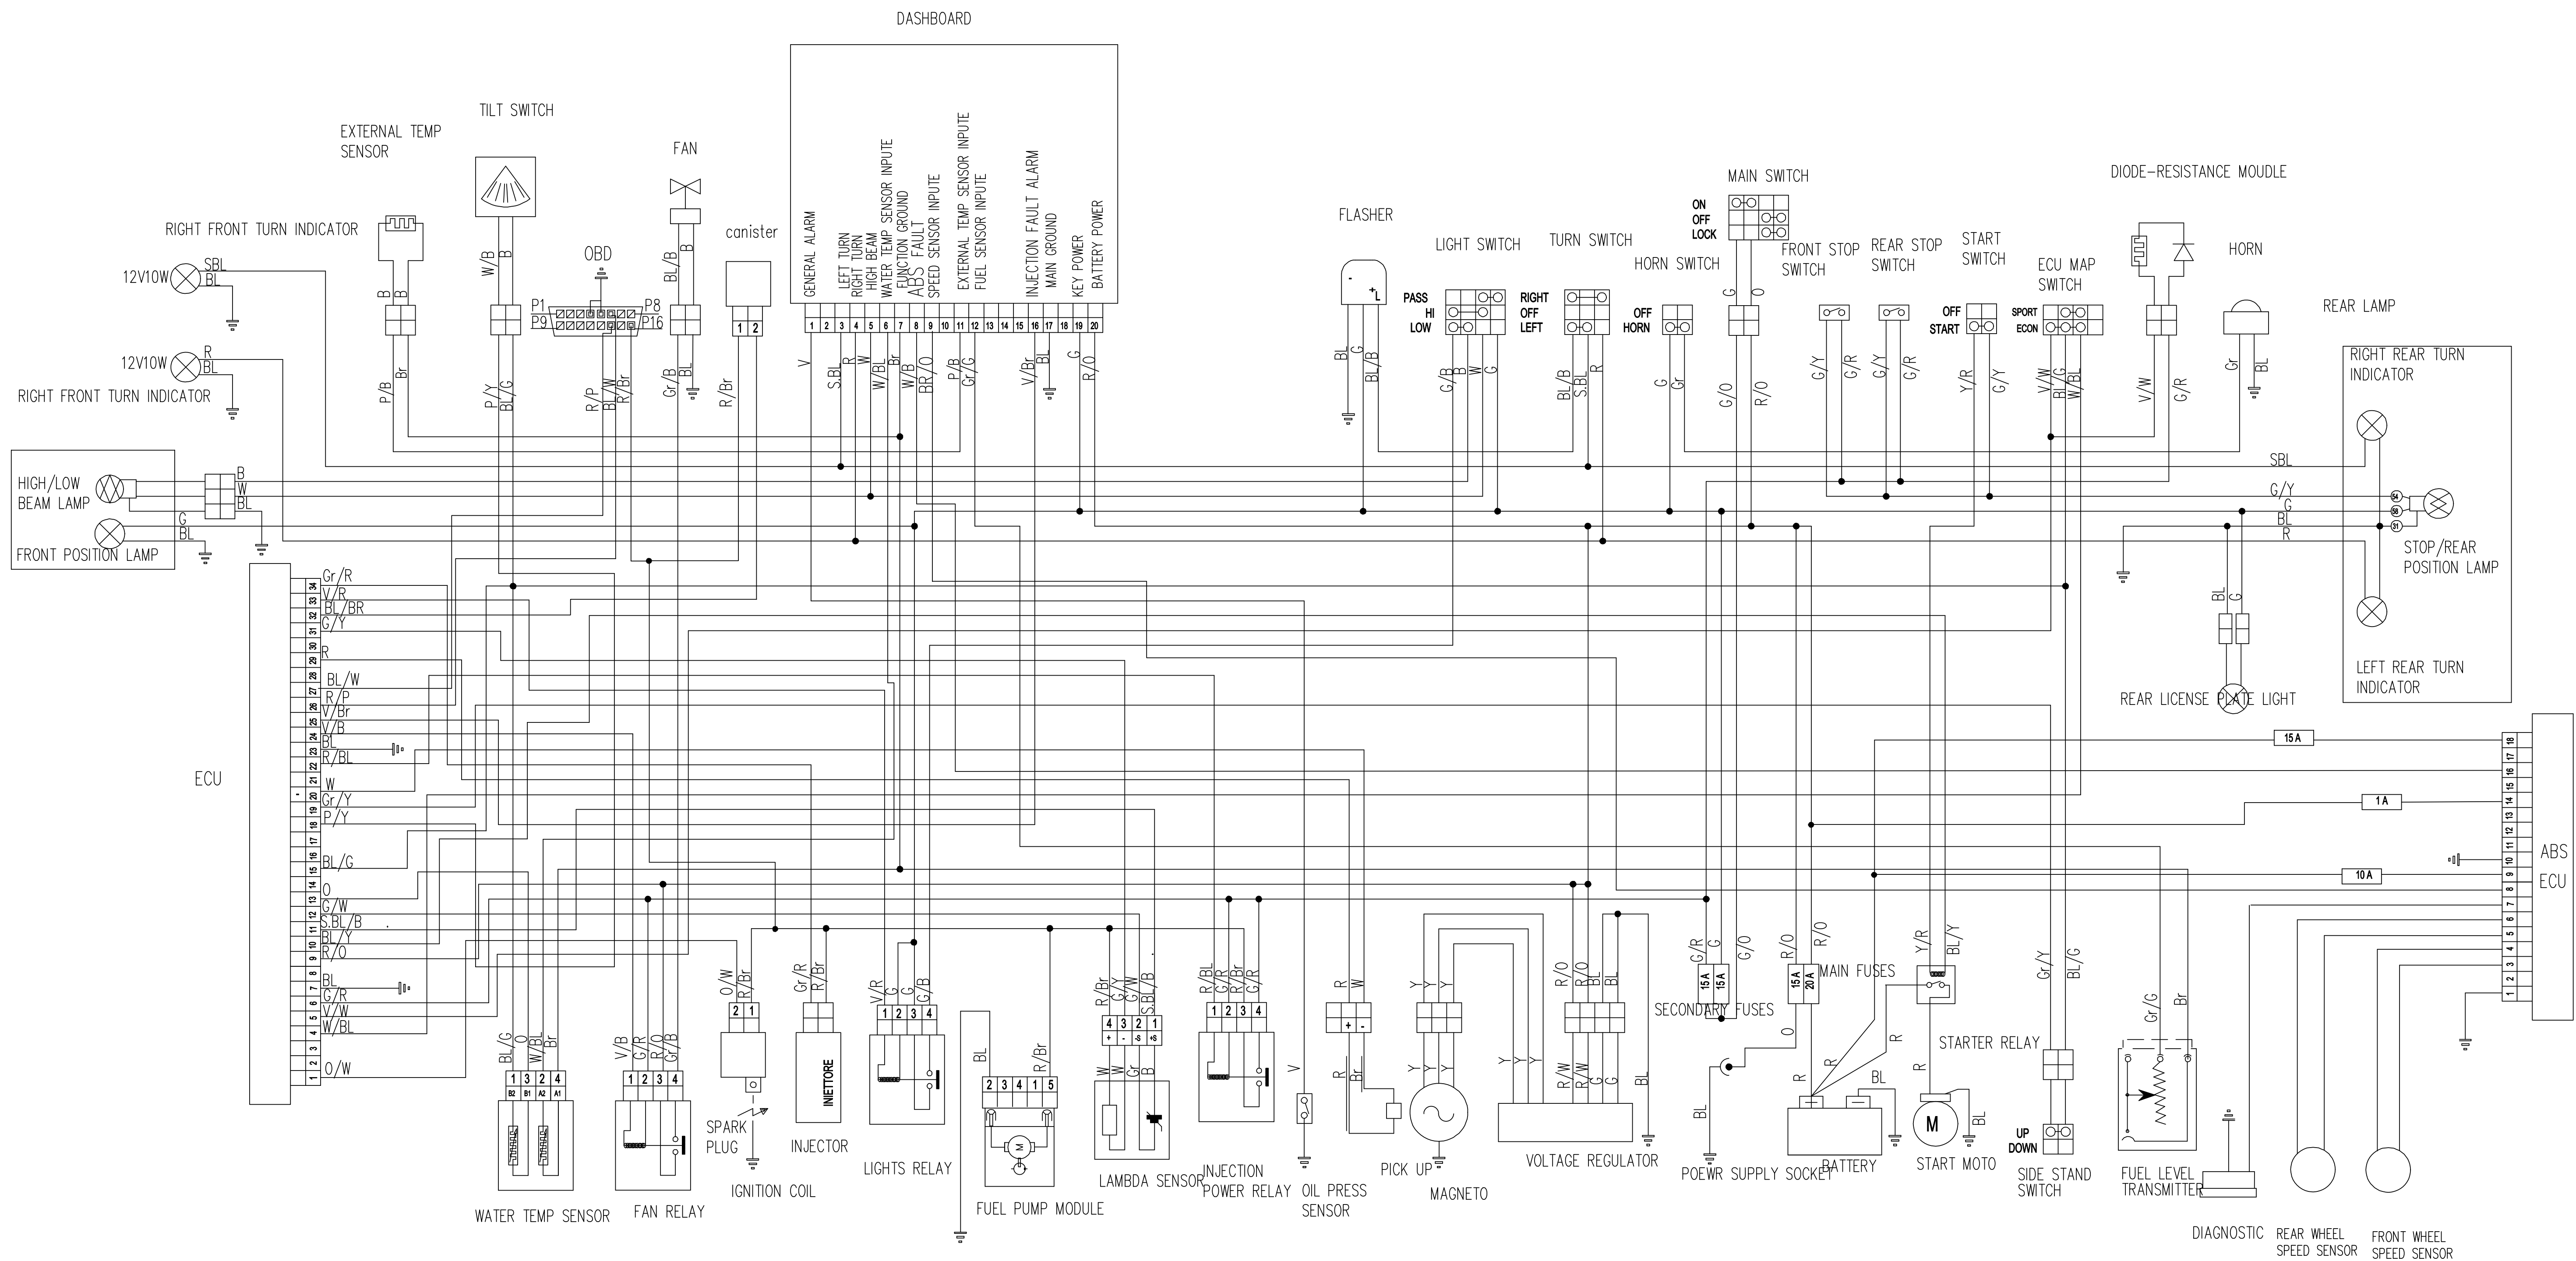

ECU – PIN OUT

1	IGNITION CONTRAL SIGNAL	18	TILT SENSOR INPUT
2	BOOST	19	SIDE STAND SWITCH INPUT
3		20	PICK UP SIGNAL -
4	ENGINE KILL SIGNAL	21	
5	ECU MAP SWITCH INPUT	22	INJECTION POWER RELAY CONTRAL SIGNAL
6	POWER +12V (MIAN SWITCH)	23	INJECTION GROUND
7	INJECTION GROUND	24	FAN RELAY CONTRAL SIGNAL
8	NULL	25	INJECTION FAULT ALARM
9	POWER +12V (BATTERY)	26	CAN H
10	ENGINE START CONTRAL SIGNAL	27	CAN L
11	LAMBDA SENSOR SIGNAL +	28	
12	LAMBDA SENSOR SIGNAL -	29	PICK UP SIGNAL +
13	WATER TEMP SENSOR INPUT	30	
14	ANTENNA	31	LAMBDA SENSOR HEAT CONTRAL SIGNAL
15	GDN SENSORS	32	canister purge valve
16		33	LIGHTS RELAY CONTRAL SIGNAL
17		34	INJECTOR CONTRAL SIGNAL

ABS – PIN OUT

NO	FUNCTION	NO	FUNCTION
1	ECU GROUND	10	GND
2		11	
3	FRONT WHEEL SPEED SENSOR SUPPLY	12	
4	FRONT WHEEL SPEED SENSOR SIGNAL	13	
5	REAR WHEEL SPEED SENSOR SUPPLY	14	POWER +12V (MIAN SWITCH)
6	REAR WHEEL SPEED SENSOR SIGNAL	15	
7	k DIAGNOSTIC	16	FAULT ALARM
8	REAR WHEEL SIGNAL OUT	17	
9	POWER +12V (BATTERY)	18	POWER +12V (BATTERY)

SHORTENING	COLOUR
B	BLACK
BL	BLUE
Br	BROWN
G	GREEN
Gr	GREY
O	ORANGE
P	PINK
R	RED
S.BL	SKY BLUE
V	VIOLET
W	WHITE
Y	YELLOW