AOTRON

SERVICE MANUAL BREEZY 50

GROUP INDEX

1.GENERAL INFORMA	ATION/TROUBLE DIAGNOSIS	17-
2.MAINTENANCE INFO	ORMATION	33-
3. LUBRICATION SYST	ГЕМ	41-
4. FUEL INJECTION SY	STE	62-
5. REMOVAL OF ENGI	NE	71-
6. CYLINDER HEAD/V	/ALVE	85-
7. CYLINDER/PISTON		94-
8. V-BELT DRIVING SY	YSTEM/KICK STARTER	108-
9. FINAL DRIVING ME	CCHANISM	115-
10. A.C. GENERATOR/	STARTING CLUTCH	122-
11. CRANKCASE/CRAI	NKSHAFT	130-
12. BODY COVER		143-
13. BRAKE		155-
14. STEERING/FRONT	T WHEEL/FRONT SHOCK ABSORBER	166-
15. REAR WHEEL/REA	AR SHOCK ABSORBER	171-
16. ELECTRICAL EQUI	IPMENT	192-
17.Wiring diagram		193-

1.GENERAL INFORMATION/TROUBLE DIAGNOSIS

SYMBOLS AND MARKS	1-1
GENERAL SAFETY	1-2
SERVICE PRECAUTIONS	1-3
SPECIFICATIONS	1-9
TORQUE VALUES (ENGINE)	1-10
TORQUE VALUES (FRAME)	1-11
TROUBLES DIAGNOSIS	1-12
LUBRICATION POINTS	1-16

1-1 GENERAL INFORMATION/TROUBLE DIAGNOSIS

SYMBOLS AND MARKS

Symbols and marks are used in this manual to indicate what and where the special service are needed, in case supplemental information is procedures needed for these symbols and marks, explanations will be added to the text instead of using the symbols or marks.

⚠ Warning	Means that serious injury or even death may result if procedures are not followed.		
⚠ Caution	Means that equipment damages may result if procedures are not followed.		
Engine oil	Limits to use SG10W-40 API SH/CD class oil. Warranty will not cover the damage that caused by not apply with the limited engine oil.		
Gear oil	Limits to use SAE 85W-90 class oil. Warranty will not cover the damage that caused by not apply with the limited gear oil.		
Grease Grease	King Mate G-3 is recommended.		
Locking sealant	Apply sealant, medium strength sealant should be used unless otherwise specified.		
Oil seal	Apply with lubricant.		
Renew	Replace with a new part before installation.		
Brake fluid	Use recommended brake fluid DOT4 or WELLRUN brake fluid.		
Special tools	Special service tools.		
Correct	Meaning correct installation.		
× Wrong	Meaning wrong installation.		
Indication	Indication of components.		
Directions	Indicates position and operation directions.		
	Components assembly directions each other.		
	Indicates where the bolt installation direction, means that bolt cross through the component (invisibility).		

GENERAL SAFETY

Carbon monoxide

If you must run your engine, ensure the place is well ventilated. Never run your engine in a closed area. Run your engine in an open area, if you have to run your engine in a closed area, be sure to use an extractor.

∆ Caution

Exhaust contains toxic gas which may cause one to lose consciousness and even result in death.

Gasoline

Gasoline is a low ignition point and explosive material. Work in a well-ventilated place, no flame or spark should be allowed in the work place or where gasoline is being stored.

∆ Caution

Gasoline is highly flammable, and may explode under some conditions, keep it away from children.

Used engine oil

∆Caution

Prolonged contact with used engine oil (or transmission oil) may cause skin cancer although it might not be verdict.

Hot components

⚠ Caution

Components of the engine and exhaust system can become extremely hot after engine running. They remain very hot even after the engine has been stopped for some time. When performing service work on these parts, wear insulated gloves and wait until cooling off.

Battery

- Battery emits explosive gases; flame is strictly prohibited. Keep the place well ventilated when charging the battery.
- Battery contains sulfuric acid (electrolyte) which can cause serious burns so be careful do not be spray on your eyes or skin. If you get battery acid on your skin, flush it off immediately with water. If you get battery acid in your eyes, flush it off immediately with water, then go to hospital to see an ophthalmologist.
- If you swallow it by mistake, drink a lot of water or milk, and take some laxative such as castor oil or vegetable oil, and then go to see a doctor.
- · Keep electrolyte beyond reach of children.

Brake shoe

Do not use an compressed air or a dry brush to clean components of the brake system, use a vacuum cleaner or the equivalent to avoid asbestos dust flying.

♠ Caution

Inhaling asbestos dust may cause disorders and cancer of the breathing system.

Brake fluid Caution


Spilling brake fluid on painted, plastic, or rubber parts may cause damage to the parts. Place a clean towel on the above-mentioned parts for protection when servicing the brake system.

Keep brake fluid beyond reach of children.


1-3 GENERAL INFORMATION/TROUBLE DIAGNOSIS

SERVICE PRECAUTIONS


 Always use with genuine parts and recommended oils. Using non-designed parts for motorcycle may damage the motorcycle.

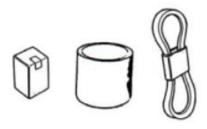


 Special tools are designed for remove and install of components without damaging the parts being worked on. Using wrong tools may result in parts damaged.

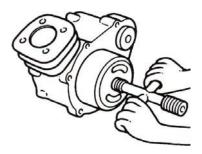


- When servicing this motorcycle, use only metric tools. Metric bolts, nuts, and screws are not interchangeable with the English system, using wrong tools and fasteners may damage this vehicle.
- Clean the outside of the parts or the cover before removing it from the motorcycle. Otherwise, dirt and deposit accumulated on the part's surface may fall into the engine, chassis, or brake system to cause a damage.
- Wash and clean parts with high ignition point solvent, and blow dry with compressed air. Pay special attention to O-rings or oil seals because most cleaning agents have an adverse effect on them.

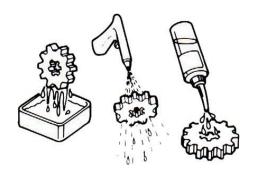


 Never bend or twist a control cable to prevent stiff control and premature worn out.

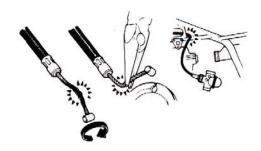

- Rubber parts may become deteriorated when old, and prone to be damaged by solvent and oil. Check these parts before installation to make sure that they are in good condition, replace if necessary.
- When loosening a component which has different sized fasteners, operate with a diagonal pattern and work from inside out. Loosen the small fasteners first. If the bigger ones are loosen first, small fasteners may receive too much stress.
- Store complex components such as transmission parts in the proper assemble order and tie them together with a wire for ease of installation later.

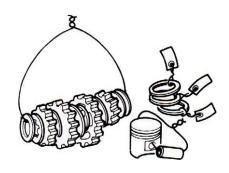


- Note the reassemble position of the important components before disassembling them to ensure they will be reassembled in correct dimensions (depth, distance or position).
- Components not to be reused should be replaced when disassembled including gaskets metal seal rings, Orings, oil seals, snap rings, and split pins.

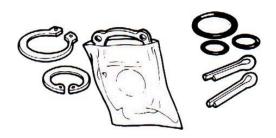


GENERAL INFORMATION/TROUBLE DIAGNOSIS1-4


• The length of bolts and screws for assemblies, cover plates or boxes is different from one another, be sure they are correctly installed. In case of confusion, Insert the bolt into the hole to compare its length with other bolts, if its length out side the hole is the same with other bolts, it is a correct bolt. Bolts for the same assembly should have the same length.

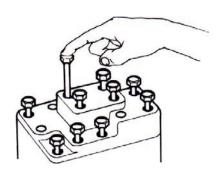


- Tighten assemblies with different dimension fasteners as follows:
- Tighten all the fasteners with fingers, then tighten the big ones with special tool first diagonally from inside toward outside, important components should be tightened 2 to 3 times with appropriate increments to avoid warp unless otherwise indicated. Bolts and fasteners should be kept clean and dry. Do not apply oil to the threads.

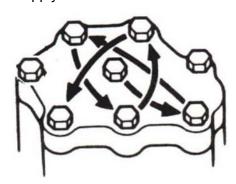


 When oil seal is installed, fill the groove with grease, install the oil seal with the name of the manufacturer facing outside, check the shaft on which the oil seal is to be installed for smoothness and for burrs that may damage the oil seal.

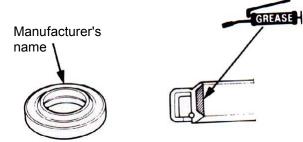


 Remove residues of the old gasket or sealant before reinstallation, grind with a grindstone if the contact surface has any damage.

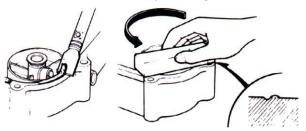


 The ends of rubber hoses (for fuel, vacuum, or coolant) should be pushed as far as they can go to their connections so that there is enough room below the enlarged ends for tightening the clamps.



 Rubber and plastic boots should be properly reinstalled to the original correct positions as designed.

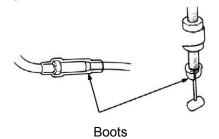


 The tool should be pressed against two (inner and outer) bearing races when removing a ball bearing.
 Damage may result if the tool is pressed against only one race (either inner race or outer race). In this case, the bearing should be replaced. To avoid damaging the bearing, use equal force on both races.




Both of these examples can result in bearing damage.

1-5 GENERAL INFORMATION/TROUBLE DIAGNOSIS

 Lubricate the rotation face with specified lubricant on the lubrication points before assembling.

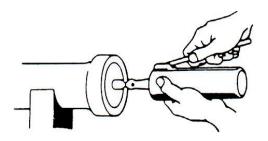

 Check if positions and operation for installed parts is in correct and properly.

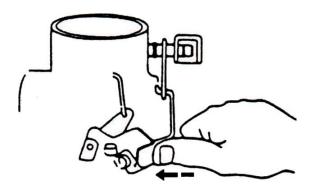


 Make sure service safety each other when conducting by two persons.




Note that do not let parts fall down




 Before battery removal operation, it has to remove the battery negative (-) cable firstly. Notre tools like open-end wrench do not contact with body to prevent from circuit short and create spark.

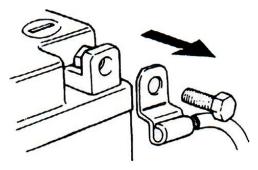


 After service completed, make sure all connection points is secured. Battery positive (+) cable should be connected firstly. And the two posts of battery have to be greased after connected the cables.

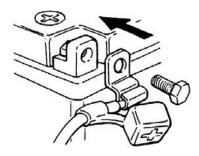

 Make sure that the battery post caps are located in properly after the battery posts had been serviced.

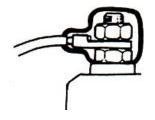


 If fuse burned, it has to find out the cause and solved it. And then replace with specified capacity fuse.

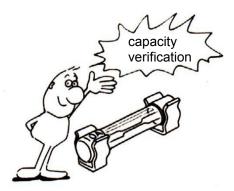

GENERAL INFORMATION/TROUBLE DIAGNOSIS1-6


 When separating a connector, it locker has to be unlocked firstly. Then, conduct the service operation.

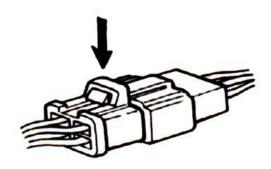


 Do not pull the wires as removing a connector or wires. Hold the connector body.




 Make sure if the connector pins are bent, extruded or loosen.

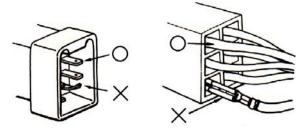


 Insert the connector completely. If there are two lockers on two connector sides, make sure the lockers are locked in properly. Check if any wire loose.




 Check if the connector is covered by the twin connector boot completely and secured properly.




• Before terminal connection, check if the boot is crack or the terminal is loose.

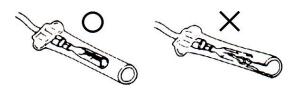


 Insert the terminal completely. Check if the terminal is covered by the boot. Do not let boot open facing up.



 Secure wires and wire harnesses to the frame with respective wire bands at the designated locations. Tighten the bands so that only the insulated surfaces contact the wires or wire harnesses.

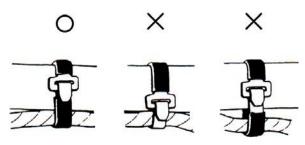

 Wire band and wire harness have to be clamped secured properly.

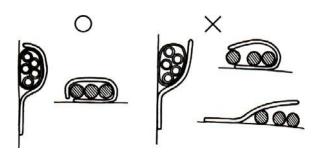


 Do not squeeze wires against the weld or its clamp.




1-7 GENERAL INFORMATION/TROUBLE DIAGNOSIS


 Do not let the wire harness contact with rotating, moving or vibrating components as routing the harness.

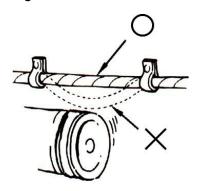


 Keep wire harnesses far away from the hot parts.

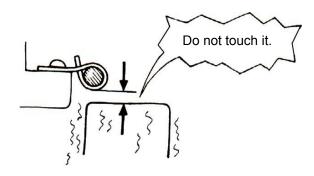


 Route wire harness to avoid sharp edges or corners and also avoid the projected ends of bolts and screws.




 Route harnesses so that they neither pull too tight nor have excessive slack.

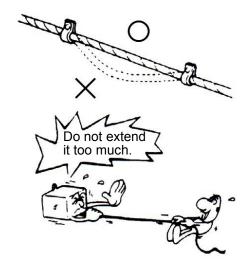


 Protect wires or wire harnesses with electrical tape or tube if they contact a sharp edge or corner. Thoroughly clean the surface where tape is to be applied.

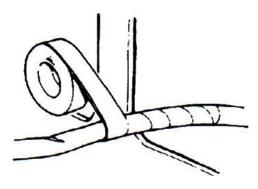


 Secure the rubber boot firmly as applying it on wire harness.

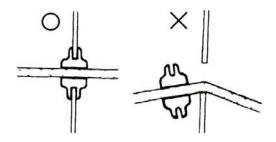

 Never use wires or harnesses which insulation has been broken. Wrap electrical tape around the damaged parts or replace them.

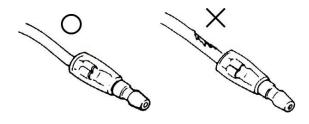


 Never clamp or squeeze the wire harness as installing other components.

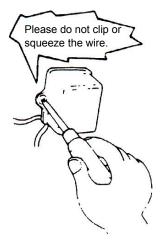


GENERAL INFORMATION/TROUBLE DIAGNOSIS 1-8


 Do not let the wire harness been twisted as installation.

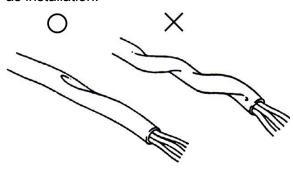

 Wire harnesses routed along the handlebar should not be pulled too tight or have excessive slack, be rubbed against or interfere with adjacent or surrounding parts in all steering positions.

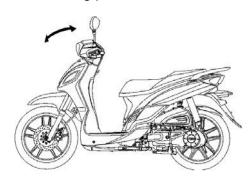

 Before operating a test instrument, operator should read the operation manual of the instrument. And then, conduct test in accordance with the instruction.

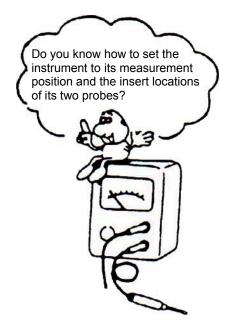

 With sand paper to clean rust on connector pins/terminals if found. And then conduct connection operation later.



1-9 GENERAL INFORMATION/TROUBLE DIAGNOSIS

SPECIFICATIONS

Item	Model Specification	Breezy 50	Engine cod	BN139QMB	
-	Length	1780mm	Front shock absorber	Telescopic fork	
	Width	680mm	Rear shock absorber	Unit swing	
	Height	1115mm	Clutch type	Auto centrifugal clutch	
w	heel base	1220mm	Transmission	C.V.T.	
Ne	et Weight	83kg (Front:33kg Rear:50kg)	Front tire	90/70-12 or100/60-12	
	Model	Single cylinder,4- stroke, forced air cooled engine	Rear tire	90/70-12 or 100/60-12	
Fue	el required	E5/E10	Rim type	Both MT2.75*12 (Aluminum)	
Dis	placement	49.6 cm ³	Tire pressure	225kPa	
Comp	ression ratio	10.5: 1	Front brake	Disk type (Ø 155 mm)	
Max	ximum HP	2.10 KW/8000 rpm	Rear brake	Drum type (Ø 110 mm)	
Maxi	mum torque	2.60N.m/7500 rpm	Head lamp(high, low)	12V LED	
	e clearance: IN/EX	inlet: 0.12mm, outlet: 0.12mm	Front position lamp	12V LED	
Start	ing methods	electrical starter	Front/ Rear direction indicator	12V LED	
Engin	e oil capacity	0.7 L (0.6L for change)	Rear position lamp/Stop lamp	12V LED	
Transmission oil capacity		0.14L (0.13Lfor change)	Licence light	12V LED	
Fuel t	ank capacity	5.0L±0.2 L	Battery	12V 7Ah or 12V 6Ah	
	Fuse	15A&5A	Ain alsesses	Donos to a	
Sp	oark plug	NGK CR7HSA	Air cleaner	Paper type	

GENERAL INFORMATION/TROUBLE DIAGNOSIS1-10

TORQUE VALUES (ENGINE)

ITEM	Q'TY	THREAD DIA (mm)	TORQUE VALUE(Kg-m)	REMARKS
A.C. generator flange bolt	2	6	0.8~1.2	
L side cover plate pan screw	7	5	0.5~0.7	
RR. brake shoe anchor fixing nut	1	8	1.5~2.0	
Rear brake arm flange bolt	1	6	0.7~1.1	
Engine oil filter screen cover	1	30	1.0~2.0	
Crankcase bolts	2	6	0.8~1.2	
Oil pump flat screw	2	6	0.8~1.2	
Cylinder/cylinder head two-ends bolts	4	8	0.7~1.1	Tighten to crankcase
Cylinder head left side bolts	2	6	0.7~1.1	
Camshaft sprocket bolt	2	6	1.0~1.5	
Valve adjustment fixing nuts	2	5	0.7~1.1	Apply oil to thread
Camshaft chain tensioner pivot bolts	1	6	0.8~1.2	
Camshaft chain adjuster bolts	2	6	0.8~1.2	
A/I fixing flange bolt	4	6	0.8~1.2	
Oil pump separator bolt	2	6	0.8~1.2	
One-way clutch lock nut	1	22	9.0~10. 0	Apply oil to thread
Right crankcase cover bolts	10	6	0.7~1.1	
Pulse generator bolts	2	5	0.4~0.6	
A.C. generator flange bolt	2	5	0.8~1.2	
Flywheel nut	1	12	5.0~6.0	
Cooling fan flange bolt	4	6	0.8~1.2	
Shroud A/B	2	6	0.7~1.1	
Engine oil draining plug bolt	1	12	3.5~4.5	
Start motor bolts	2	6	0.7~1.1	
Transmission bolts	7	8	2.6~3.0	
Gear oil draining plug	1	8	1.0~1.5	
Gear oil filling bolt	1	8	1.0~1.5	
Driven pulley nut	1	12	5.5~6.0	
Driving face nut	1	12	5.0~6.0	
Left crankcase cover bolts	8	6	0.8~1.2	
Cylinder head holder nuts	4	8	1.8~2.2	
Cylinder head cover bolts	4	6	0.8~1.2	
Spark plug	1	10	1.0~1.2	
Carburetor heat protector connecting nuts	2	6	0.7~1.1	
Exhaust pipe bolts	2	8	3.0~3.6	
Exhaust pipe connecting nuts	2	6	1.0~1.4	

1-11 GENERAL INFORMATION/TROUBLE DIAGNOSIS

TORQUE VALUES (FRAME)

ITEM	Q'TY	THREAD DIA (mm)	TORQUE VALUE(Kg-m)	REMARKS
Mounting Hex socket bolt for steering handlebar	4	10	4.0~5.0	
Mounting nut for steering rod	1	25.4	1.0~2.0	
Cone seat for steering rod	1	25.4	0.2~0.3	
Front wheel shaft nut	1	12	5.0~7.0	
Rear wheel shaft nut	1	16	11.0~13.0	
Wheel hub/rim mounting nuts	8	8	2.8~3.2	
Speedometer cable locking screw	1	5	0.15~0.3	
Front shock absorber mounting bolts	4	8	2.4~3.0	
Rear shock absorber upper connection bolt	1	10	3.5~4.5	
Rear shock absorber lower connection bolt	1	8	2.4~3.0	
Brake lever bolts	2	6	0.8~1.2	
Front brake hose bolts	2	10	3.3~3.7	
Front brake air-bleeding valve	1	6	0.8~1.0	
Front brake disc mounting bolts	4	10	4.0~4.5	
Front brake clipper mounting bolts	2	10	3.1~3.5	
Drum brake arm bolts (front/rear)	2	6	0.8~1.2	
Engine suspension bracket bolts	2	10	4.5~5.5	On frame side
Engine connection bolt	1	10	4.5~5.5	On engine side
Main standard nut	1	10	3.5~4.5	
Foot-starting lever bolt	1	6	1.6~1.8	
Air cleaner bolts	2	6	1.0~1.4	

The torque values listed in above table are for more important tighten torque values. Please see standard values for not listed in the table.


Standard Torque Values for Reference

TYPE	TIGHTEN TORQUE	TYPE	TIGHTEN TORQUE
5mm bolt、nut	0.45~0.60kgf-m	3mm screw	0.05~0.08kgf-m
6mm bolt、nut	0.80~1.20kgf-m	4mm screw	0.10~0.15kgf-m
8mm bolt、nut	1.80~2.50kgf-m	5mm screw	0.35~0.50kgf-m
10mm bolt、nut	3.00~4.00kgf-m	6mm screw、SH nut	0.70~1.10kgf-m
12mm bolt、nut	5.00~6.00kgf-m	6mm bolt、nut	1.00~1.40kgf-m
		8mm bolt、nut	2.40~3.00kgf-m
		10mm bolt、nut	3.50~4.50kgf-m

GENERAL INFORMATION/TROUBLE DIAGNOSIS1-12

TROUBLES DIAGNOSIS

A. Engine hard to start or can not be started

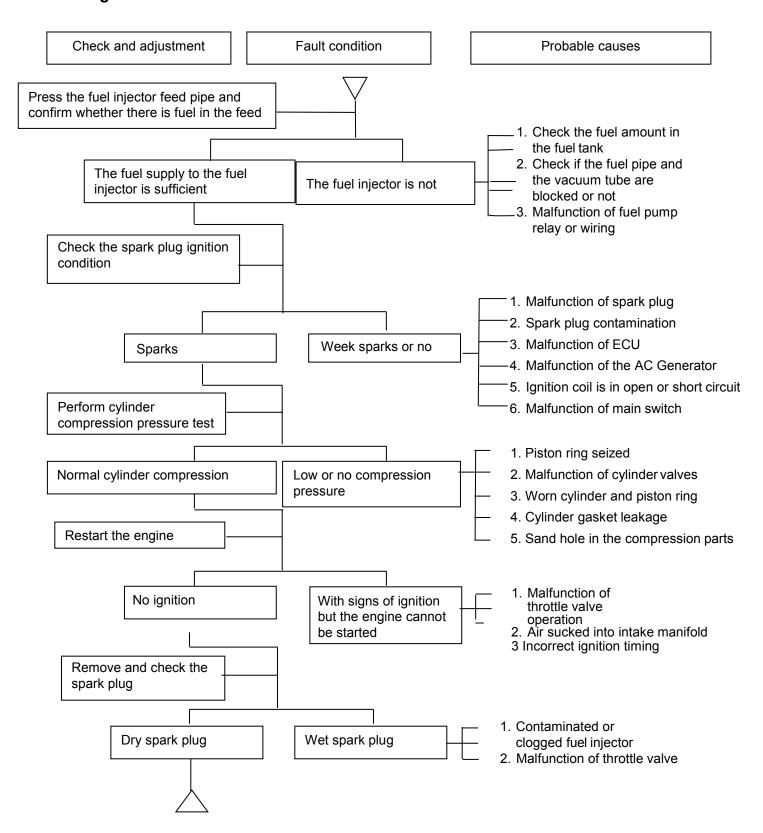


1-13 GENERAL INFORMATION/TROUBLE DIAGNOSIS

B. Engine runs sluggish (especially in low speed and idling) Check and adjustment Fault condition Probable causes Check ignition timing (using ignition lamp) Incorrect ignition timing Abnormal Normal (malfunction of ECU or AC Generator) Check for any air sucked in through the throttle body 1. Abnormal throttle body insulator gasket. 2. Abnormal throttle body installation No air sucked in Air sucked in 3. Abnormal inlet pipe gasket 4. Damaged ABV pipe Remove the spark plug and check the spark condition Contaminated spark plug Malfunction of ECU Malfunction of Good spark Poor spark **AC** Generator Malfunction of ignition Open or short circuit in spark plug leads Malfunction of main switch C. Engine runs sluggish (High speed) Check and adjustment Fault condition Probable causes Check ignition timing Malfunction of ECU Abnormal Normal Malfunction of AC Generator Check the fuel pump supply condition Good Insufficient fuel in the Poor fuel tank Pressed or clogged fuel pipe Check if fuel injector clogged 1. Replace the fuel injector Normal Clogged


GENERAL INFORMATION/TROUBLE DIAGNOSIS1-14

D. Engine runs sluggish (High speed)

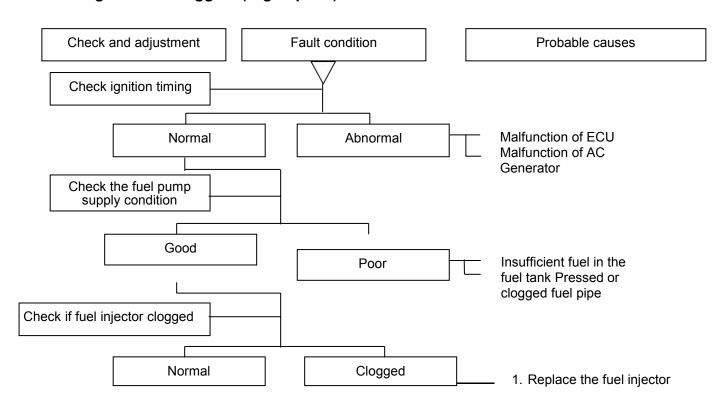


1-15 GENERAL INFORMATION/TROUBLE DIAGNOSIS

E. CLUTCH, DRIVING AND DRIVING PULLEY

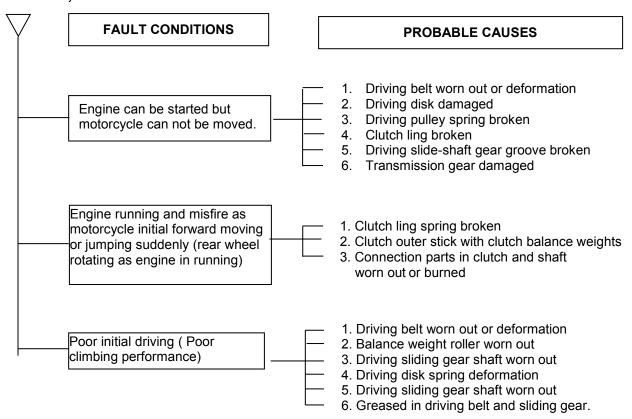

LUBRICATION POINTS

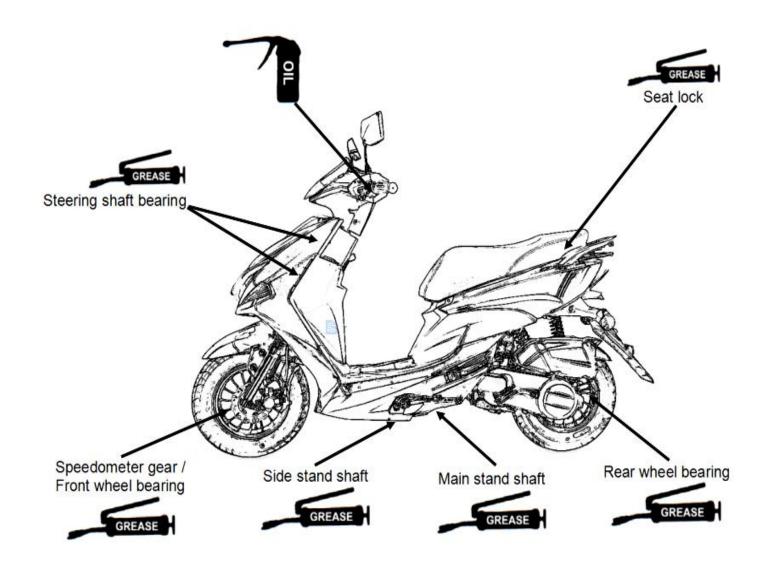

2.MAINTENANCE INFORMATION

CONTENTS —

PRECAUTIONS IN OPERATION	2-1
PERIODICAL MAINTENANCE SCHEDULE	2-2
LUBRICATION SYSTEM	2-3
Fuel System	2-4
AIR CLEANER	2-5
THROTTLE VALVE OPERATION	2-5
CRANKCASE VENTILATION	2-6
VALVE CLEARANCE ADJUSTMENT	2-6
VALVE CLEARANCE INSPECTION AND ADJUSTMENT.	2-7
IGNITION SYSTEM	2-8
SPARK PLUG	2-8
CYLINDER COPMRESSION PRESSURE	2-9
DRIVING SYSTEM	2-9
STEERING SYSTEM	2-10
SUSPENSION SYSTEM	2-10
FRONT DISC BRAKE SYSTEM	2-11
REAR BRAKE DISC SYSTEM	
BATTERY	2-15

PRECAUTIONS IN OPERATION

Specification

poomoution	pecification				
Fuel Tank Capacity	5.0L±0.2 L				
	capacity	0.7 L			
Engine Oil	change	0.6 L			
	capacity	0.14 L			
Transmission Gear oil	change	0.13 L			
Clearance of throttle	e valve	2~6 mm			
Spark plug		CR7HSA Gap: 0.6~0.7 mm			
"F" Mark in idling speed		Before TDC 13° / 1800 rpm			
Full timing advanced		Before TDC 27° / 5000 rpm			
Idling speed		1800±150 r/min-1/			
Cylinder compression	pressure	10.2±0.2 kg/cm ²			
Valve clearance: I	N/EX	0.12±0.02 mm			
Tire dimension	front / rear	90/70-12 or 100/60-12,90/70-12 or 100/60-12			
	single	Front: 225kPa rear: 225 kPa			
Tire pressure (cold)	Two persons	Front: 225kPa rear: 225kPa			
battery		12V6Ah or 12V7Ah			

PERIODICAL MAINTENANCE SCHEDULE

Mainte nance Code	Item	Initial 300KM	1 Month Every1000KM	3 month Every3000KM	6 month Every6000KM	1 year Every12000K M
1	☆ Air cleaner	I		С	С	R
2	☆ Fuel filter	I			I	R
3	☆ Oil filter	С			С	С
4	☆ Engine oil change	R		Replacement fo	or every 1000km	n
5	Tire pressure	ı	I			
6	Battery inspection	I	I			
7	Brake & free play check	I	I			
8	Steering handle check	I	I			
9	Cushion operation check	I				
10	Every screw tightening check	I	I			
11	Gear oil check for leaking	I	I			
12	☆ Spark plug check or change	I		I	R	
13	☆ Gear oil change	R		Replacement fo	or every 5000km	n
14	Frame lubrication				L	
15	Exhaust pipe	I	I			
16	☆ Ignition timing	I	I			
17	☆ Emission check in Idling	Α	I			
18	☆ Throttle operation	I		I		
19	☆ Engine bolt tightening	I		I		
20	☆ CVT driving device (belt)				I	R
21	☆ CVT driving device (roller)				С	
22	Lights/electrical equipment/mutli-meters	I	I			
23	Main/side stands & springs	I			I	
24	Fuel pipes	I		I		
25	Cam chain	I		I		
26	☆ Valve clearance	I		Α		
27	☆ Crankcase blow-by over-flow pipe	I	_	Replacement fo	or every 2000kr	n

Code: I ~ Inspection, cleaning, and adjustment R ~ Replacement C ~ Cleaning (replaced if necessary) L ~ Lubrication Have your motorcycle checked, adjusted. The above maintenance schedule is established by taking the monthly 1000 kilometers as a reference which ever comes first.

Remarks:

- These marks "☆" in the schedule are emission control items. According to EPA regulations, these items must be
 perform normally periodical maintenance following the use r manual instructions. They are prohibited to be
 adjusted or repaired by unauthorized people.
- 2 Clean or replace the air cleaner element more often when the motorcycle is operated on dusty roads or in the Heavily- polluted environment.
- 3. Maintenance should be performed more often if the motorcycle is frequently operated in high speed and after the motorcycle has accumulated a higher mileage.
- 4. Preventive maintenance
- Ignition system Perform maintenance and check when continuous abnormal ignition, misfire, after-burn, overheating occur.
- Carbon deposit removal Remove carbon deposits in cylinder head, piston heads, exhaust system when power is obvious lower than ever.
- 7. Replace worn out pistons, cylinder head.

LUBRICATION SYSTEM

Engine Oil Capacity

A Caution

- The vehicle must be parked on a level ground when checking oil capacity.
- Run the engine for 2-3 minutes then stop, wait about 2-3 more minutes allowing engine oil to settle before checking the oil level.

Remove dipstick to check the oil level. If oil level is below the lower limit mark, add oil to the specified upper limit mark.

Oil change

Shut off the engine and remove dipstick. Remove the oil drain plug on the bottom-left of crankcase to drain oil.

After draining out oil, clean oil plug and its gasket and reins tall. Replace the gasket if it is damaged.

Torque value: 3.5~4.5 kgf-m

△Caution

 Warm up the engine. This will make the oil flow out easily.

Add oil to the specified capacity.

Oil Viscosity: SG10W-40, recommended using King-Mate serial oil.

Engine oil capacity: Disassembly: 0.7L

Change: 0.6L

When checking for oil leak, run the engine at idle speed for a few minutes, then check oil capacity with dipstick.

Cleaning the oil strainer

Drain oil from engine, remove the strainer cover, spring and strainer.


If there is an accumulation on the screen, wash it off with suitable solvent (recommended using compressed air).


Check O-ring for damage, replace if necessary.

Reinstall strainer, spring, O-ring and strainer cover.

Torque value: 1.3~1.7 kgf-m



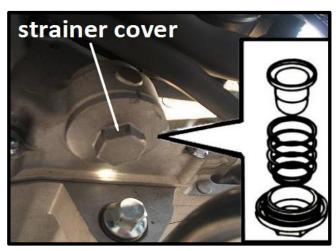

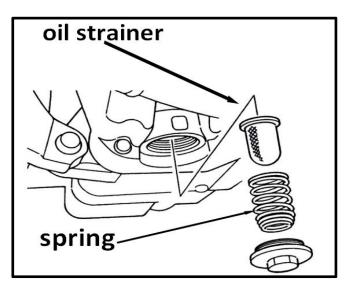

Gear Oil Inspection

Check gear oil if leaking.

Park the motorcycle with main stand on flat level place.

Turn off engine and remove the gear oil draining plug. Place a measurement cup under the draining hole. Remove the oil drain plug and drain gear oil into a measurement cup.

Check gear oil if enough.

Replacement

At first, remove the gear oil refilling bolt②, and then remove the draining plug③.

Install the draining plug after drained oil out.

Torque value: 0.8~1.2 kgf-m

Fill out gear oil to specified quantity from the engine oil filling hole.

Install the oil filling bolt.

Torque value: 0.8~1.2 kgf-m

Transmission oil capacity: 0.14 L(0.13 L for

change)

Recommended: genuine gear oil (SAE 85W-90).

△Caution


Inspect if washer is in good condition.
 Replace it with new one if it was deformed or damaged.

Fuel System Fuel Pipe


Remove luggage box, side cover, center cover, body frame cover, and pedal, as well as front inner box. Check all pipes, and replace it when they are deterioration, damage or leaking.

△Caution

• Gasoline is a low ignition material so any kind of fire is strictly prohibited as dealing it.

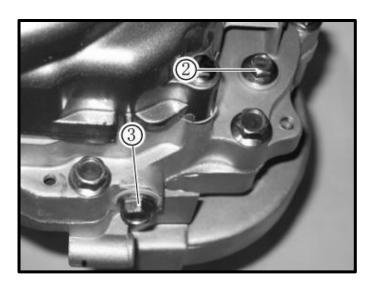



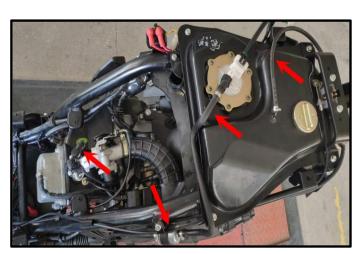

AIR CLEANER

Element

Remove left side cover.

Remove 6 screws from the air cleaner cover.


Remove element of air cleaner (2 bolts).

Check the element if dirt or damaged. Replace it with new one if dirt or damaged.

scrwes ×6 Bolt ×2

∆Caution

- Air cleaner element contains a paper made filter so do not try to clean it.
- Make sure that the air cleaner cover had been installed properly after installation.

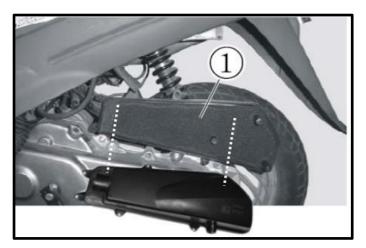


THROTTLE VALVE OPERATION

Have a wide open of throttle valve as handle bar in any position and release it to let back original (full closed) position.

Check handle bar if its operation is smooth. Check throttle valve cable and replace it if deteriorated, twisted or damaged.


Lubricate the cable if operation is not smooth.


Measure handle bar free play in its flange part.



Adjustment can be done in either ends. Secondary adjustment is conducted from top side.

Remove rubber boot, loosen fixing nut, and then adjust it by turning the adjustment nut.

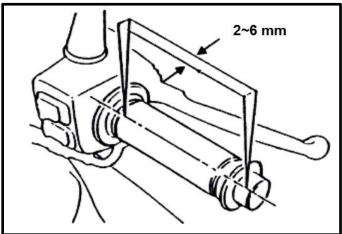

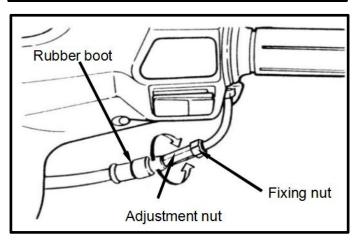

Primary adjustment is conducted from button side. Loosen fixing nut, and adjust by turning the adjustment nut.

Tighten the fixing nut, and check acceleration operation condition.

△Caution

- When always riding in rainy area or full throttle position, maintenance period must be shorted.
- The deposits can be seen in the transparent section of draining hose.

∆Caution

• Checks and adjustment must be performed when engine is cold (below 35℃).

Remove luggage box and front center cover.

Remove the left body cover & left side cover.

Remove cylinder head cap.


Remove the ignition timing check hole on the cooling fan cover.


With "T" type wrench, turn crankshaft in clockwise motion so that mark ("T") on the generator flywheel aligns with the mark on the crankshaft, and camshaft is at TDC position also as same as level of cylinder head top-end.


A single hole on camshaft


△Caution

 The crankshaft can not be rotated in counter-clockwise to prevent from damage so that valve clearance can not be measured.

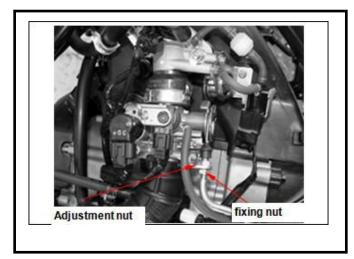

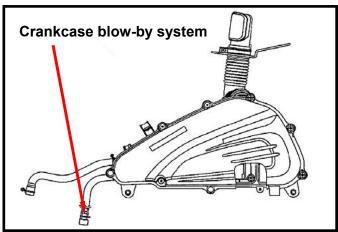

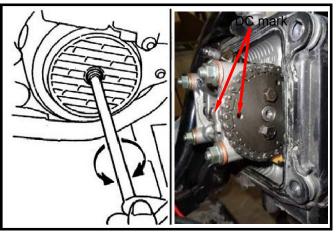

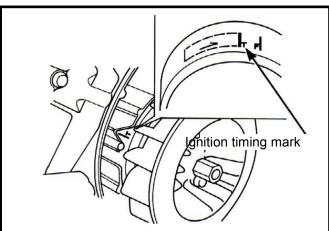

VALVE CLEARANCE INSPECTION AND ADJUSTMENT


Check & adjust valve clearance with feeler gauge.

Valve clearance (IN/EX):

0.12±0.02 mm/0.12±0.02 mm

△Caution

 It has to make sure that valve-rocker arm is be adjusted to standard level when adjusting it, and re-check the valve clearance after tightened the fixing nut.

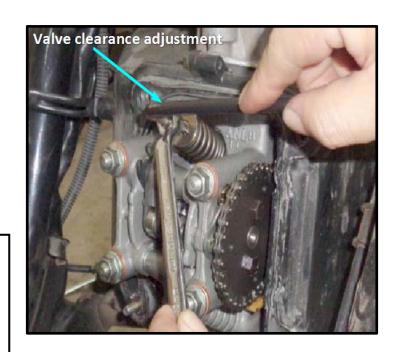

△Caution

- Ignition system is set by manufacturer so it can not be adjusted.
- Ignition timing check procedure is for checking whether function is in normal or not.

Remove right side cover.Remove ignition timing hole cap located on the cooling fan cap, or remove the cooling fan cap.

Check ignition timing with ignition light. Start engine and set engine idle speed in 1800 rpm, and if the mark aligns with the "F", then it means that ignition timing is correct.

Increase engine speed to 5000 rpm to check ignition timing advance.

If the detent aligns with advance mark "II", then it means ignition timing advance is in functional. If not, check ECU set, pulse flywheel, and pulse generator.

Replace these components if malfunction of these parts are found.

SPARK PLUG

Appointed spark plug: CR7HSA

Remove luggage box. Remove body side cover.

Remove front center cover.

Remove spark plug cap.

Clean dirt around the spark plug hole.

Remove spark plug.

Measure spark plug gap.


Spark plug gap: 0.6~0.7 mm


Carefully bend ground electrode of the plug to adjust the gap if necessary.

Screw the park plug into the plug hole with hands, then tighten the plug with a wrench to prevent from damaging the spark plug's thread.


Torque value: 1.0~1.2 kgf-m

Connect spark plug cap

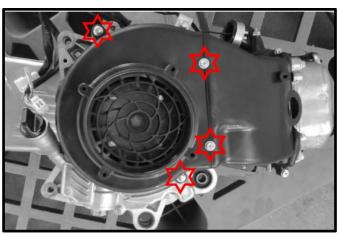

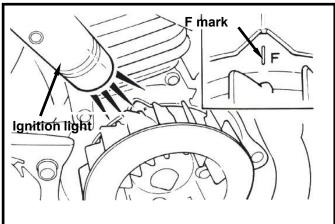



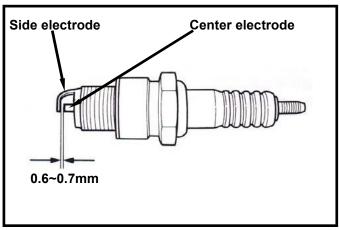

CYLINDER COPMRESSION PRESSURE

Warn up engine and then turnoff the engine. Open the seat. Remove the luggage box.

Remove spark plug cap and spark plug. Install compression gauge.

Full open the throttle valve, and rotate the engine by means of stepping the

kick-starting lever.

△Caution

- Rotate the engine until the reading in the gauge no more increasing.
- Usually, the highest pressure reading will be obtained in 4~7 seconds by electric start

Compression pressure: 10.2±0.2 Kg/cm² Check following items if the pressure is too low:

- Incorrect valve clearance
- Valve leaking
- Cylinder head leaking, piston, piston ring and cylinder worn out If the pressure is too high, it means carbon deposits in combustion chamber or piston head.

DRIVING SYSTEM DRIVING BELT

Remove left side cover.

Remove mounting bolt located under air cleaner.

Remove 9 bolts of the engine left crankcase.

Remove the left crankcase cover.

Check if the belt is crack or worn out. Replace the belt if necessary or in accord with the periodical maintenance schedule to replace it.


Width limit: above 17.5 mm Clutch pad


Start the motorcycle and gradually increase throttle valve openness to check clutch pad operation.


If the motorcycle moves with shaking, then check its

If the motorcycle moves with shaking, then check its clutch pad for wearing. Replace it if necessary.



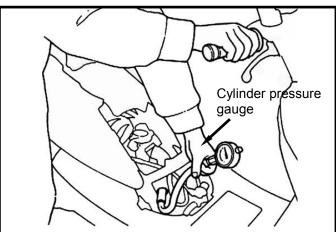

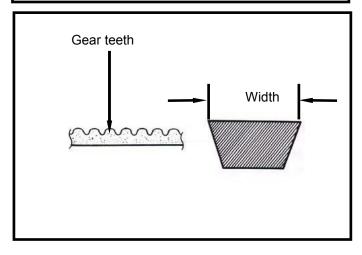

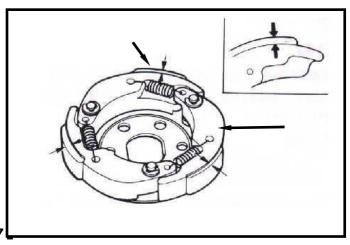

STEERING SYSTEM

△Caution

 Check all wires and cables if they are interfered with the rotation of steering handle har

Lift the front wheel out of ground.

Turn handle from right to left and check if turning is smoothly.

If handle turning is uneven and bending, or the handle can be operated in vertical direction, then adjust the handle top bearing.

SUSPENSION SYSTEM

△Caution

- Do not ride the motorcycle with poor shock absorber.
- Looseness, wear or damage shock absorber will make poor stability and drivability.



Hold front brake lever and press down the front shock absorber for several times to check its operation.

Hold front brake lever and push forward the front shock absorber for several times to check its locking status.

Check if it is scratched or leaking. Replace damaged and non-repairable components.

Tighten all nuts and bolts.

Rear Shock absorber

Press down the rear shock absorber for several times to check its operation.

Check if it is scratched or leaking. Replace damaged and non-repairable components.

Park the motorcycle with main stand.


Start engine and let the rear wheel rotate after increased engine rpm.


Check engine for any parts loose or shaking.

Also check the engine suspension bushing for wear out.

Replace the bushing if worn out.

Tighten all nuts and bolts.

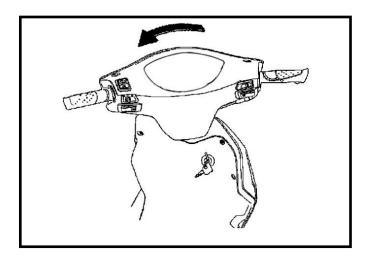

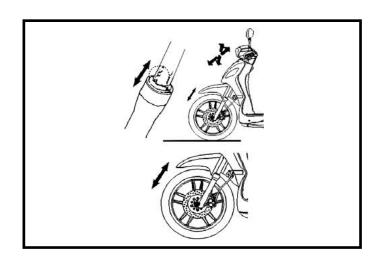



FRONT DISC BRAKE SYSTEM BRAKE SYSTEM HOSE

Make sure the brake hoses for corrosion or leaking oil, and also check brake system for leaking.

BRAKE FLUID

Check brake fluid level in the brake fluid reservoir. If the level is lower than the LOWER limit, add brake fluid to UPPER limit. Also check brake system for leaking if low brake level found.

△Caution

- In order to maintain brake fluid in the reservoir in horizontal position, do not remove the cap until handle bar stop.
- Do not operate the brake lever after the cap had been removed. Otherwise, the brake fluid will spread out if operated the lever.
- Do not mix non-compatible brake fluid together.

Tighten the drain valve, and add brake fluid. Place the diaphragm in.


Operate the brake lever so that brake fluid contents inside the brake system hoses.

AIR BLEED OPERATION


Connect a transparent hose to draining valve. Hold the brake lever and open air bleeding valve. Perform this operation alternative until there is no air inside the brake system hoses.


△Caution

• Before closing the air bleed valve, do not release the brake lever.

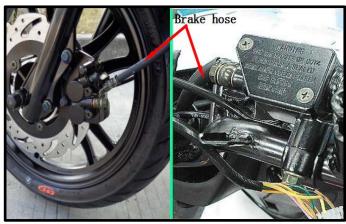



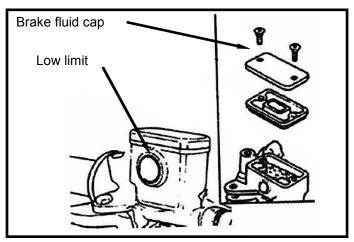

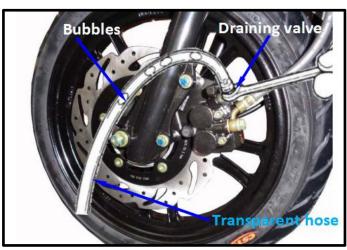

2-12 MAINTENANCE INFORMATION

ADDED BRAKE FLUID

Add brake fluid to UPPER limit lever.
Recommended brake fluid: DOT3 or DOT4 WELL
RUN brake fluid.

△Caution

 Never mix or use dirty brake fluid to prevent from damage brake system or reducing brake performance.

BRAKE LINING WEAR

The indent mark on brake lining is the wear limitation. Replace the brake lining if the wear limit mark closed to the edge of brake disc.

Remove the brake clipper bolt, and take out the clipper.

△Caution

 It is not necessary to remove brake hose when replacing the brake lining.

Pry out the brake lining with a flat driver if lining be clipped.


ACaution


 Do not operate the brake lever after the clipper removed to avoid clipping the brake lining.


Remove brake lining bolt. Take out the lining.

△Caution

 In order to maintain brake power balance, the brake lining must be replaced with one set.

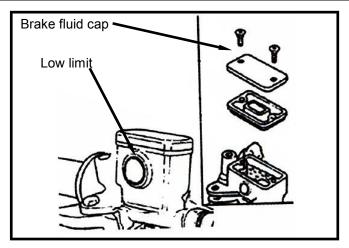

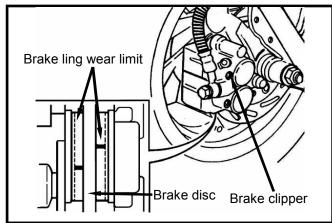

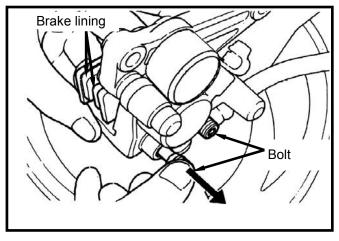




BRAKE CONFIRMATION

Check the wearing terrain on caliper pad, and replace the pad if friction surface reach the sign "A" of wear.

Limit for use: friction disc 5.0mm brake disc 3.0mm

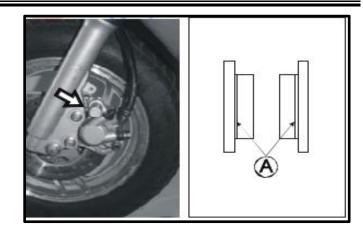

REAR BRAKE

Brake Free Play:


Measure free play of rear brake level at the end of the lever.

Free play: 10-20 mm


△Caution

After brake adjustment, it has to check the brake operation to make sure the front and rear wheel can be braked.

Periodically check the brake lever free play and, if necessary, adjust it as fol- lows. To increase the brake lever free play, turn the adjusting nut at the brakeshoe plate in direction (A). To decrease the brake lever free play, turn the ad-justing nut in direction (B).

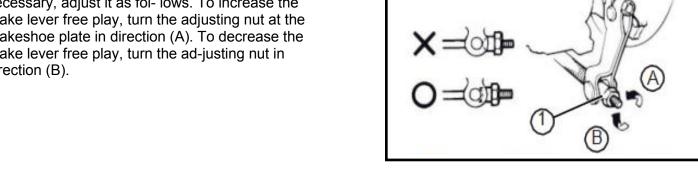


Always check and adjust the brake lever before riding. To check the bra-ke, check the position of the adjustab- le nut if the nut position reach to the end, have a dealer to replace the brake shoes as a set.

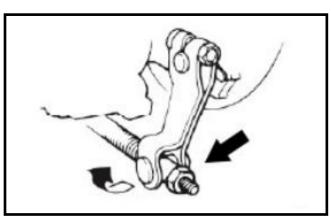

BRAKE LIGHT SWITCH

The brake light switch is to lit up brake light as brake applied.

Make sure that electrical starter can be operated only under brake applying.

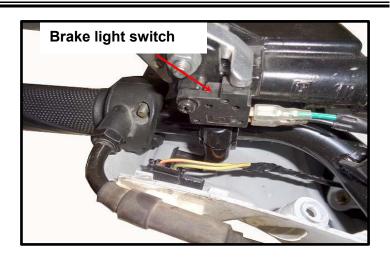

WHEEL/TIRE

Check if both front and rear tire pressure are within

△Caution

 Tire pressure check should be done as cold tire.

Appointed tire pressure

Tire size		Front tire	Rear tire
Tire pressure	Load for single	225kPa	225kPa
as cold tire (Kg/cm²)	Load for two persons	225kPa	225kPa

Appointed Tire

Front/Rear wheel: 110/70-12/120/70-12

Check if tire surface is ticked with nails, stones or other materials.

Check if tire surface or wall for crack or damaged, and replace it if necessary. The tire tread depth can be checked by visual inspection or depth gauge. Replace the tire if tire tread dent or unusual wearing out.


The tire should be replaced if the wear limit mark (\triangle) is in visible.


Measure tire thread depth from tire center surface.


Replace the tire if the depth is not come with

△Caution

• The wear limit marks (\triangle) are located around the tire wall even for inspection.

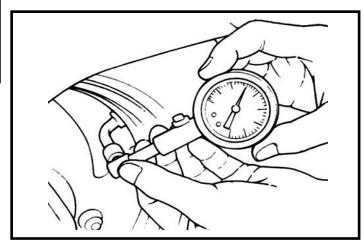

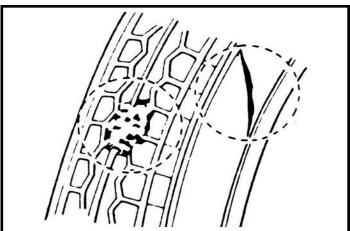

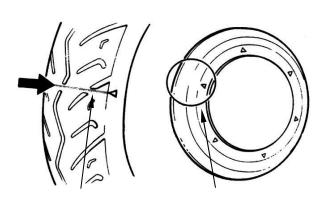

BATTERY

Battery Removal

Remove the 2 screws on the floor panel. Remove battery cap. (2 nuts)

Battery cables removal:


- 1.At first, remove the negative "-" cable.
- 2. Then, remove the positive "+" cable.


Remove the battery.

If there is some rust on battery posts, clean it with

△Caution

- If there is rust on the posts very serious, spray some hot water on the posts. Then, clean it with steel brush so that can remove rust for more easily.
- Apply some grease on the posts after rust removed to prevent from rust again.

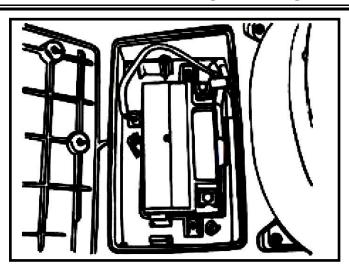

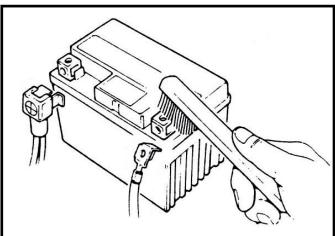


3.LUBRICATION SYSTEM

N Tr		N TO	
)N'	I Hi	NI	

MECHANISM DIAGRAM	
OPERATIONAL PRECAUTIONS ENGINE OIL	
CLEANING ENGINE OIL STRAINER	
OIL PUMP	
GEAR OIL	

MECHANISM DIAGRAM

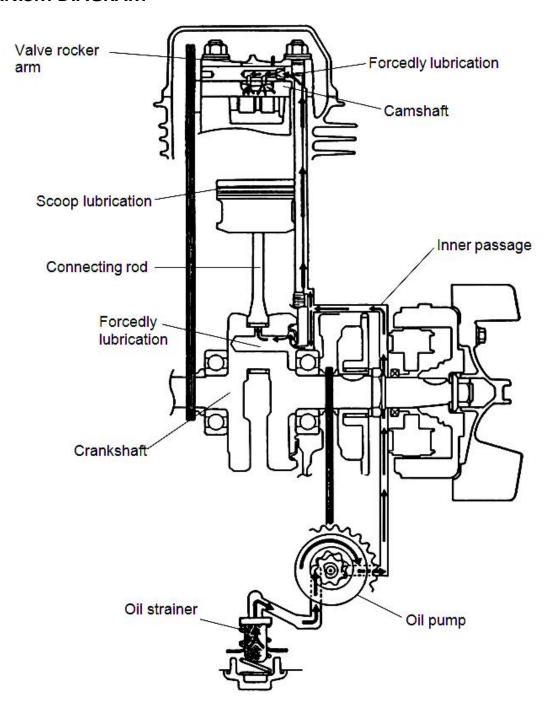

OPERATIONAL PRECAUTIONS

General Information

 This chapter contains maintenance operations for the engine oil pump, engine oil and gear oil.


Specifications

Engine oil quantity Disassembly 0.7L. Replacement 0.6L.

Oil viscosity SG or SAE 10W-40 or equivalent Gear Oil Capacity Disassembly 0.14L.

Replacement 0.13L.

Oil viscosity of gear oil SAE 85W-90

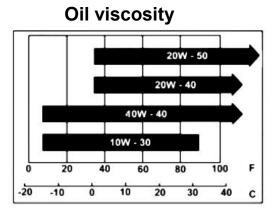

unit: mm

	Items	Standard	Limit
	Inner rotor clearance	-	0.12
	Clearance between outer rotor and		
	body	-	0.12
Oil pump	Clearance between rotor side and body	0.05~0.10	0.20

Torque value

- Engine oil drain plug 3.5~4.5kgf-m
- Engine oil screen cover 1.0~2.0kgf-m
- Gear oil drain bolt 1.0~1.5kgf-m
- Gear oil filling bolt 1.0~1.5kgf-m
- Oil pump drive sprocket nut 0.8~1.2kgf-m

TROUBLE DIAGNOSIS Dirty oil

- No oil change in periodical
- Cylinder head gasket damage
- Piston ring worn out

Low engine oil level

- Oil leaking
- Valve guide or seat worn out
- Piston ring worn out
- Low Oil Pressure

Low engine oil level

- Clogged in oil strainer, circuits or pipes
- Oil pump damage

ENGINE OIL

Turn off engine, and park the motorcycle in flat ground with main stand.

Check oil level with oil dipstick after 3-5 minutes.

Do not rotate the dipstick into engine as checking.

If oil level is nearly low level, fill out recommended oil to upper level.

Oil Replacement

⚠ Caution

• Drain oil as engine warmed up so that make sure oil can be drained smoothly and completely.

Place an oil pan under the motorcycle, and remove oil strainer cap.

Make sure if the aluminum washer of the draining bolt is damaged. If so, replace it with new one.

Install the oil drain plug and tighten it.

Torque value: 3.5~4.5 kgf-m

CLEANING ENGINE OIL STRAINER

Remove the oil strainer cap. Remove oil strainer and spring.

Clean oil strainer (recommended using compressed air to clean dirty foreign). Check if the strainer and O-ring of the oil strainer are broken. Replace with new one if found.


Install the oil strainer and spring.
Install the oil strainer cap and tighten it.

Torque value: 1.0~2.0 kgf-m

Fill out oil to the oil filler (Oil viscosity SG or SAE 10W-40).

Engine oil quantity: Replacement 0.6L



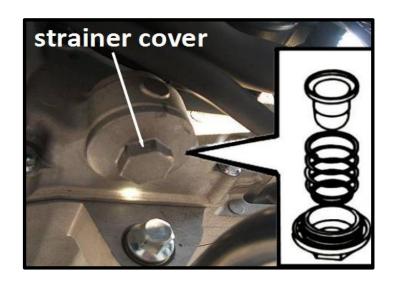


OIL PUMP Oil Pump Removal

Remove the alternator (refer to chapter 10). Remove the engine right crankcase cover. Remove the one-way clutch and starting drive gear (1 nut).


Make sure that the pump axle can be rotated freely.

Remove the oil pump cover (2 bolts), Remove the oil pump fixing flat screw. Remove oil pump body bolts (2 bolts).

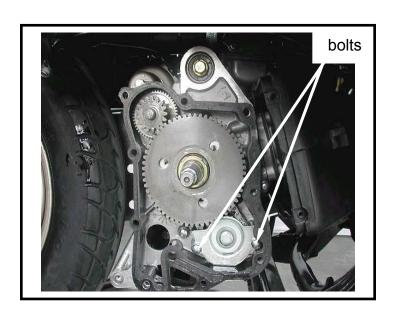

Oil Pump Disassembly


Remove the screw on oil pump cover. Disassemble the oil pump as illustration shown.

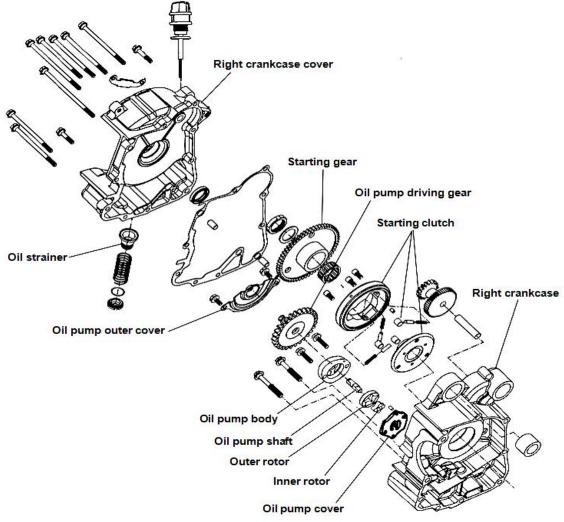

Oil Pump Inspection

Check the clearance between oil pump body and outer rotor.

Limit: below 0.12 mm

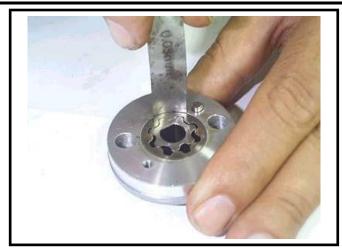


Check clearance between inner and outer rotors.

Limit: below 0.12 mm



Check clearance between rotor side face and pump body.

Limit: below 2.0 mm

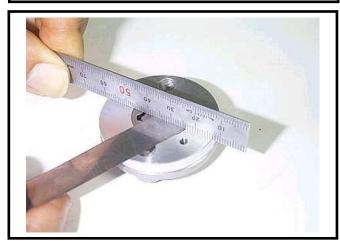

Oil Pump Re-assembly

Install inner and outer rotors into the pump body.


Align the indent on driving shaft with that of inner rotor. Install the driving shaft. Install the oil pump cover and fixing pin properly and then tighten screw. (1 screw)




3-6 LUBRICATION SYSTEM

Oil Pump Installation


Install the oil pump (2 bolts).

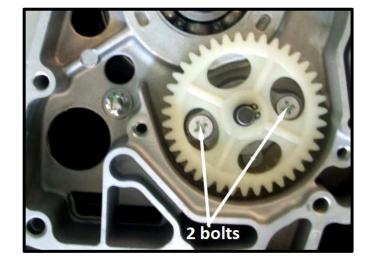

Install oil pump outer cover (2 bolts).

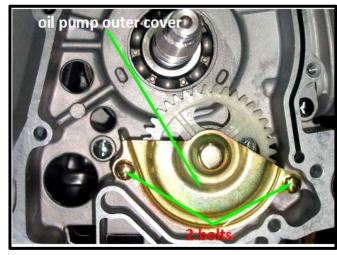

Install the starting gear and the alternator. (Refer to chapter 10)

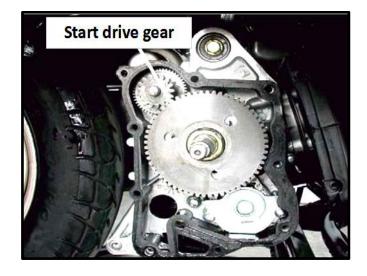

GEAR OIL

Oil Level Inspection

Park the motorcycle on flat ground with main stand.

Turn off engine and remove both engine oil filling bolt and oil draining bolt.

Remove gear oil filling hole bolt and place a measurement cup under the draining plug. Remove the oil draining plug and the pour gear oil into the measurement cup.

Measure the gear oil quantity if within standard value.

Add specified gear oil if the oil level too low. Standard quantity: 0.14L. Replacement: 0.13L.



Remove the gear oil filling hole bolt and its draining plug and then drain oil completely. Install the draining plug and tighten it. (Make sure if the plug washer is damaged. If so, replace it with new one.)


Torque Value: 1.0~1.5 kgf-m

Add new gear oil (0.14L.) from the gear oil filling hole and then install the gear oil filling hole bolt after added oil. And then, tighten the bolt.

Torque Value: 1.0~1.5 kgf-m

※Recommended to apply with GEAR OIL (SAE 85W-90)


Start engine and run it for 2~3 minutes. Turn off engine and check if oil leaking.

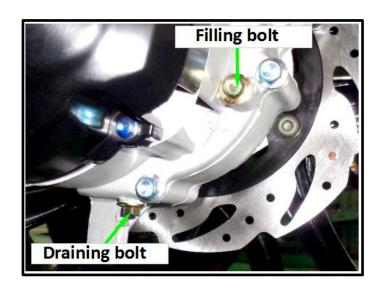



4. Fuel Injection System

EFI System Diagram

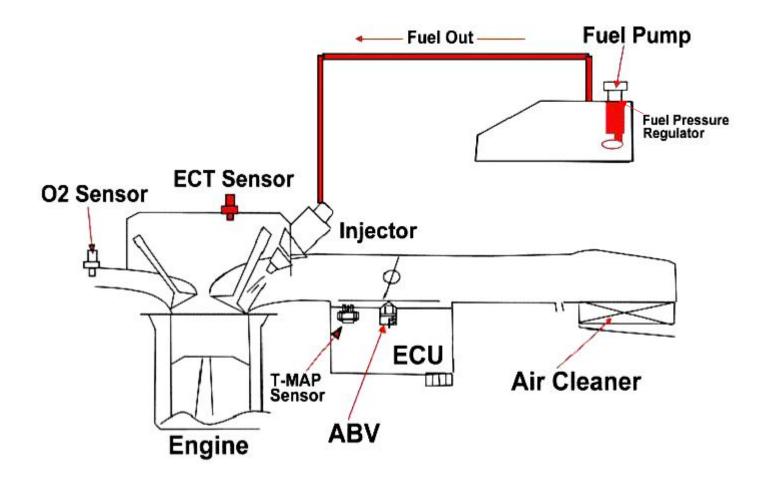

EFi System Introduction

Based on 4-stroke SOHC engine, displacement 50c.c. electronically controlled fuel injection. The O2 sensor enhances the efficiency of the catalytic converter, by dynamically controlling the Fuel/Air ratio.

Electronic Fuel Injection Device Fuel supply devices: fuel tank, fuel pump, fuel filter, and fuel pressure regulator. Fuel control devices: fuel injector, and ECU.

The fuel is pumped from electrical fuel pump in the fuel tank, to the injector on the inlet pipe.

The fuel pressure regulator keeps the pressure around 2.5 Bar. The signals from ECU enable the injector to spray fuel into the combustion chamber once each two crankshaft-revolutions. The excessive fuel flows back to the fuel tank through the fuel pressure regulator. Fuel pump is placed inside the fuel tank to reduce the working noise, and the complicity of fuel pipes.

Electrically controlled ignition and injection system effectively reduce fuel consumption rate and pollution.

In traditional gasoline engine, carburetor supplies the fuel. The process is done by the engine vacuum, and the negative pressure in the carburetor mixes fuel with air. Under this condition, three major processes are done simultaneously in the carburetor: 1. air quantity measurement, the determination of fuel quantity, the mix of

fuel and air.


Electronic fuel injection system separates the three major processes into three different devices:

- 1. T-MAP sensor measures the air quantity and temperature and sends the signal to ECU as a reference. 2. ECU determines the amount of fuel to be injected, according to the default A/F rate.
- 3. ECU enables the injector to spray appropriate fuel amount. The independence of these three functions will raise the accuracy of the whole process.


EFi engine uses computer-programmed fuel injection, the main features are:


- 1. The quantity of fuel injected is determined according to the condition of the engine. The engine RPM, and throttle position determines the fuel quantity and injection time-length.
- 2. The quantity of fuel injection, and the determination of injection time length, are all controlled by 16-bit microcomputer.
- 3. The fuel pressure regulator maintains a 2.5 Bar pressure difference between inlet pipe and fuel pipe, raising the accuracy of fuel injection.
- 4.By measuring the air pressure of inlet pipe, this system gives the vehicle better accommodation to the environment.
- 5. Air by-pass system supplies fuel and air to stabilize the idle running, and cold starting.

EFI System Components

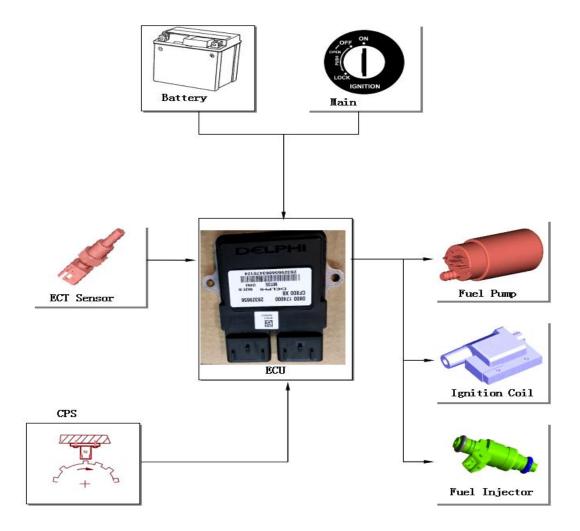

EFI System Location

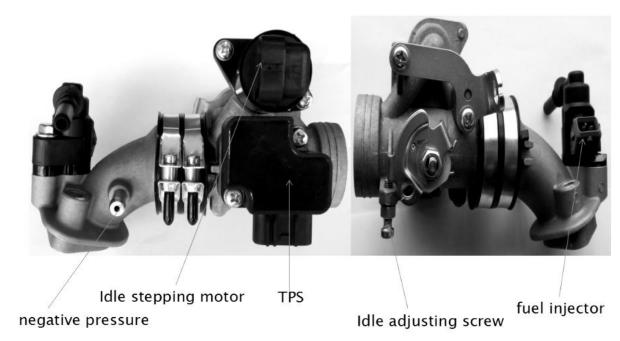

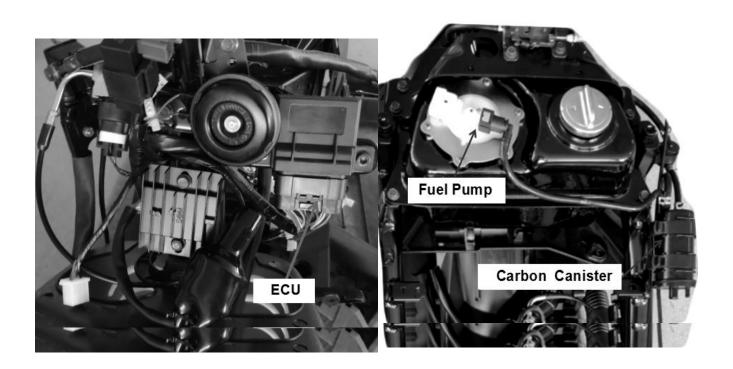

4-5 Fuel Injection System

Precautions in Operation General information Warning

△Caution

Fuel pressure release procedure:

Disconnect the fuel pump relay, switch on and press the start switch for a few seconds to crank the engine.

Specification

Item			
Idle speed	1800±150 rpm		
Throttle grip free play	2~6 mm		
Fuel pressure 2.5 bar			

Torque value

Engine temperature sensor: 0.74~0.88 kgf-m O2 sensor: 3.6~4.6 kgf-m

Special tools

Injection system diagnostic tool

EFI SYSTEM

1. Introduction

Because of the EFI, there are many possibilities for the engine issues. In other word, one issue may be caused by the mechanical problem or the EFI components. And the diagnostic tools cannot 100% indicate the root cause. So this manual shows the way to dig out the root cause with the help of the diagnostic tools.

2. Precautions

- 1) Do not disassemble the components arbitrarily. It may damage the components if the water or the oil seep into the parts.
 - 2) Turn the ignition off, before connect or disconnect the connectors.
 - 3) Make sure the temperature of the ECU is below 80°C.
- 4) The fuel pressure is much high (about 350kPa or 250kPa), so please do not disassemble the fuel pipe arbitrarily. If have to, please release the pressure at first, and make sure the operation is delivered in the ventilated environment by the professional maintenance persons.
 - 5) When disassemble the fuel pump from the pump, make sure the power is off. Or it may cause the fire.
- 6) The fuel pump cannot work in air or water, it will shorten the service life. And the positive and negative connectors cannot be exchanged.
- 7) The ignition system check only could be delivered when it is necessary. When check the spark plug out of the engine, if start the engine, please make sure the throttle is closed. Or too much unburned gasoline coming to the catalyst may damage the catalyst.
 - 8) The idle speed is adjusted by the ECU. The idle pintle is not allowed to adjust.
 - 9) The Positive and Negative of the battery cannot be reversed. It may damage the EFI components.
 - 10) It is forbidden to remove the battery when the engine is running.
 - 11) Cannot measure the signal by pierce the harness.

3. Tools

- 1) Multimeter: Measure the voltage, the resistance and the harness connection.
- 2) Diagnostic tool: reading the malfcode, and engine parameters.
- 3) Oil pressure garage: Measure the fuel pressure.
- 4) Cylinder pressure garage: Measure the pressure garage.

4. Maintenance depending on the malfcode

Description

1) If the issure cannot repeat, the issure analysis may be wrong.

4-7 Fuel Injection System

- 2) The multimeter below means the digital type. Pointer-type is forbidden.
- 3) If the malfcode shows the voltage is low, it means maybe the wire is short to ground. If the malfcode shows the voltage is high, it means maybe the wire is short to battery. If the malfcode shows the components signal abnormal, it means the wire is open or short to other wires.

Diagnostic help:

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	Check the data of 'BARO'. Make sure whether it is about	Yes	Step 5
	100kPa (depending on where you are)	No	next
	Remove the connector, and use the multimeter to check	Yes	Step 5
3	whether the voltage between pin B and D is about 5V.	No	Next
	Check whether the following pins is short to battery: pin 31,	Yes	Check the harness
4	pin 28, pin 23 of the ECU and pin A, D, B of the connector.	No	Next
	Crank the engine to stay at idle. Check whether the	Yes	Diagnostic help
5	MAP is about 30-50kPa. Then go to WOT, check whether the MAP goes to about 90kPa.	No	Change the sensor

- 1) If the malfcode shows again after clearance, check whether the connector is connected well.
- 2) Do not ignore the affect of the engine maintenance situation, the cylinder pressure, and the mechanical ignition timing.
- 3) Change another ECU to do the test. If the malfcode disappears, the root cause is the ECU. If the malfcode is still there, then use the old ECU to do the test.

4) Malfcode: P0263

5) Information: MAP Circuit Low Voltage or Open

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	Check the data of 'BARO'. Make sure whether it is about	Yes	Step 5
2	100kPa (depending on where you are)	No	next

Fuel Injection System 4-8

3	Remove the connector, and use the multimeter to check	Yes	Step 5
3	whether the voltage between pin B and D is about 5V.	No	Next
,	Check whether the following pins is short to ground: pin 31,	Yes	Check the harness
4	pin 28, pin 23 of the ECU and pin A, D, B of the connector.	No	Next
	Crank the engine to stay at idle. Check whether	Yes	Diagnostic help
5	the MAP is about 30-50kPa. Then go to WOT,	No	Change the source
	check whether the MAP goes to about 90kPa.	No	Change the sensor

Malfcode: P0264

Information: MAP Circuit High Voltage

Malfcode: P0274

Information: IAT Circuit Low Voltage

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		NEXT STEP
2	check whether the data of 'intake air temperature' equals to	Yes	Step 5
2	the real intake air temperature.	No	Next
	Remove the connector, and use the multimeter to check	Yes	Step 5
3	whether the resistance between pin B and D is reasonable	No	Next
	according to the temperature.	No	Next
4	Remove the connector and check whether the voltage	Yes	Next
4	between pin B and D is about 5V.	No	Check harness
5	Check whether the following pins are short battery:pin	Yes	Change the harness
5	33,pin 28 of the ECU and pin C, D of the connector.	No	Next
6	Crank the engine and stay idle. Check whether the 'intake air	Yes	Help
6	temperature' goes up when the engine temperature goes up.	No	Change the sensor.

Malfcode: P0275

Information: IAT Circuit High Voltage

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	check whether the data of 'intake air temperature' equals to	Voc	Chan I
2	the real intake air temperature.	Yes	Step 5

4-9 Fuel Injection System

		No	Next
	Remove the connector, and use the multimeter to check	Yes	Step 5
3	whether the resistance between pin B and D is reasonable	No	Next
	according to the temperature.	110	None
4	Remove the connector and check whether the voltage	Yes	Next
4	between pin B and D is about 5V.	No	Check harness
5	Check whether the following pins are short to ground or open:	Yes	Change the harness
5	pin 33,pin 28 of the ECU and pin C, D of the connector.	No	Next
(Crank the engine and stay idle. Check whether the 'intake air	Yes	Help
6	temperature' goes up when the engine temperature goes up.	No	Change the sensor.

Malfcode: P0279

Information: Coolant/Oil Temperature Sensor Circuit Low Voltage

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	check whether the data of 'engine temperature' equals to the	Yes	Step 5
	real temperature.	No	Next
	Remove the connector and use the multimeter to check	Yes	Step 5
3	whether the resistance between pin A and C of the sensor is	No	Next
	reasonable according to the temperature.	NO	Next
4	Use the multimeter to measure whether the voltage between	Yes	Next
4	A and C is about 5V.	No	Check the harness
5	check whether the following pins are short to ground or open:	Yes	Harness issue
3	pin 28,pin 15 of the ECU and pin C and D of the sensor.	No	Next
6	Use multimeter to check whether the voltage between pin A	Yes	Help
0	and B is about 5V.	No	Step 5

Malfcode: P0305/P0306

Information: O2S 1 Circuit Low/High Voltage

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
	Use multimeter to check whether the connection between pin	Yes	Harness issue
2	B of the oxygen sensor and pin 16 of the ECU is open, and	No	Nort
	whether the pin B of sensor is short to pin A.	No	Next
	Crank the engine and stay idle. When the engine gets warm,	Yes	Help
3	use multimeter to check whether the voltage between pin A	Na	N
	and B keeps jumping between 100-900mV.	No	Next
	A、emission pipe: block/leakage or not.	Yes	Engine maintenance
4	B、injector: leakage or not		
4	C、fuel pressure too big or not	No	Change sensor
	D、 valve clearance is to small or not		

Malfcode: P0609

Information: Injector 1 Circuit Malfunction

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	Remove the connector of injector 1, use multimeter to check	Yes	Step 4
	whether the voltage of Pin A is about 12V.	No	Next
3	Check whether the connection between pin A and the main	Yes	Harness issue
3	power relay is short to ground or open.	No	Next
4	Use multimeter to measure whether the resistance between	No	Change the injector
4	pin A and B of the injector is about 10-14 Ω @ $20^{\circ}\!$	Yes	next
5	Use the multimeter to check whether the voltage of Pin B is	Yes	Help
3	about 12V.	No	Next
	Check whether the connection between pin B of the injector	Yes	Harness issue
6	and 25 of the ECU is open or short to battery/ground.	No	Help

4-11 Fuel Injection System

Malfcode: P0560/P0562

Information: FPR Coil Circuit Low/High Voltage or Open

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition off		next
2	Wait about 30s. Remove the fuel pump relay, ignition on.	Yes	Change the pump
Δ	Check whether voltage of the relay feeder ear is about 12V	No	Next
0		Yes	Harness issue
3	Check whether the feeder ear is short to ground or open.	No	Help

Malfcode: P8960

Information: Cylinder 1 Ignition Coil Malfunction

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition on.		next
2	Remove the connector and check whether the voltage of pin +	Yes	Step 4
2	is about 12V.	No	Next
2	Check whether the connection of the pin + and main power	Yes	Harness issue
3	relay is open or short to ground.	No	Next
4	Use multimeter to check whether the resistance of the two coil	Yes	Change coil
4	pins is $0.5\text{-}0.65\Omega$ @ $20^\circ\mathbb{C}$	No	Next
F	Use multimeter to check whether the voltage of pin B is about	Yes	Help
5	12V.	No	Next
	Check whether the connection of pin 2 of the coil and pin 1 of	Yes	Harness issue
6	ECU is open or short to battery/ground.	No	Help

Malfcode: P1285

Information: Idle Speed Control Error

ITEM	OPERATION	RESULT	NEXT STEP
1	Connect the diagnostic tool, and ignition off		next
2	Remove the connector. Use multimeter to check whether the	Yes	Next
2	2 resistance between pin A and pin D, pin B and pin C is about $53\pm5.3\Omega$	No	Change stepper motor
3	Check whether the 4 wires are short to battery/ground or	Yes	Harness issue
3	open.	No	Help

5. Maintenance depending on the performance.

Before issue analysis, please check:

- 1) The MIL works well.
- 2) Clear the history malfcode.
- 3) When the malfcode comes again, note the conditions.

Check the appearance

- 1) Whether there is leakage of the fuel pipe or not.
- 2) Whether there is block/leakage or damage of the intake pipe.
- 3) Aging level of the high-voltage cable.
- 4) Whether the ground connection is strong enough.
- 5) All the connectors connected well.

Note: if any item above exists, please do the fix it at first before issue analysis.

Diagnostic Help:

- 1) Make sure there is no any issue record of the engine.
- 2) Make sure the issue could repeat.
- 3) Have checked follow the instructions above and no cause found.
- 4) Do not ignore the maintenance situation, cylinder pressure, mechanical timing and fuel quality.
- 5) Change the ECU and repeat the test, if the issue is gone, then the root cause is the ECU. Or change the old one back to check the root cause.

6) Engine cannot start

ITEM	OPERATION	RESULT	NEXT STEP
1	Check whether the voltage of the battery is	Yes	Next
1	around 8-12V.	No	Change the battery.
2	Crank the engine, and check whether the voltage is	Yes	Next
2	above 8V.	No	Change the battery.
2	Check whether the start motor working well or	Yes	Next
3	not.	No	Change the start motor.
4	If the issue only occurs in winter, check the oil and	Yes	Change the oil

4-13 Fuel Injection System

	gear box oil.	No	Next
_	Check whether the engine rotation resistance is	Yes	Check the engine
3	too big or not.	No	Help

ITEM	OPERATION	RESULT	NEXT STEP
1	Check weather the fuel pump pressure is about	Yes	Next
	250kPa at idle.	No	Check the pump.
2	Check whether the 'RMP' data on the diagnostic tool	Yes	Next
	shows the real engine RPM.	No	Check the crank sensor.
3	Pull out the spark plug, check whether the spark	Yes	Next
	over is normal.	No	Check the ignition system
4	Check whether the cylinder pressure is normal.	Yes	Engine is good.
		No	Check the engine

ITEM	OPERATION	RESULT	NEXT STEP
1	Check whether the fuel pump pressure is about	Yes	Next
1	250kPa at idle.	No	Check the pump.
2	Pull out the spark plug, check whether the spark	Yes	Next
	over is normal.	No	Check the ignition system

7) Start Difficult.

2	Remove the connector of the engine temperature	Yes	Check the engine temperature sensor
3	sensor, and check whether the engine start well.	No	Next
4	With a little bigger throttle, check whether the engine starts well.	Yes	Clean the throttle body and bypass
			channel.
		No	Next
_	Pull out the injector, and crank the engine. Check	Yes	Next
5	whether the injection is normal.	No	Clean or change the injector.

Fuel Injection System 4-14

6	6 Pull out the spark plug, check whether it is wet or not	Yes	dry the plug and combustion chamber.
		No	Next
7 (1 1 1 1 1 1 1		Yes	Engine is good
	7 Check whether the cylinder pressure is normal or not	No	Check the engine

Unstable idle

	Ulistable fule		
ITE M	OPERATION	RESULT	NEXT STEP
1	Check whether the air filter is blocked and whether	Yes	Intake system maintenance
	the intake pipe leaks.	No	Next
2	Whether there is carbon deposit at the throttle body	Yes	Clean the TB
	and bypass channel.	No	Next
3	Check whether the IACV works well	Yes	Next
3	Check whether the IACV works well	No	Check the IACV
4	Check whether the fuel pressure is about 250kPa.	Yes	Next
4		No	Check the pump
5	Check whether the injector is blocked.	Yes	Clean or change the injector
3		No	Next
6	Make sue using the right type spark plug	Yes	Next
6		No	Change the spark plug
	Check whether the cylinder pressure is normal	Yes	Next
7		No	Check the engine
	Remove the engine temperature sensor, and check	Yes	Change the senor
8	whether the engine works well	No	Next
_		Yes	Change the sensor
9	Remove the TPS, check whether the engine works well	No	Help

4-15 Fuel Injection System

• High idle

ITEM	OPERATION	RESULT	NEXT STEP
1	Check whether the throttle cable is stuck	Yes	Adjust the cable
		No	Next
2	Check whether the idle pintle has been adjusted	Yes	Change the TB
		No	Next
3	Check whether there is any leakage of the intake	Yes	Maintenance
	pipe.	No	Next
4	Check whether the IACV works well	Yes	Next
		No	Change IACV
5	Remove the engine temperature sensor and check	Yes	Help
	whether the engine works well	No	Change the sensor

Acceleration gets worse

ITEM	OPERATION	RESULT	NEXT STEP
1	Check whether the air filter is blocked and whether	Yes	Intake system maintenance
1	the intake pipe leaks.	No	Next
2	Check whether the fuel pressure is about 250kPa.	Yes	Next
2	Check whether the fuel pressure is about 250kFa.	No	Check the pump
3	Pull out the spark plug, check whether it is wet or	Yes	dry the plug and combustion chamber.
3	not	No	Next
4	Check whether the TMAP, TPS and the connections	Yes	Next
4	works well.	No	Change the sensor or harness maintenance
F	Charles shouth a inicatou is blacked	Yes	Clean or change the injector
5	Check whether the injector is blocked.	No	Next
6	Check the type and the clearance of the spark plug.	Yes	Next
6		No	Change the spark plug
7	Check whether the cylinder pressure is normal	Yes	Next

Fuel Injection System 4-16

		No	Check the engine
8 Check	Check whether the exhaust pipe is blocked or not	No	help
0	Check whether the exhaust pipe is blocked of hot	Yes	maintenance

Backfire

ITEM	OPERATION	RESULT	NEXT STEP
1	Pull out the spark plug, check whether the spark	Yes	Next
	over is normal.	No	Check the ignition system
2	2 Check whether the timing is right No	Yes	Next
2		No	Adjust the timing
3	Check whether there is leakage of the valve	Yes	Adjust the valve
		No	Next
4	Check whether the injector is blocked.	Yes	Clean or change the injector
		No	Next
5	Check whether the oxygen sensor works well	Yes	Help
		No	Change the sensor

System or Component	DTC Number	DTC Description	Related Calibration	DTC
	P0263	IAP Circuit Low Voltage or Open	COBDM_IAP_LO	263
Intake Air Pressure	P0264	IAP Circuit High Voltage	COBDM_IAP_HI	264
Intake Air	P0274	IAT Circuit Low Voltage	COBDM_IAT_LO	274
Temperature Sensor (IAT)	P0275	IAT Circuit High Voltage or Open	COBDM_IAT_HI	275
Engine/Oil	P0279	Engine/Oil Temperature Sensor Circuit Low Voltage	COBDM_ETS_LO	279
Temperature Sensor	P0280	Engine/Oil Temperature Sensor Circuit High Voltage or Open	COBDM_ETS_HI	280
Throttle Position	P0290	TPS Circuit Low Voltage or Open	COBDM_TPS_LO	290
Sensor (TPS)	P0291	TPS Circuit High Voltage	COBDM_TPS_HI	291
Oxygen	P0305	O21S Circuit Low Voltage	COBDM_O21_LO	305
Sensor(O21S)	P0306	O21S Circuit High Voltage	COBDM_O21_HI	306

4-17 Fuel Injection System

Oxygen Sensor	P0050	O21S Heater Circuit High Voltage	COBDM_O21Heater_HI	50
Heater Circuit (OXYAHD)	P0049	O21S Heater Circuit Low Voltage or Open	COBDM_O21Heater_LO	49
	P0610	Fuel Injector Circuit High Voltage	COBDM_INJA_HI	610
Fuel Injector	P0609	IFuel Injector Circuit Low Voltage or Open	COBDM_INJA_LO	609
Fuel Pump Relay	P0560	FPR Coil Circuit Low Voltage or Open	COBDM_FPR_LO	560
(FPR)	P0562	FPR Coil Circuit High Voltage	COBDM_FPR_HI	562
Crank Angle	P0822	CAS Sensor Noisy Signal	COBDM_CAS_Noise	822
Sensing(CAS)	P0823	CAS Sensor No Signal	COBDM_CAS_Lost	823
	P8961	Ignition Coil Ignition Coil High Voltage	COBDM_IGNA_HI	8961
Ignition Coil	P8960	Ignition Coil Ignition Coil Low Voltage or Open	COBDM_IGNA_LO	8960
Idle Control System	P1285	Idle Control Speed Control Error	COBDM_ICS	1285
• • • • •	P1378	System Voltage Low	COBDM_VLT_LO	1378
System Voltage	P1379	System Voltage High	COBDM_VLT_HI	1379
MIL	P1616	MIL Control Circuits	COBDM_MIL	1616
Tachometer Circuit	P5779	Tachometer Circuit Low Voltage	COBDM_TACH_LO	5779
(TACH)	P5780	Tachometer Circuit High Voltage	COBDM_TACH_HI	5780
Vehicle Speed Sensor	P1280	VSS No Signal	KsDGDM_VSS_NoSignal	1280
Park Neutral Switch (PNSWD)	P2128	Park Neutral Switch Error	COBDM_PNSW	2128
Evaporative	P1093	EVP short to high	COBDM_EVAP_HI	1093
Emission (EVP)	P1092	EVP short to low/open	COBDM_EVAP_LO	1092
ECU Check Error	P1537	ECU diagnostic by self	COBDM_ROMChecksum	1537
	P0791	VoltageRegulator Circuit High Voltage	COBDM_FAN_1_HI	792
VoltageRegulator	P0792	VoltageRegulator Circuit Low Voltage	COBDM_FAN_1_LO	791


Fuel Injection System 4-18

Fuel Pump / Fuel Unit


Removal

Open the seat.


Remove 4 bolts in the front of the luggage box.

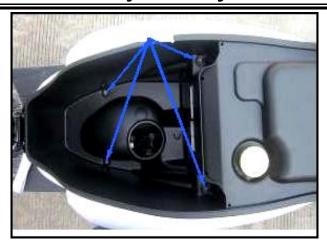


Disconnect the fuel pump couplers. Disconnect the fuel unit couplers Remove the fuel pipes.

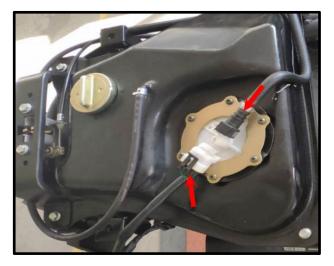

Remove the fuel pump lock bolts.

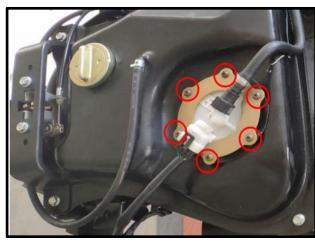


Remove the fuel pump and fuel unit.

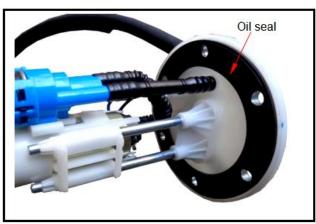

4-19 Fuel Injection System

Check if the fuel filter is contaminated or clogged. Replace it with new one if necessary.

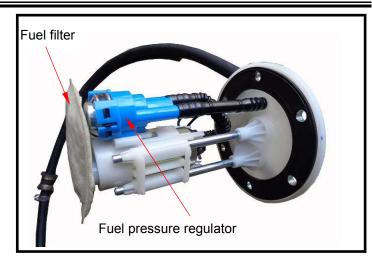

Installation

Install in the reverse order of removal.

▲ Caution

- Do not bend the fuel unit float arm
- Do not fill out too much fuel in the tank.
- Align the assembly mark when installing the fuel pump and fuel unit.
- Replace the oil seal if any damage or deformation is found.

Inspection:

Disconnect the fuel pipe from the fuel injector.


Connect the fuel pressure gauge to check the fuel pressure.

↑ Caution

- •Make sure the fuel pressure is normal (2.5 bar).
- •Always release the fuel pressure before removing the fuel pipe to prevent the fuel from splashing.

Special tool: Replace the fuel pump with new one if malfunction is confirmed.



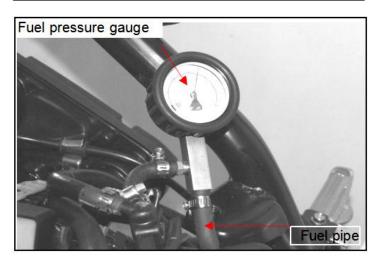

Fuel Injection System 4-20

Fuel Tank


Removal

Disconnect the fuel pump and the fuel unit coupler.

Remove fuel pipe.

Remove the fuel cut valve pipe.

Remove the fuel tank (4 lock bolts).

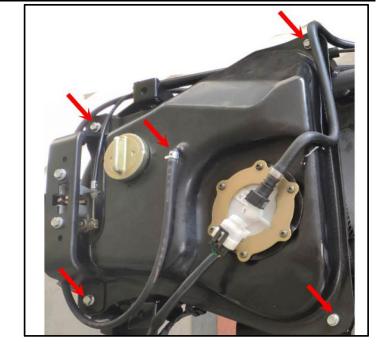

Installation Install in the reverse order of removal.


⚠ Caution

- Make sure the fuel in the tank is not too much before removing the fuel tank.
- Replace the fuel tank if there is any damage or leakage.

5. REMOVAL OF ENGINE

CONTENTS —	
MECHANISM DIAGRAM	5-1
OPERATIONAL PRECAUTIONS	5-2
ENGINE REMOVAL	5-3
REMOVAL OF ENGINE SUSPENSION BUSHING	5-6
ENGINE SUSPENSION FRAME	5-7
INSTALLATION OF ENGINE	5-8

MECHANISM DIAGRAM

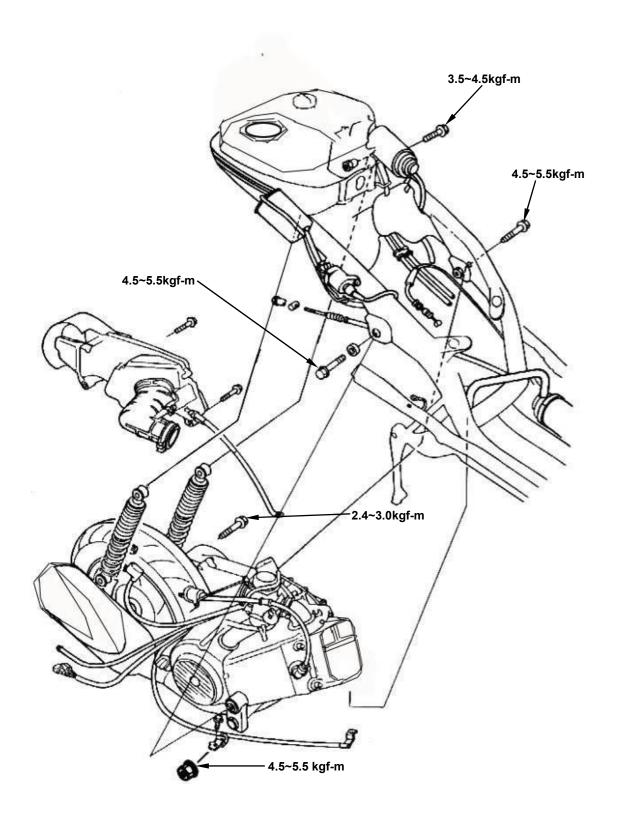

5-2 REMOVAL OF ENGINE

OPERATIONAL PRECAUTIONS

General Information

- Engine must be supported by a bracket or adjustable tool in height.
- The following parts can be serviced with the engine installed on the frame.
 - 1. Carburetor
 - 2. Driving disk, driving belt, clutch, and transporting disk
 - 3. Final reduction gear mechanism

Specification

Item		Specification
Engine Oil Conceity	Replacement	0.7L
Engine Oil Capacity	Disassemble	0.6L
Coor Oil Consoitu	Replacement	0.14L
Gear Oil Capacity	Disassemble	0.13L

Torque Values

Engine suspension bolt (frame side)	4.5~5.5kgf-m
Engine suspension nut (engine side)	4.5~5.5kgf-m
Bolt of rear shock absorber upper connection	3.5~4.5kgf-m
Bolt of rear shock absorber lower connection	2.4~3.0kgf-m

ENGINE REMOVAL


Open the seat.


Remove the rear carrier (3 bolts). Remove the luggage box assembly (4 bolts).

Remove the body cover (4 screws, 3 bolts). Remove the power connector of auto by-start


Remove the generator connector and pulse generator connector.

Remove the starter motor wire on the Starter magnetic switch.

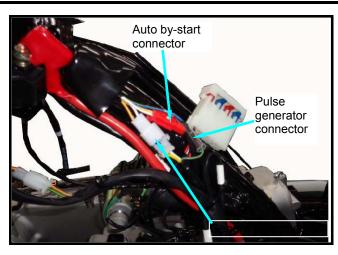

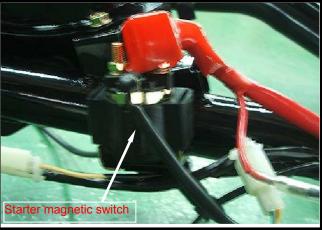


Remove the spark plug cap.

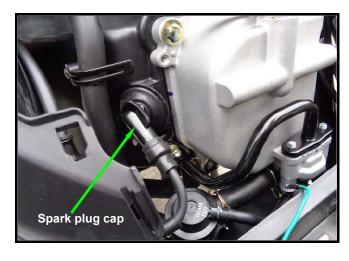


5-4 REMOVAL OF ENGINE

Remove the fuel pipe, vacuum hose, and throttle valve cable from the carburetor. Loose the strap screw of the air cleaner guide, and remove the air cleaner guide.


Remove the exhaust muffler (Bolts × 2, Cap Nuts × 2).

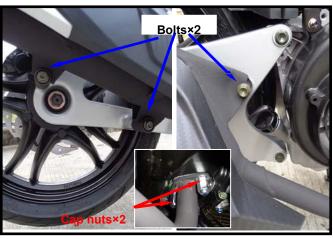

Remove the rear wheel (Nut \times 1).

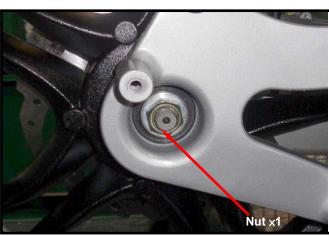

Remove the air cleaner connection bolts (2 bolts).

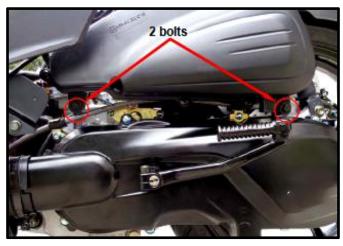

REMOVAL OF ENGINE 5-5

Remove the rear brake. Remove the rear shock absorber lower bolt.

Loose the strap screw of engine left guide, and then remove the engine left guide.


Remove the engine suspension nuts and bolts (engine side), and then remove the engine.

⚠ Caution


 With a bracket to support the engine to prevent from it damage by falling down as removing the engine.

Check if the engine suspension, rear shock absorber bushing, and cushion rubber for damage. Replace them with new ones if so.



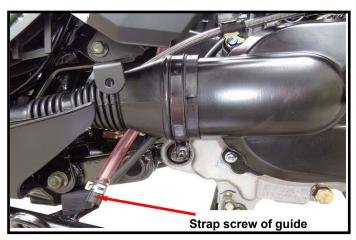



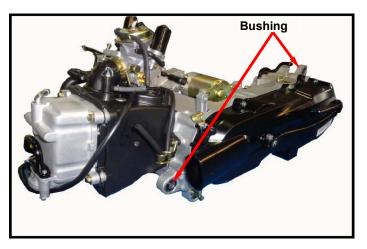

5-6 REMOVAL OF ENGINE

REMOVAL OF ENGINE SUSPENSION BUSHING

If engine suspension frame and the cushion rubber of rear shock absorber bushing damaged. Then, with the bushing remover / presser, $\Phi\,28\text{mm}\,\&\,\Phi\,20\text{mm}$, to press the bushing out, and replace it with new one.

Engine suspension bushing: **Ф28mm** Rear shock absorber bushing: **Ф20mm**


Pressing out


Place the detent section of the bushing remover toward the bushing, and drive both the pressing ring and bolt in to press the bushing out.





Pressing In Place the flat section of the remover toward the bushing, and then drive the bushing, pressing ring, and bolt in to install the bushing.

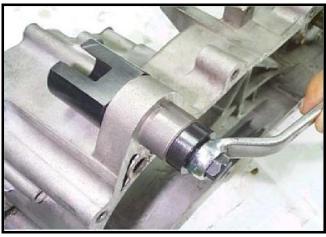

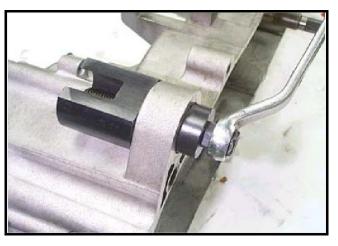


ENGINE SUSPENSION FRAME

Removal

Remove the left side bolt of engine suspension frame.


Remove the right side bolt of engine suspension frame.





Installation

Tighten the bolts and nuts of engine suspension frame.

Engine suspension frame nut: Torque Value: 4.5~5.5 kgf-m

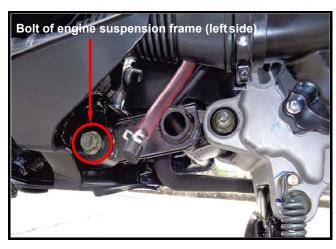

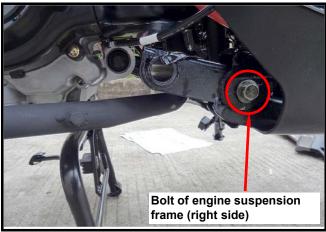

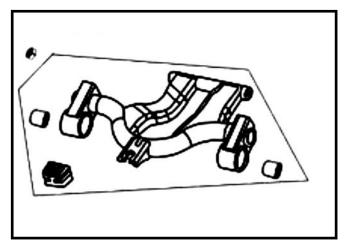

5-8 REMOVAL OF ENGINE

INSTALLATION OF ENGINE

Check if the bushings of engine suspension frame and shock absorber for damaged. If so, replace with new ones.

Install the engine according to the reversing order of removal.

⚠ Caution

- Notice both feet and hands safety for squeezing as engine installation.
- Do not bent or squeeze each wires or hose.
- Route all cables and wires in accordance with the routine layout.

Engine suspension nut: Torque Value: 4.5~5.5kgf-m


Rear shock absorber bolt:

Torque Value: Top: 3.5~4.5kgf-m

lower: 2.4~3.0kgf-m

Rear wheel axle nut:

Torque Value: 11.0~13.0kgf-m

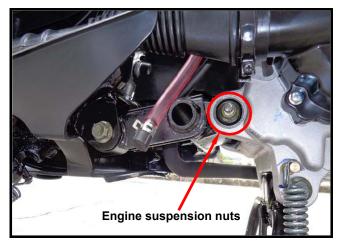






6.CYLINDER HEAD/VALVE

CONTENTS -	
MECHANISM DIAGRAM	6-1
PRECAUTIONS IN OPERATION	6-2
TROUBLE SHOOTING	6-3
CAMSHAFT REMOVAL	6-4
CYLINDER HEAD REMOVAL	6-6
CYLINDER HEAD DISASSEMBLY	6-6
CYLINDER HEAD INSPECTION	6-7
VALVE SEAT INSPECTION AND	6-9
SERVICE	6-9
CYLINDER HEAD REASSEMBLY	6-11
CYLINDER HEAD INSTALLATION	6-12
VALVE CLEARANCE ADJUSTMENT	6-13

MECHANISM DIAGRAM

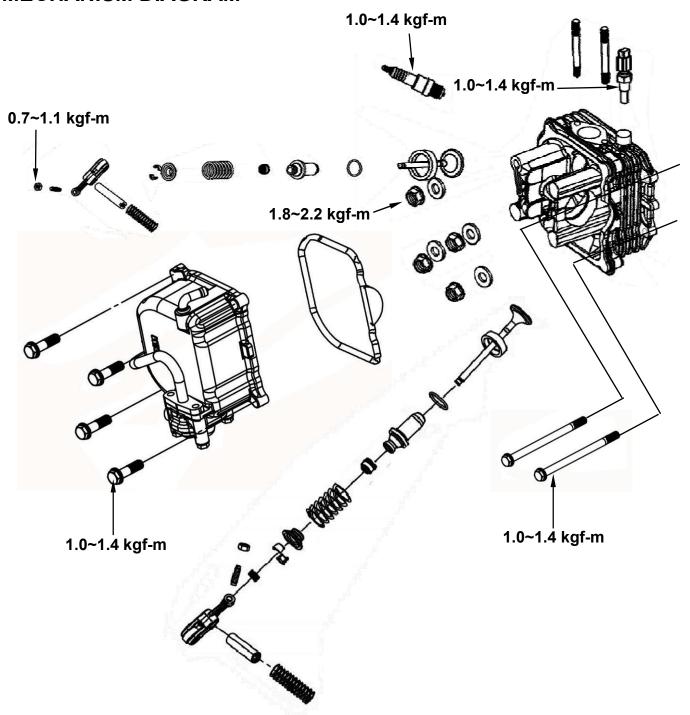

PRECAUTIONS IN OPERATION

General Information

- This chapter is contained maintenance and service for cylinder head, valve, and camshaft as well as valve rocker arm.
- Cylinder head service cannot be carried out when engine is in frame.

Specification unit: mm

Item			Standard	Limit
Compression pressure		10.2 ± 0.2 kg/cm ²	-	
Camshaft	Height of complete	Intake	25.51—25.61	25.50
	Height of cam lobe	Exhaust	25.1125.21	25.10
Rocker arm	ID of valve rocker arm		10.008—10.023	10.10
	OD of valve rocker arm shaft		9.972~9.987	9.910
Valve	OD of valve stem	Intake	4.975—4.990	4.900
		Exhaust	4.955—4.970	4.900
	ID of Guide		5.0005.012	5.030
	Clearance between valve stem and guide	Intake	5.0005.012	0.080
		Exhaust	0.030—0.057	0.100
	Free length of valve spring	Outer	34.35	32.35
		Inner	30	28
	Valve seat w	vidth	0.8	1.5

Torque Value

Cylinder head cover bolt 0.8~1.2kgf-m Cylinder head bolt (LH) 0.7~1.1kgf-m Sealing bolt of timing chain auto-adjuster 0.8~1.2kgf-m Bolt of timing chain auto-adjuster 1.0~1.4kgf-m

Timing gear cover bolts 0.7~1.1kgf-m (apply with oil on bolt thread & seat)

Spark plug 1.0~1.4kgf-m

TOOLS

Special service tools

Valve reamer: 5.0mm Valve guide driver: 5.0mm Valve spring compressor

TROUBLE SHOOTING

Engine performance will be effected by troubles on engine top end. The troubles usually can be determinate or by performing cylinder compression test and judging the abnormal noise generated.

Rough Idle

Low compression pressure.

Low compression pressure

1. Valve

- · Improper valve adjustment.
- Burnt or bended valve.
- Improper valve timing.
- · Valve spring damaged.
- Valve carbon.
- Poor sealing on valve seat.
- · Improper spark plug installation.

2. Cylinder head

- Cylinder head gasket leaking or damage.
- Tilt or crack cylinder surface.

3. Piston

• Piston ring worn out.

High compression pressure

• Too much carbon deposit on combustion chamber or piston head.

Noise

- · Improper valve clearance adjustment
- · Burnt valve or damaged valve spring
- · Camshaft wear out or damage
- · Cam chain wear out or looseness
- Auto-adjuster wear out or damage of cam chain
- · Camshaft sprocket wear out
- Rocker arm or rocker arm shaft wear out

White smoke

- Valve guide or valve stem wear out
- · Valve stem seal wear out


6-4 CYLINDER HEAD/VALVE

CAMSHAFT REMOVAL

Remove the shroud of the engine.


Remove the crankcase blow-by system hose from the cylinder head.

Remove the cylinder head cover 4 bolts and then remove the cylinder head cover.

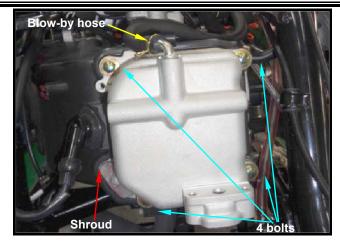


Loosen the screw of camshaft chain adjuster and remove O-ring.

With a flat screwdriver to tighten the screw of camshaft chain adjuster in a clockwise motion for release adjuster.

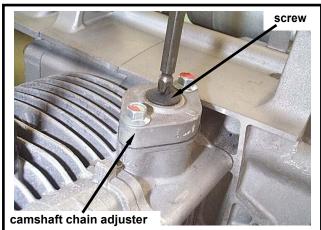


Turn the flywheel in counter-clockwise motion with T type wrench until the "T" mark on flywheel aligned with the mark on the crankcase so that the hole on the camshaft sprocket is forward up and piston is at TDC position.

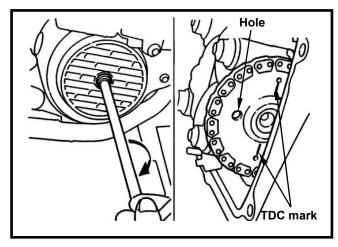

Remove camshaft holder nut and washer.




Loosen the nuts diagonally by 2-3 sequences.

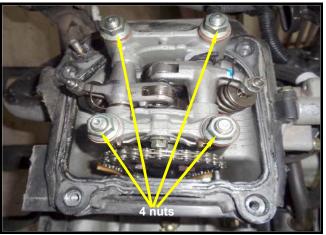

Remove the camshaft holder and rocker arm set.

Remove the camshaft chain from the camshaft sprocket.

Remove the cylinder head.

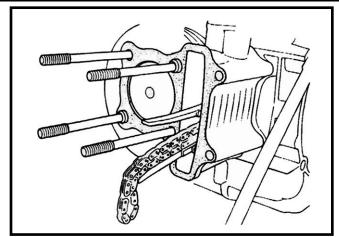

Camshaft Inspection

Inspect cam lobe height for damaged.

Service Limit


IN: Replacement when less than 25.5mm EX: Replacement when less than 25.1 mm.

Inspect the camshaft bearing for looseness or wear out. If any, replace whole set of camshaft and bearing.



Measure the valve rocker arm I.D.

Service Limit: Replace when it is above 10.1 mm

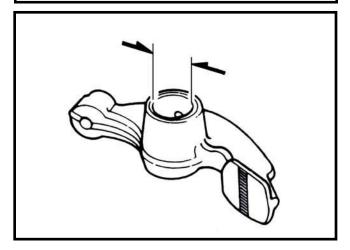


Measure the active O.D. of the valve rocker arm shaft .

Service Limit: Replace when it is above 9.91 mm

Calculate the clearance between the rocker arm shaft and the rocker arm.

Service Limit: Replace when it is above 0.10 mm

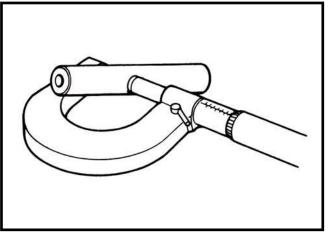


CYLINDER HEAD REMOVAL

Remove double seat, luggage box and front center cover.

Remove the engine (refer to Chapter 5). Remove the cooling fan cover. Remove the engine shroud.

Remove the camshaft sprocket.



Remove cylinder head gasket and 2 dowel pins.

Remove chain plate.

Clean up residues from the matching surfaces of cylinder and cylinder head.

⚠ Caution


- Do not damage the matching surfaces of cylinder and cylinder head.
- Avoid residues of gasket or foreign materials falling into crankcase as cleaning.

CYLINDER HEAD DISASSEMBLY

Use a valve compressor to press the valve spring.





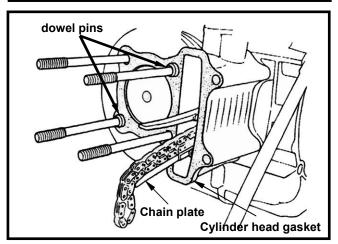




After removed valve cotters, release the compressor and then take out spring retainer, valve spring and valves.

⚠ Caution

In order to avoid to loosing spring tension, do not compress the spring too much. Its length is based on the installation of latch.

Special Service Tool: Valve spring compressor.

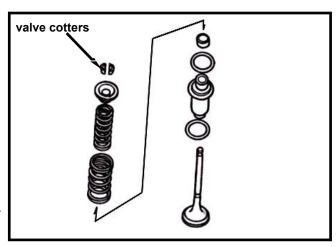

Remove valve stem guide seal.
Clean carbon deposits in combustion chamber.
Clean residues and foreign materials on cylinder head matching surface.


⚠ Caution

Do not damage the matching surface of cylinder head.

CYLINDER HEAD INSPECTION

Check if spark plug and valve holes are crack. Measure cylinder head flat with a straightedge and flat feeler gauge.

Service limit: 0.05mm

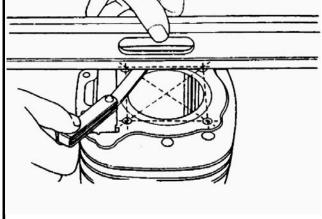

The narrow pitch of the spring shall face to the combustion chamber.

Valve spring free length

Measure the free length of intake and exhaust valve springs.

Standard

Outer: 34.35 mm Inner: 30 mm

6-8 CYLINDER HEAD/VALVE

Valve stem

Check if valve stems are bend, crack or burn. Check the operation condition of valve stem in valve guide, and measure & record the valve stem outer diameter.

Service Limit: IN→ 4.900mm

EX→ 4.900mm

Valve guide

⚠ Caution

Before measuring the valve guide, clean carbon deposits with reamer.

Special Service Tool: 5.0mm valve guide reamer

Measure and record each valve guide inner diameters.

Service limit: 5.030mm

The difference that the inner diameter of valve guide deducts the outer diameter of valve stem is the clearance between the valve stem and valve guide.

Service Limit: IN→ 0.08mm

EX→ 0.10mm

⚠ Caution

If clearance between valve stem and valve guide exceeded service limit, check whether the new clearance that only replaces new valve guide is within service limit or not. If so, replace valve guide.

Correct it with reamer after replacement. If clearance still exceeds service limit after replaced valve guide, replace valve stem too.

⚠ Caution


It must correct valve seat when replacing valve guide.


Valve guide replacement


Heat up cylinder head to 100~150 °C with heated plate or toaster.


⚠Caution

- Do not let torch heat cylinder head directly. Otherwise, the cylinder head may be deformed as heating it.
- Wear on a pair of glove to protect your hands when operating.

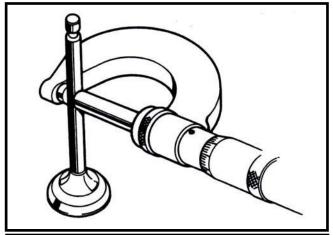

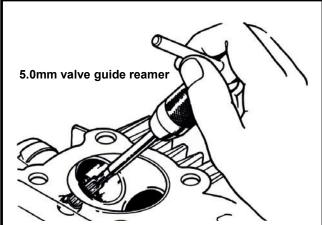

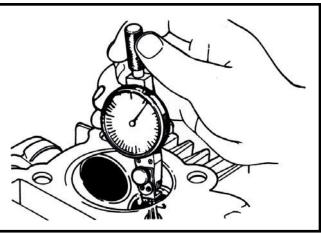

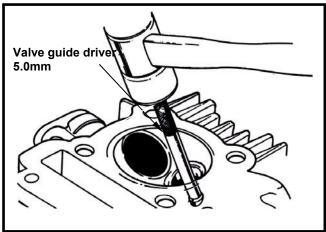

Hold the cylinder head, and then press out old valve guide from combustion chamber side.

Tool: Valve guide driver 5 mm

↑ Caution

- Check if new valve guide is deformation after pressed it in.
- When pressing in the new valve guide, cylinder head still must be kept in 100~150 °C.

Adjust the valve guide driver and let valve guide height is in 13mm.

Press in new valve guide from rocker arm side. **0Tool: Valve guide driver 5 mm**

Wait for the cylinder head cooling down to room temperature, and then correct the new valve guide with reamer.

⚠ Caution

- Using cutting oil when correcting valve guide with a reamer.
- Turn the reamer in same direction when it be inserted or rotated.

Correct valve seat, and clean up all metal residues from cylinder head.

Special tool: Valve guide reamer 5 mm VALVE SEAT INSPECTION AND SERVICE

Clean up all carbon deposits onto intake and exhaust valves.

Apply with emery slightly onto valve contact face. Grind valve seat with a rubber hose or other manual grinding tool.


⚠ Caution


- Do not let emery enter into between valve stem and valve guide.
- Clean up the emery after corrected, and apply with red paint onto contact faces of valve and valve seat.


Remove the valve and check its contact face.


A Caution

- Replace the valve with new one if valve seat is roughness, wear out, or incomplete contacted with valve seat.
- If the valve and the valve seat still can not be matched sealing after grinded, replace it with new one.

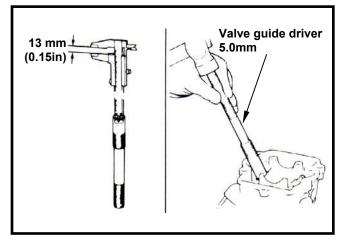

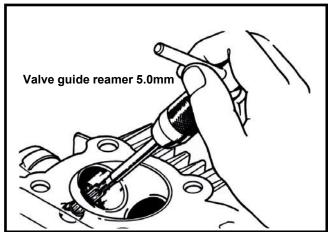

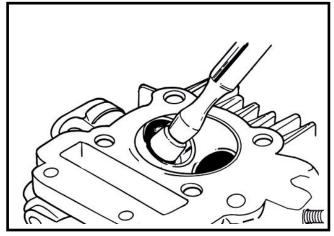

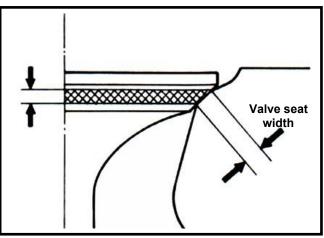

Valve seat inspection

If the valve seat is too width, narrow or rough, correct it.

Valve seat width Service limit: 1.6mm

Check the contact condition of valve seat.

Valve seat grinding

The worn valve seat has to be grinded with valve seat chamfer cutter.

Use 45° valve seat chamfer cutter to cut any rough or uneven surface from valve seat.

⚠ Caution

After valve guide had been replaced, it has to be grinded with 45° valve seal chamfer cutter to correct its seat face.

Use 32° cutter to cut a quarter upper part out.


Use 60° cutter to cut a quarter lower part out. Remove the cutter and check new valve seat.


Use 45° cutter to grind the valve seat to specified width.


⚠ Caution

Make sure that all roughness and uneven faces had been grinded.

Grind valve seat again if necessary.

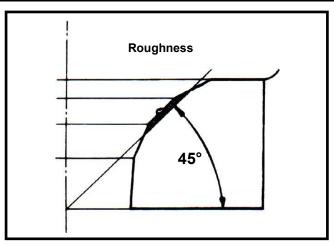

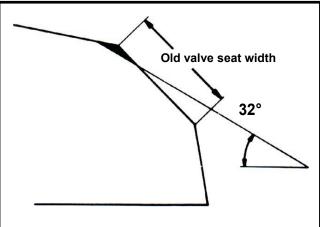

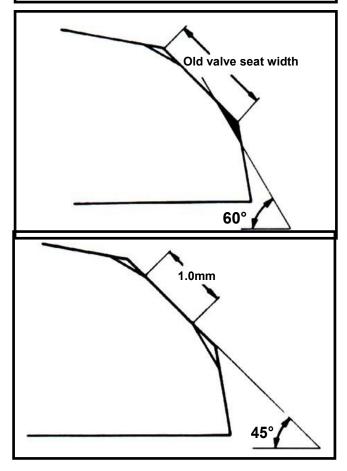

Coat the valve seat surface with red paint. Install the valve through valve guide until the valve contacting with valve seat, slightly press down the valve but do not rotate it so that a seal track will be created on contact surface.



The contact surfaces of valve and valve seat are very important to the valve sealing capacity.

If the contact surface too high, grind the valve seat with 32° cutter.


Then, grind the valve seat with 45° cutter to specified width.


If the contact surface too low, grind the valve seat with 60° cutter.


Then, grind the valve seat with 45° cutter to specified width.


After the valve seat grinded, coat valve seat surface with emery and then slightly press the grinded surface.

Clean up all emery coated onto cylinder and valve after grinded.

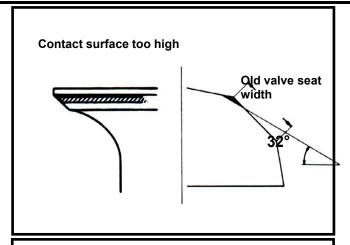

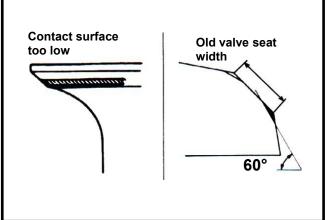

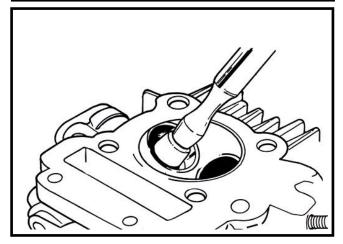

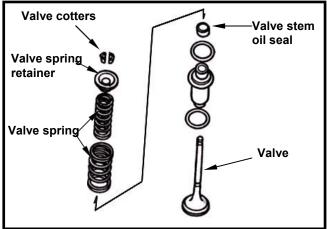

CYLINDER HEAD REASSEMBLY

Lubricate valve stem with engine oil, and then insert the valve into valve guide. Install new valve stem oil seal. Install valve springs and retainers.

⚠ Caution

The closed coils of valve spring should face down to combustion chamber.

6-12 CYLINDER HEAD/VALVE

Use valve spring compressor to press valve spring.

Install valve split locks and release the valve compressor.

⚠ Caution

In order to avoid to loosing spring tension, do not compress the spring too much. Its length is based on the installation of latch.


Special tool: valve spring compressor

Tap valve stem to make valve retainer and valve stem sealing properly.

⚠ Caution


Place and hold cylinder head on to working table so that can prevent from valve damaged.



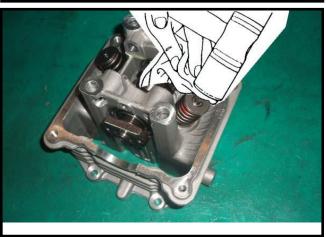

CYLINDER HEAD INSTALLATION

Install the lock pins and new cylinder head gasket onto the cylinder head. Install the camshaft chain plate.

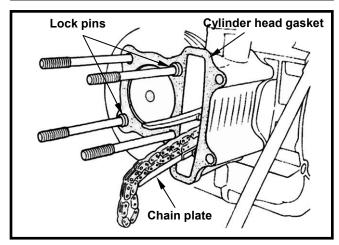

With T type wrench to turn crankshaft in a clockwise motion so that the "T" mark on the flywheel aligns with the mark on crankcase. (piston is at TDC position)

Place the TDC marks of the cam sprocket at same level of the top-end of cylinder head. The other single hole of the cam sprocket is in upward. Then, install the cam chain onto the cam sprocket.

Install the cylinder head.



VALVE CLEARANCE ADJUSTMENT

Loosen valve clearance adjustment nuts and bolts located on valve rocker arm.

Measure and adjust valve clearance with feeler gauge.

After valve clearance had been adjusted to standard value, hold adjustment bolt and then tighten the adjustment nut.

Standard Value: 0.12 ± 0.02mm


With flat screwdriver, turn the cam sprocket adjuster in counter-clockwise motion so that the adjuster is pushed out to contact the cam chain plate tightly. Apply with oil onto a new O-ring and then install it onto the adjuster hole. Tighten the bolt cap of the adjuster adjustment hole.

⚠ Caution

The O-ring must be installed into glove.

Replace the O-ring of the cylinder head with new one. Install the cylinder head.

Tighten the cylinder head lock bolts. Connect the blow-by hose onto the cylinder head. Install the engine onto the engine frame. (Refer to Chapter 5)

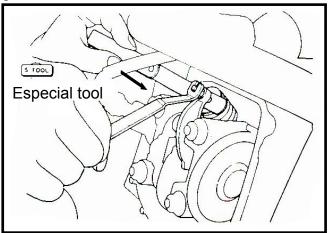






7.CYLINDER/PISTON

CONTENTS

MECHANISM DIAGRAM7-1	l
PRECAUTIONS IN OPERATION7-2	<u> </u>
CYLINDER REMOVAL7-3	}
PISTON REMOVAL7-5	5
PISTON RING INSTALLATION7-7	7
PISTON INSTALLATION7-8	}

MECHANISM DIAGRAM

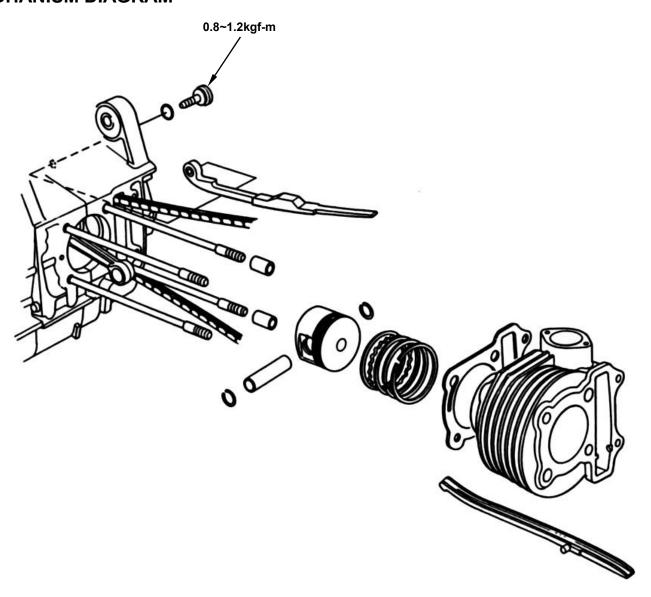

PRECAUTIONS IN OPERATION

General Information

• Both cylinder and piston service cannot be carried out when engine mounted on frame.

Specification unit: mm

Specification unit: mm				
Item			Standard	Limit
	ID		39.010—39.015	39.019
Cylinder	Bend/wrap age		Less than 0.05	0.050
	Roundness		Less than 0.01	0.050
	Cylindrical		Less than 0.05	0.050
	Clearance	Top ring	0.015-0.045	0.08
	between piston and rings	2 nd ring	0.015-0.050	0.08
	Ring-end gap	Top ring	0.05-0.15	0.40
		2 nd ring	0.05-0.020	0.40
Piston/ Piston ring		Oil ring	0.200~0.700	0.90
	OD of piston		38.985—38.990	38.98
	Piston OD measurement position		9mm above piston skirt	_
	Clearance between piston and cylinder		0.005~0.015	0.100
	ID of piston pin hole		13.002—13.008	13.04
OD of piston pin		12.994—13.000	12.98	
Clearance between piston and piston pin		0.002~0.014	0.04	
ID of connecting rod small-end		13	13.06	

TROUBLE DIAGNOSIS

Low Or Unstable Compression Pressure

- Cylinder or piston ring worn out.
- Compress pressure to high.
- Too much carbon deposited in combustion chamber and piston.

Knock or Noise

- Cylinder or piston ring worn out.
- Carbon deposits on cylinder head top-side.

• Piston pin hole and piston pin wear out.

Smoking in Exhaust Pipe


- Piston or piston ring worn out.
- Piston ring installation improperly.
- Cylinder or piston damage.5

Engine Overheat

Carbon deposits on cylinder head top side.

CYLINDER REMOVAL


Remove cylinder head. (refer to chapter 6) Remove 2 bolts and then take out the cam chain auto-adjuster.

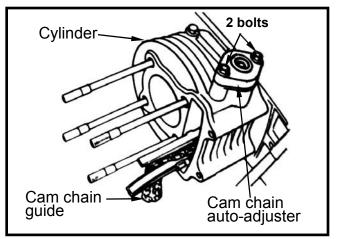


Remove cam chain plate. Remove cylinder.



Remove cylinder gasket and lock pins

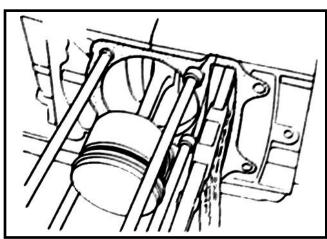

Clean the residues attached onto the matching surfaces of cylinder and crankcase.

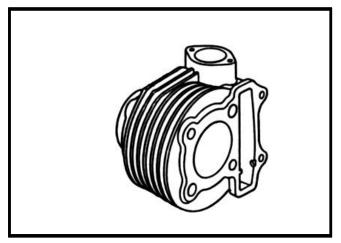

7-4 CYLINDER/PISTON

Cover the holes of crankcase and cam chain with a piece of cleaning cloth.

Clean up all residues or foreign materials from the two matching surfaces of cylinder and crankcase.



To soap the residues into solvent so that the residues can be removed more easily.

INSPECTION

Check if the inner diameter of cylinder is worn out or damaged.

In the 3 positions (top, center and bottom) of cylinder, measure the X and Y direction values respective in the cylinder.

Service limit: 57.7mm

Calculate both the real roundness (the difference between X and Y motion values) and the cylindrical roundness (the difference in the top, center or bottom positions of X or Y motion values.). Then, determinate by the max. value.

Service limit

Real roundness: correct or replace as

over 0.05 mm


Cylindrical roundness: correct or replace


as over 0.05 mm


Check Cylinder flat.

Service limit: correct or replace as over

0.05 mm

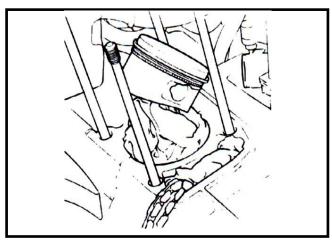

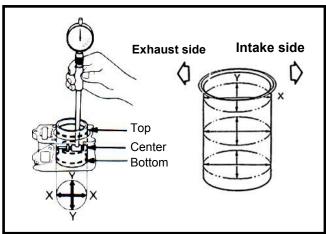

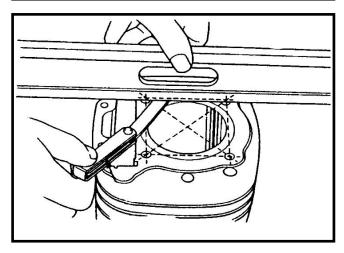


PISTON REMOVAL

Plug crankcase opening with a cleaning cloth to prevent from piston pin snap ring or other parts falling into crankcase when disassembling.

Hold another snap ring with pliers.

Push out the piston pin from the side that not removed the snap ring.

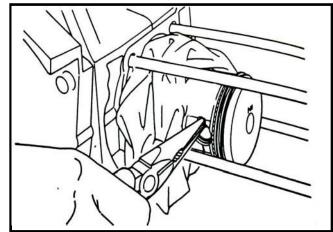

Remove piston rings.

⚠ Caution

Pay attention to remove piston rings because they are fragile.

Disassemble the piston rings.

Check if the piston rings are damaged or its grooves are worn.

Cleaning the carbon in piston ring grooves.


Install the piston rings and then measure clearance between piston ring and its grooves.


Service Limit: Top ring: replace if over

0.145mm

2nd ring: replace if over

0.145mm

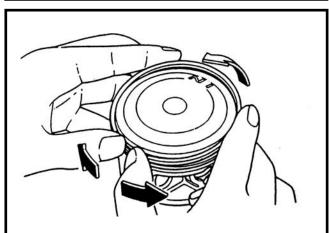

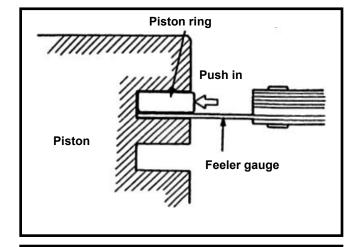

Take out the piston rings and place them respective into cylinder below 20mm of cylinder top. Measure each piston ring gaps.



⚠ Caution


Push the piston rings into cylinder with piston top-end in parallel motion.

Service Limit: Top ring: replace if over

0.50mm

2nd ring: replace if over


0.750mm

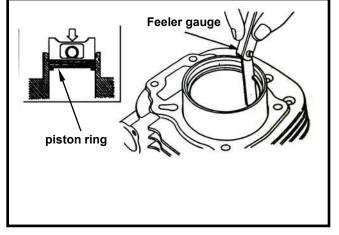

7-6 CYLINDER/PISTON


Measure the outer diameter of piston pin.

Service Limit: 13.04mm

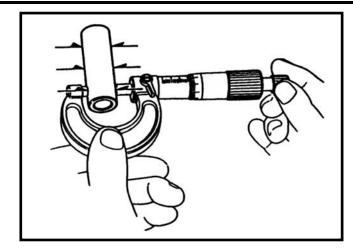

Measure the inner diameter of connecting rod small end.

Service Limit: 13.06mm

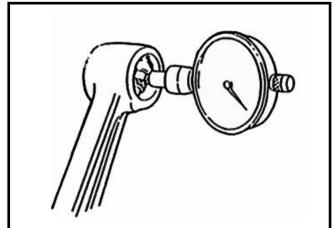


Measure the inner diameter of piston pin hole.

Service Limit: 13.04mm

Calculate clearance between piston pin and its hole.

Service Limit: 0.02mm

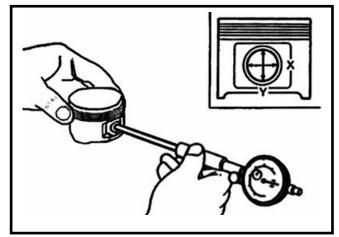


Measure piston outer diameter.



The measurement position is 9 mm distance from piston bottom side, and 90° to piston pin.

Service limit: 38.98mm

Compare measured value with service limit to calculate the clearance between piston and cylinder.

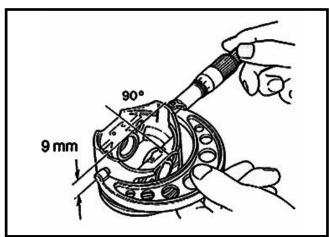


PISTON RING INSTALLATION

Clean up piston top, ring groove, and piston skirt. Install the piston ring onto piston carefully. Place the openings of piston ring as diagram shown.

⚠ Caution

- Do not damage piston and piston rings as installation.
- All marks on the piston rings must be forwarded to up side.
- Make sure that all piston rings can be rotated freely after installed.

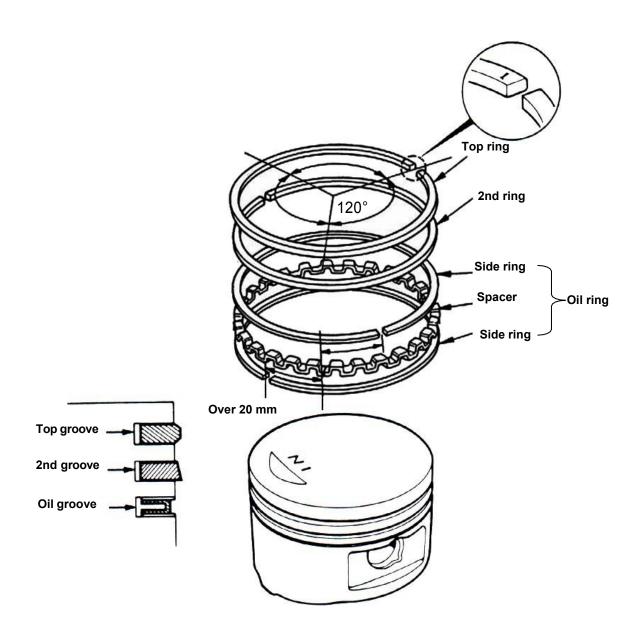

PISTON INSTALLATION

Install piston and piston pin, and place the IN mark on the piston top side forward to intake valve.

Install new piston pin snap ring.

⚠ Caution

- Do not let the opening of piston pin snap ring align with the opening piston ring.
- Place a piece of cleaning cloth between piston skirt section and crankcase in order to prevent snap ring from falling into crankcase as operation.

CYLINDER INSTALLATION

Clean up all residues and foreign materials on the matching surface of crankcase. Pay attention to not let these residues and foreign materials fall into crankcase.

⚠ Caution

To soap the residues into solvent so that the residues can be removed more easily.

Install 2 lock pins and new gasket.

Coat engine oil to inside of cylinder, piston and piston rings.


Care to be taken when installing piston into cylinder. Press piston rings in one by one as installation.


⚠ Caution


Do not push piston into cylinder forcefully because this will cause the piston and the piston rings to be damaged.


Install the cam chain plate, the cylinder head gasket and lock pins.

Install cylinder head. (refer to Chapter 6) Install the cam chain auto-adjuster. (2 bolts)

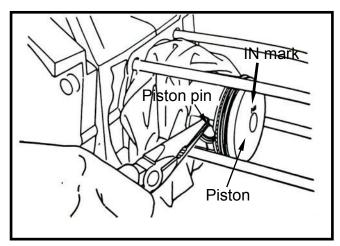

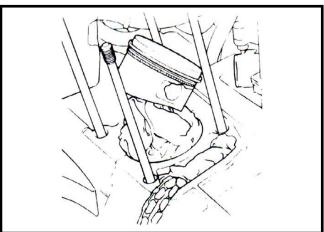

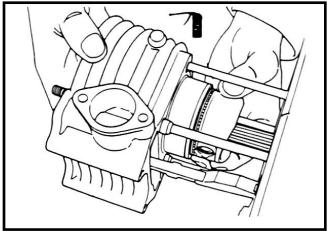


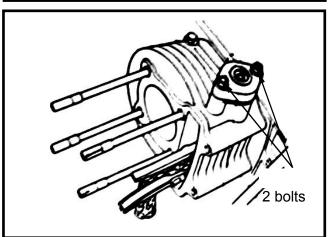

8. V-BELT DRIVING SYSTEM/KICK STARTER

MECHANISM PLACEAN
MECHANISM DIAGRAM8-1
MAINTENANCE DESCRIPTION8-2
LEFT CRANKCASE COVER8-3
Installation of the left crankcase cover8-3
DRIVING BELT8-4
SLIDING PULLEY8-6
Inspection8-9
Clutch lining8-10
Driven pulley spring8-10
Driven pulley8-10
Clutch Block Replacement8-11
Installation of clutch/driven pulley

MECHANISM DIAGRAM

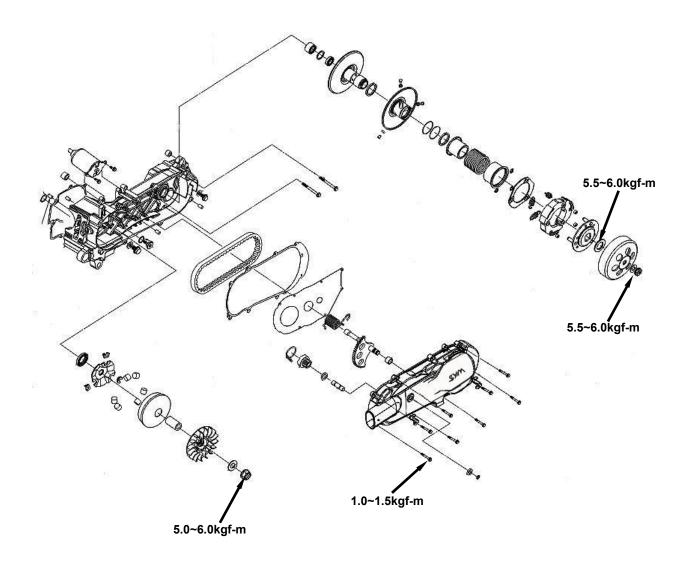

MAINTENANCE DESCRIPTION

Precautions in operation General information

- Driving pulley, clutch, and driven pulley can be serviced on the motorcycle.
- Driving belt and driving pulley surface must be free of grease.

Specification

opeomeanen		Offic. Ithir
Item	Standard value	Limit
Driving belt width	19.50	18.50
ID of sliding pulley bush	23.989~24.052	24.060
OD of sliding pulley hub	23.960~23.974	23.940
OD of roller	15.92~16.08	15.400
ID of clutch outer	125.000~125.200	125.500
Thickness of clutch lining	3.000	2.500
Free length of driving pulley spring	168.900	163.700
OD of driven pulley	33.965~33.985	33.940
ID of sliding pulley	34.000~34.025	34.060
ID I D' '		

ID: Inner Diameter OD: Outer diameter

Torque value

Sliding pulley nut: 5.0~6.0kgf-m Clutch outer nut: 5.5~6.0kgf-m driving pulley nut: 5.5~6.0kgf-m

TROUBLE DIAGNOSIS

Engine can be started but motorcycle can not be moved

- Worn driving Belt
- Worn tilt plate
- Worn or damaged clutch lining
- Broken driven pulley

Shudder or misfire when driving

- Broken clutch lining
- Worn clutch lining

Special Service Tools

Clutch spring compressor Bearing puller (inner type) Clutch mounting nut wrench Universal fixture

Insufficient horsepower or poor high speed performance

Unit: mm

- Worn driving belt
- Insufficient spring capacity of driven pulley
- Worn roller
- Driven pulley operation un-smoothly

LEFT CRANKCASE COVER

Left crankcase cover removal


Remove air cleaner. (2 bolts)
Remove kick starter arm. (1 bolt)
Loosen vent strap on the front-left side of cover, and then remove the vent.
Remove engine left-side cover (8 bolts).



Installation of the left crankcase cover

Install the left crankcase cover. (8 bolts) Install front vent tube of left cover and tighten the strap.

Install kick starter arm. (1 bolt)
Tighten the air cleaner. (2 bolts)

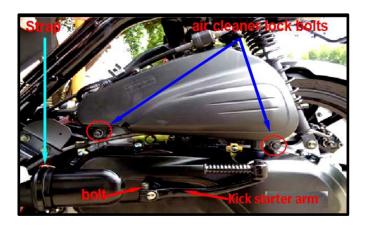


DRIVING BELT

Removal

Remove left crankcase cover.

Hold the driving pulley with a universal fixture, and then remove the nut and driving pulley.

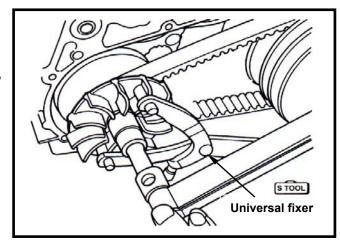


Hold driving pulley with universal fixture, and remove nut and clutch outer.

⚠ Caution

Using special service tools for tightening or loosening the nut. Fixed rear wheel or rear brake only will damage reduction gear system.

Push the driving belt into belt groove as diagram shown so that the belt can be loosened, and then remove driven belt and clutch at same time.

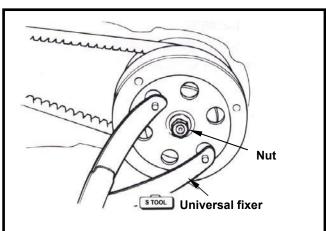

Driving belt

Inspection Check the driving belt for crack or wear. Replace it if necessary.


Measure the width of driving belt as diagram shown. Replace the driving belt if it exceed maintenance limited specification.

Service Limit: 18.5mm



⚠ Caution

- Using the genuine parts for replacement.
- The surfaces of driving belt or pulley must be free of grease.
- · Clean up all grease or dirt before installation.

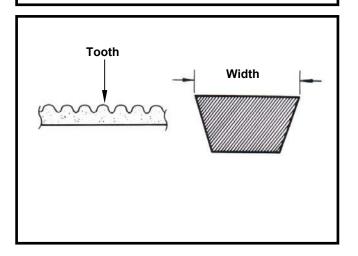


Installation

Pull out the driving pulley and then insert the driving belt into the driving pulley.



⚠ Caution


Pull out driving pulley and then insert the driving belt into the driving pulley so that the driving belt set can be installed onto sliding pulley more easily.

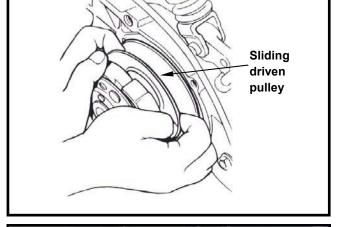

Install the clutch set with driving belt onto the driving shaft.


Install the sliding pulley on the other end of belt.

Install clutch outer.

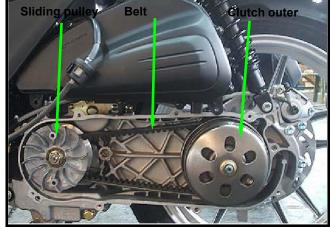

Install the clutch with universal fixture, and then tighten nut to specified torque value.


Torque value: 5.5~6.0 kgf-m

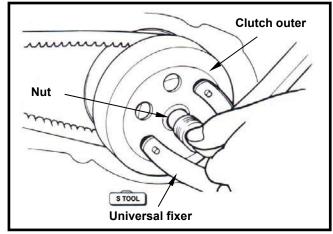



⚠ Caution

When install the driving belt, if there is a arrow mark, then the arrow mark must point to rotation motion. If not, the letters on the belt must be forwarded to assembly direction.

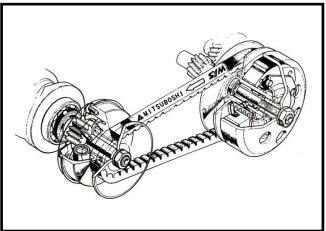


8-6 V-BELT DRIVING SYSTEM/KICK STARTER

SLIDING PULLEY REMOVAL


Remove left crankcase cover.

Hold driving pulley with universal fixture, and then remove driving pulley nut.


Remove driving pulley.

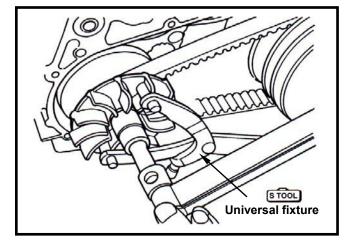


Remove the driving belt from the pulley. Remove sliding pulley set and driving pulley hub from crankshaft.

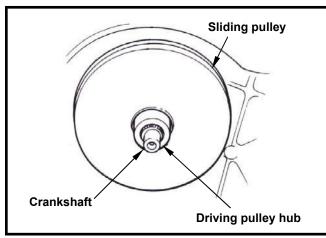

Remove tilt plate.

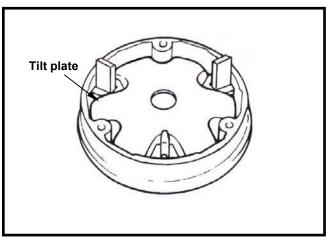

Remove weight rollers from sliding pulley.

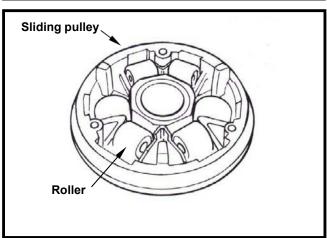

Inspection

The operation of sliding pulley is means of the weight roller to pressing on it with centrifuge force. And then the speed is changed by the title plate rotation. Thus, if weight rollers are wear out or damage, the centrifuge force will be effected.

Check if rollers are wear out or damage. Replace it if necessary.

Measure each rollers' outer diameter.

Replace it if exceed the service limit.

Service limit: 15.40 mm

Check the pulley hub if damaged or wear out. Replace it if necessary.

Measure the pulley hub's outer diameter.

Replace it if exceed the service limit.

Service limit: 23.94 mm

Measure the inner diameter of the pulley bush.

Replace it if exceed the service limit.


Service limit: 24.06 mm





Install the weight rollers.


Install the title plate guide boot onto the title plate.

Install the title plate.

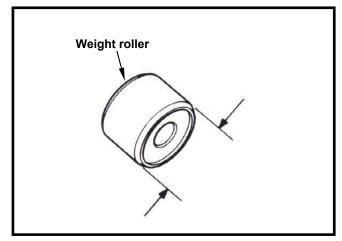

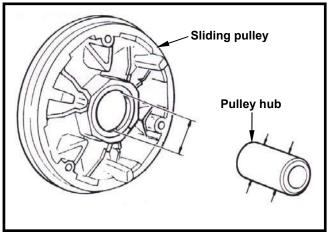

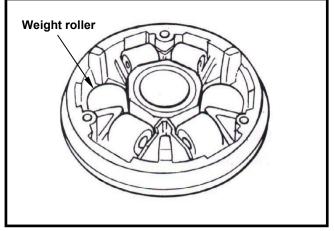

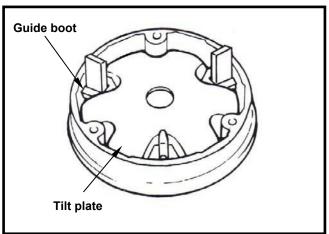


8-8V-BELT DRIVING SYSTEM/KICK STARTER ARM

Apply with grease 4~5 g to inside of driving shaft hole, and install driving pulley hub.




⚠ Caution

The pulley surface has to be free of grease. Clean it with cleaning solvent.

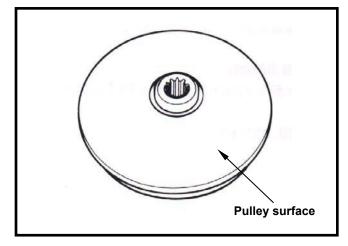

Install siding pulley assembly onto crankshaft.

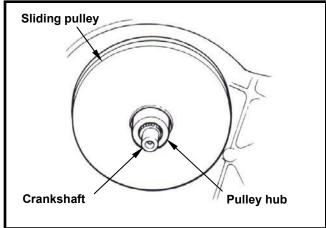

Driving pulley install

Press driving belt into pulley groove, and then press down the up & down sides of the driving belt to separate it away from the driving pulley hub.



⚠ Caution

To press down the up & down sides of the driving belt can avoid to pressing and damaging the belt when installing the driving pulley, and also can make sure that the driving pulley can be tighten.

Install driving pulley, washer and nut.





⚠ Caution

Make sure that two sides of pulley surfaces have to be free of grease. Clean it with cleaning solvent.

Hold driving pulley with universal fixture. Tighten nut to specified torque.

Torque value: 5.0~6.0 kgf-m Install left crankcase cover.

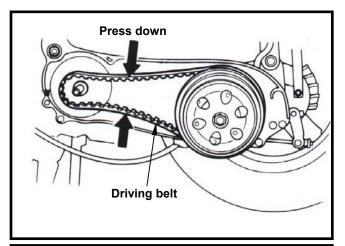

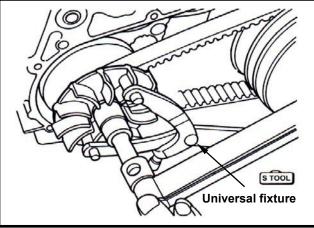

CLUTCH/DRIVEN PULLEY

Disassembly

Remove driving belt and clutch/driven pulley. Install clutch spring compressor onto the pulley assembly, and operate the compressor to let nut be installed more easily.

⚠ Caution

Do not press the compressor too much.

Hold the clutch spring compressor onto bench vise, and then remove mounting nut with special nut wrench.


Release the clutch spring compressor and remove clutch and spring from driven pulley. Remove socket from driven pulley.


Remove oil seal from driven pulley. Remove guide pin, guide pin roller, and sliding pulley, and then remove O-ring & oil seal seat from sliding pulley.


Inspection Clutch outer


Measure the inner diameter of clutch outer friction face. Replace the clutch outer if exceed service limit.

Service limit: 125.5 mm

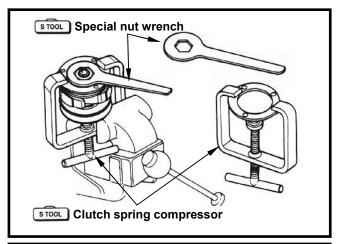

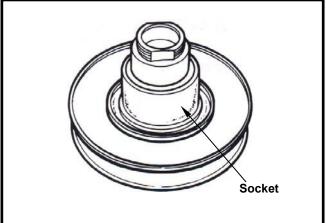

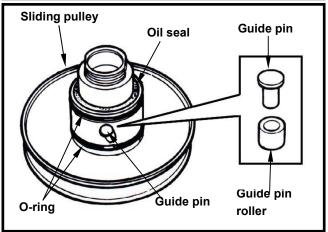

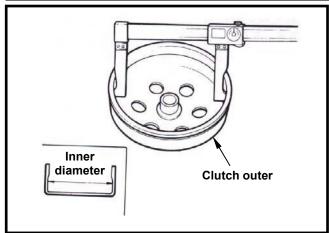


8-10 V-BELT DRIVING SYSTEM/KICK STARTER ARM

Clutch lining

Measure each clutch lining thickness. Replace it if exceeds service limit.


Service limit: 2.5mm

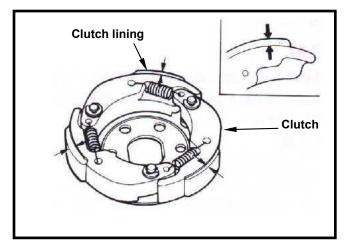

Driven pulley spring

Measure the length of driven pulley spring. Replace it if exceeds service limit.

Service limit: 163.7mm

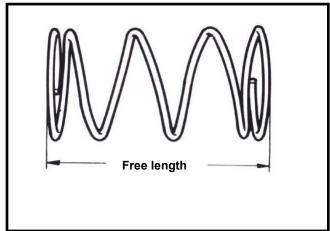


Driven pulley

Check following items;

- If both surfaces are damage or wear.
- If guide pin groove is damage or wear. Replace damaged or worn components. Measure the outer diameter of driven face and the inner diameter of movable driven face. Replace it if exceeds service limit.

Service limit: Outer diameter 33.94mm Inner diameter 34.06mm

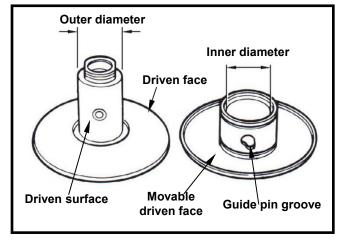


Driven Pulley Bearing Inspection

Check if the inner bearing oil seal is damage. Replace it if necessary.


Check if needle bearing is damage or too big clearance. Replace it if necessary.

Rotate the inside of inner bearing with fingers to check if the bearing rotation is in smooth and silent.

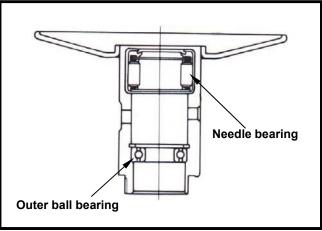


Clutch Block Replacement

Remove snap and washer, and the remove clutch block and spring from driving plate. Check if spring is damage or insufficient elasticity.

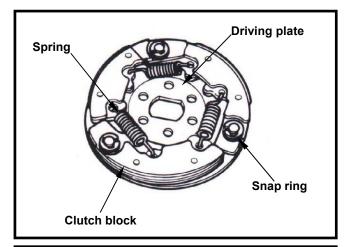

Check if shock absorption rubber is damage or deformation. Replace it if necessary. Apply with grease onto setting pins.

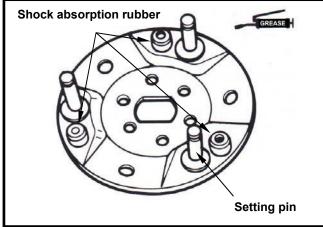


Apply with grease onto setting pins. But, the clutch block should not be greased. If so, replace it.


Install new clutch block onto setting pin and then push to specified location.

⚠ Caution

 Grease or lubricant will damage the clutch block and effect the block's connection capacity.

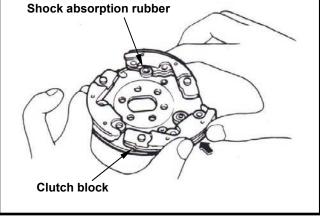

Install the spring snap into groove with pliers.

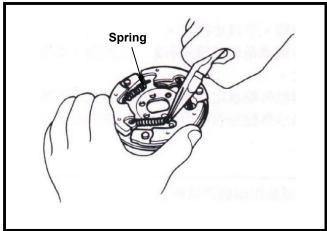


Install snap ring and mounting plate onto setting pin.

Snap ring

Replacement of driven pulley bearing Remove inner bearing.

⚠ Caution


- If the inner bearing equipped with oil seal on one side in the driven pulley, then remove the oil seal firstly.
- If the pulley equipped with ball bearing, it has to remove snap ring and then the bearing.

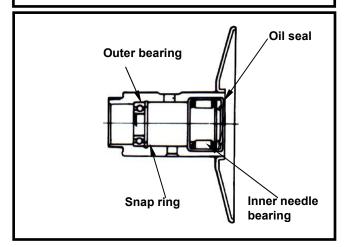

Remove snap ring and then push bearing forward to other side of inner bearing. Place new bearing onto proper position and its sealing end should be forwarded to outside.

Apply with specified grease.

Recommended to use the KING MATE G-3. Install the snap ring and hold the bearing.

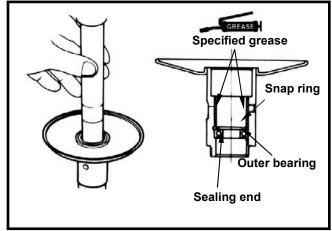


Install a new inner bearing.

⚠ Caution

- Its sealing end should be forwarded to outside as bearing installation.
- Install needle bearing with hydraulic presser. Install ball bearing by means of hydraulic presser.

Align oil seal lip with bearing, and then install the new oil seal (if necessary).

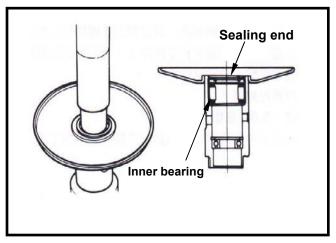

Installation of clutch/driven pulley

Install new oil seal and O-ring onto sliding pulley. Apply with specified grease to lubricate the inside of sliding pulley.

Install sliding pulley onto driven pulley. Install guide pin and guide pin roller.

Install oil socket.


Install driven pulley, spring and clutch into clutch spring compressor, and press down the assembly by turning manual lever until mounting nut that can be installed.


Hold the compressor by bench vise and tighten the mounting nut to specified torque with special nut wrench.


Remove the clutch spring compressor.


Torque value: 5.5~6.0 kg-m

Install clutch/driven pulley and driving belt on to driving shaft.

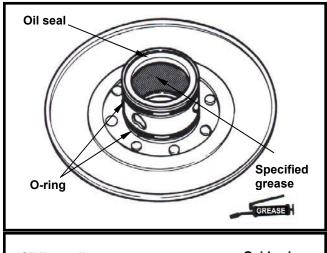

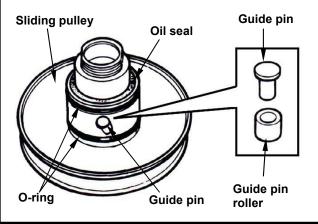

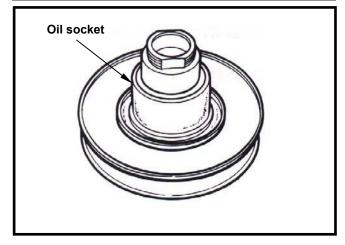


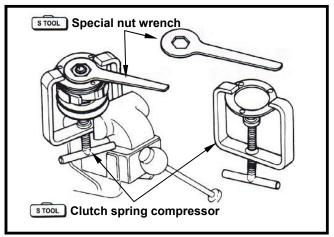

9. FINAL DRIVING MECHANISM

CONTENTS	
MECHANISM DIAGRAM	9-1
OPERATIONAL PRECAUTIONS	9-2
DISASSEMBLY OF FINAL DRIVING MECHANISM	9-3
INSPECTION OF FINAL DRIVING MECHANISM	9-3
BEARING REPLACEMENT	9-4
RE-ASSEMBLY OF FINAL DRIVING MECHANISM	9-6

MECHANISM DIAGRAM

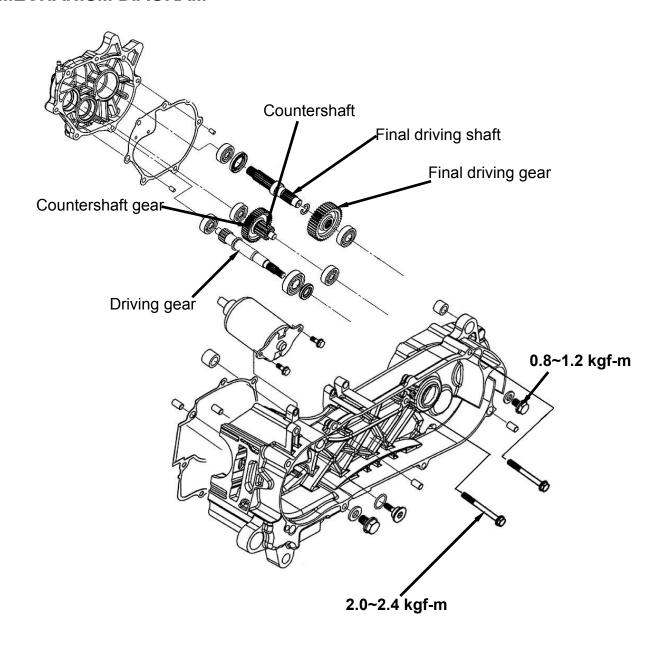

9-2 FINAL DRIVING MECHANISM

OPERATIONAL PRECAUTIONS

Specification

Application gear oil: 4-stroke lubricant Recommended gear oil:85W-90 Oil quantity: 0.14L. (0.13L when replacing)

Torque value

 $\begin{array}{lll} \text{Gear box cover} & 0.8 \text{\sim} 1.2 \text{ kgf-m} \\ \text{Gear oil drain plug} & 1.0 \text{\sim} 1.4 \text{ kgf-m} \\ \text{Gear oil filling bolt} & 0.8 \text{\sim} 1.2 \text{ kgf-m} \\ \end{array}$

Tools

Special service tools

Inner type bearing puller Outer type bearing puller Gear box oil seal installer Gear box bearing installer

TROUBLE DIAGNOSIS

Engine can be started but motorcycle can not be moved

- Damaged driving gear
- Burnt out driving gear
- Broken driving belt

Noise

- Worn or burnt gear
- Worn gear

Gear oil leaks

- Excessive gear oil
- Worn or damage oil seal


DISASSEMBLY OF FINAL DRIVING MECHANISM

Remove the rear wheel. (refer to chapter 15) Remove the clutch.


Drain gear oil out from gear box.

Remove gear box cover bolts (7bolts) and then remove the cover and the final driving shaft.

Remove gasket and setting pin.

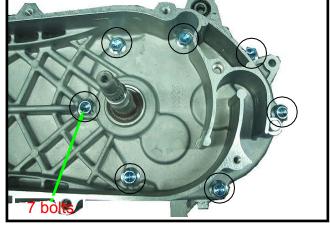


Remove countershaft and gear. Remove final driving gear and shaft.

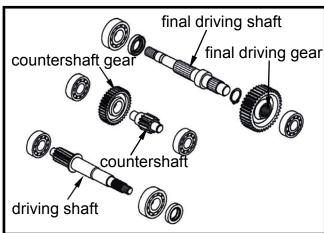


INSPECTION OF FINAL DRIVING MECHANISM

Check if the countershaft and the gear are wear or damage.

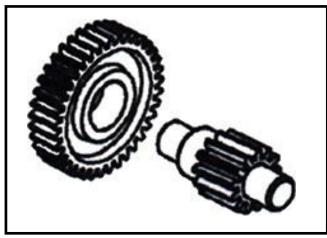

Check if the final driving shaft and gear are burn, wear or damage.

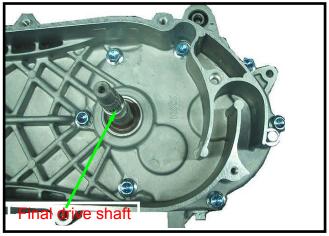

9-4 FINAL DRIVING MECHANISM

Check bearings on gear box and cover. Rotate each bearing's inner ring with fingers. Check if bearings can be turned in smooth and silent, and also check if bearing outer ring is mounted on gear box & cover tightly. If bearing rotation is uneven, noising, or loose bearing mounted, then replace it. Check oil seal for wear or damage, and replace it if necessary.

⚠ Caution

- Do not remove the driving shaft from the cover top side.
- If remove the driving shaft from the cover top side, then its bearing has to be replaced.

Check driving shaft and gear for wear or damage.

BEARING REPLACEMENT Caution


Never install used bearings. Once bearing removed, it has to be replaced with new one.

Remove driving shaft bearing from left crankcase using following tools; Inner type bearing puller


Install new driving shaft bearing into left crankcase.


Tool:

Press the bearing into cover with C type hydraulic presser or bearing installer.

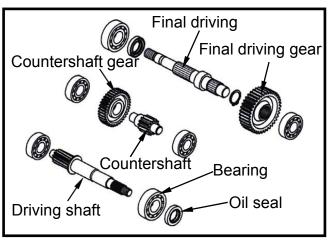



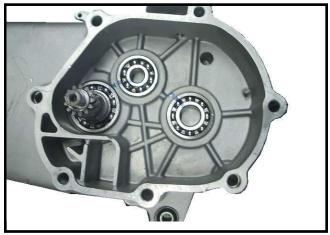

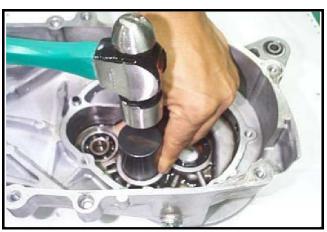

Press out the driving shaft from the crankcase.

Remove oil seal from the gear box.

Remove the driving shaft bearing from the gear box cover with the inner type bearing puller.



⚠ Caution

Using the bearing protector as pressing out the driving shaft from the left crankcase.


Specified tool:

Inner type bearing puller.

If the driving shaft is pulled out with its bearing, then remove the bearing with bearing puller and bearing protector.

Tool:


Multi-functional bearing puller Bearing protector

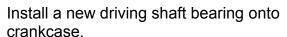


Then, install the driving shaft.

Specified tool:

Press the bearing in with C type hydraulic presser or bearing installer.

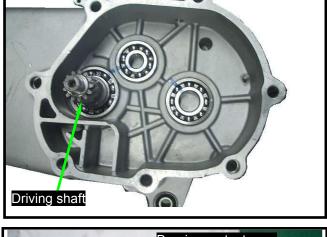



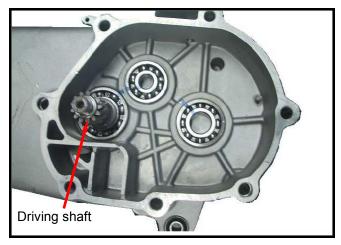

Install a new final driving shaft bearing onto gear box cover.

Specified tool:


Press the bearing in with C type hydraulic presser or the bearing installer.

Apply with some grease onto the lip section of oil seal and then install the seal.




RE-ASSEMBLY OF FINAL DRIVING MECHANISM

Install final shaft and final shaft driven gear, countershaft.

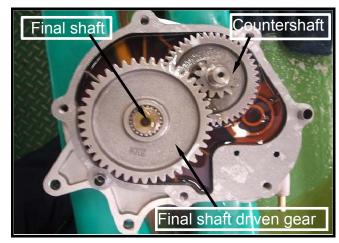

Install the setting pins(2 pins) and new gasket.

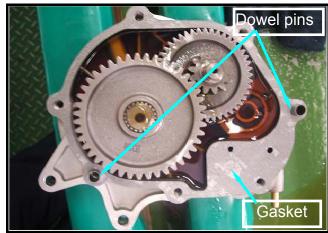

Apply with grease onto the oil seal lip of final driving shaft.

Install the gear box cover and 7 bolts.

(tighten the bolts)

Torque: 0.8~1.2 kgf-m

Install the clutch/sliding driving pulley. Install the driving pulley, belt and left


crankshaft cover. Install the rear wheel.

Add gear oil.

Recommended usage: SGL 85W-90

(0.14 L: standard capacity) (0.13 L: when replacement)




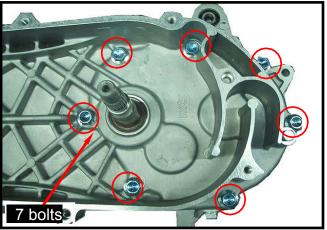

10. A.C. GENERATOR

CONTENTS			
MECHANISM DIAGRAM 10-1			
PRECAUTIONS IN OPERATION 10-2			
A.C. GENERATOR REMOVAL 10-3			
RIGHT CRANKCASE COVER INSTALLATION 10-4			
MOUNTED COIL SET INSTALLATION10-5			
FLYWHEEL INSTALLATION 10-6			

MECHANISM DIAGRAM

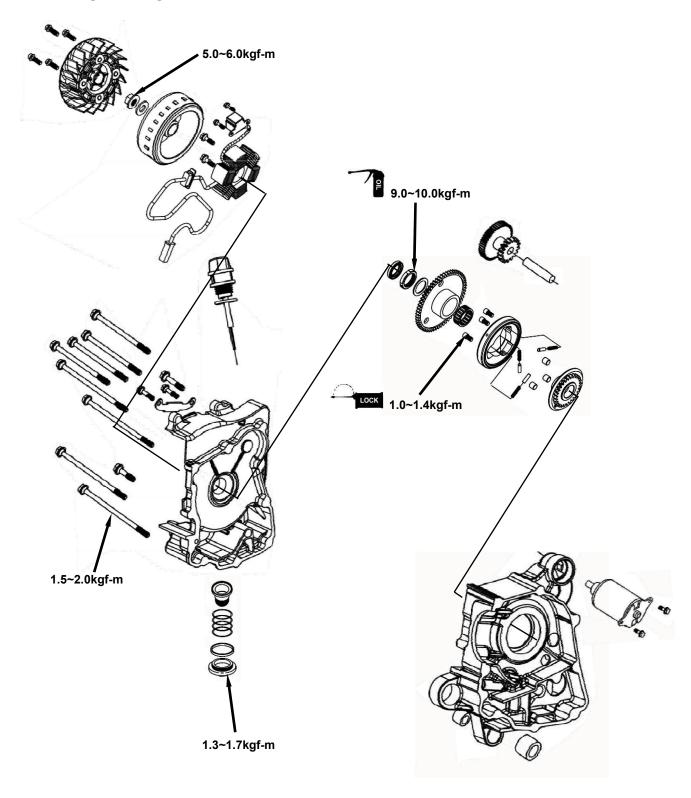

10-2 A.C. GENERATOR

PRECAUTIONS IN OPERATION

General information

- Refer to chapter 5: Engine removal and installation
- Refer to chapter 1: The troubleshooting and inspection of A.C. generator
 Refer to chapter 16: The service procedures and precaution items of starter motor


Torque value:

Flywheel nut 5.0~6.0kgf-m Exhaust muffler bolt 8 mm 1.5~2.0kgf-m 1.3~1.7kgf-m Oil screen cover


Special service tools

Flywheel puller Universal fixture


A.C. GENERATOR REMOVAL

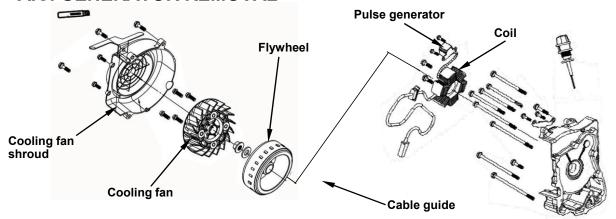

Drain out the engine oil.
Remove the body cover.
Remove the exhaust muffler. (3 bolts, 2 nuts)
Remove the fan shroud. (5 bolts)

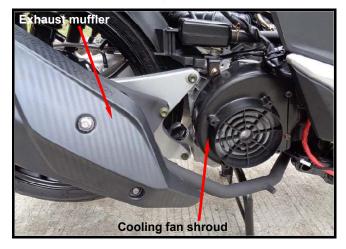


Remove the fan. (4 bolts)

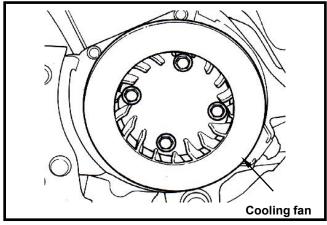

Hold the flywheel with the universal fixture. Remove the 10mm nut on the flywheel.

Special Service Tools:
Universal Fixture

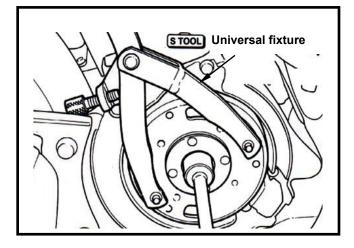


10-4 A.C. GENERATOR

Remove the flywheel with the flywheel puller. **Special service tools:**


Flywheel puller Shaft protector

⚠ Caution

Install a shaft protector on the right end of crankshaft to avoid damaging the crankshaft before installing the flywheel puller.

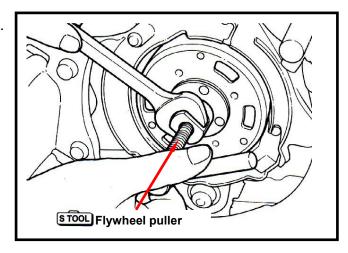


Remove the connectors of the A.C. generator and pulse generator.

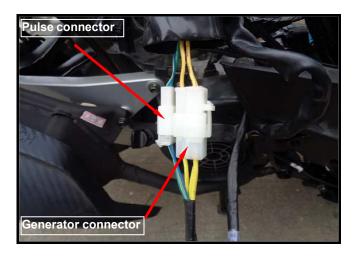

Remove the 6 bolts for the pulse generator, the A.C. generator coil and cable guide. Then, remove the A.C. generator assembly.



Do not damage the alternator coil.

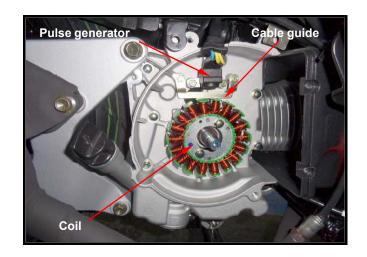

RIGHT CRANKCASE COVER INSTALLATION

Install setting pin and new gasket on the crankcase.

Replace the right crankshaft oil seal of the crankcase and apply some oil onto the oil seal lip.

Install right crankcase cover onto the right crankcase. (9 bolts)

Torque value: 1.5~2.0kgf-m



MOUNTED COIL SET INSTALLATION

Install the coil set onto right crankcase cover. (2 screws)

Install pulse generator. (2 screws) Tighten the cable guide. (2 screws)


Torque: 1.5~2.0kgf-m


Tie the wire harness hose onto the indent of crankcase.

Caution

Make sure that the wire harness is placed under the pulse generator.

Install A.C. generator connector and pulse generator connector.

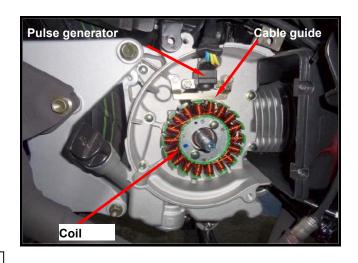

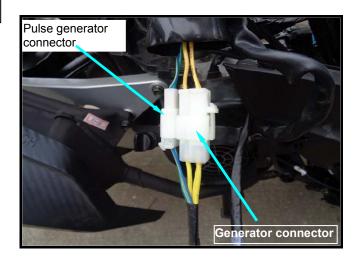

10-6 A.C. GENERATOR

FLYWHEEL INSTALLATION

Make sure that there is no magnetic powder. If so, clean up it. Align insert on crankshaft with the flywheel groove, and then install the


flywheel. Hold the flywheel with flywheel holder,


and tighten its nut.

Torque value: 5.0~6.0kgf-m


Special service tool: Universal fixtur

Install the cooling fan. (4bolts) Torque value: 0.8~1.2kgf-m

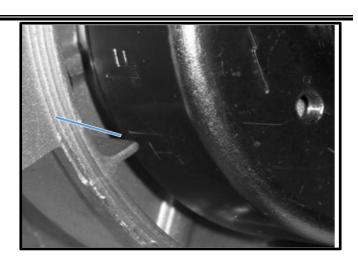

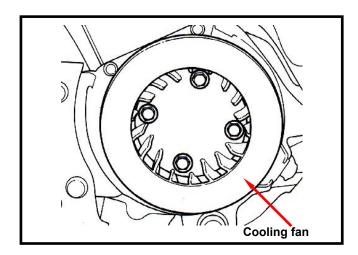


Install the cooling fan shroud. (4 bolts)
Install the exhaust muffler. (3 bolts, 2 nuts)
Install the body cover.
Add some engine oil according
the specified quantity.

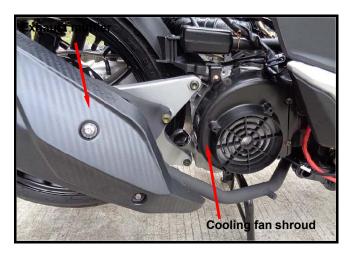

11. CRANKCASE/CRANKSHAFT

CONTENTS —			
MECHANISM DIAGRAM	11-1		
OPERATIONAL PRECAUTIONS	11-2		
DISASSEMBLY OF CRANKCASE	11-3		
CRANKSHAFT INSPECTION	11-5		
Bearing Inspection	11-5		
ASSEMBLY OF CRANKCASE	11-6		

MECHANISM DIAGRAM

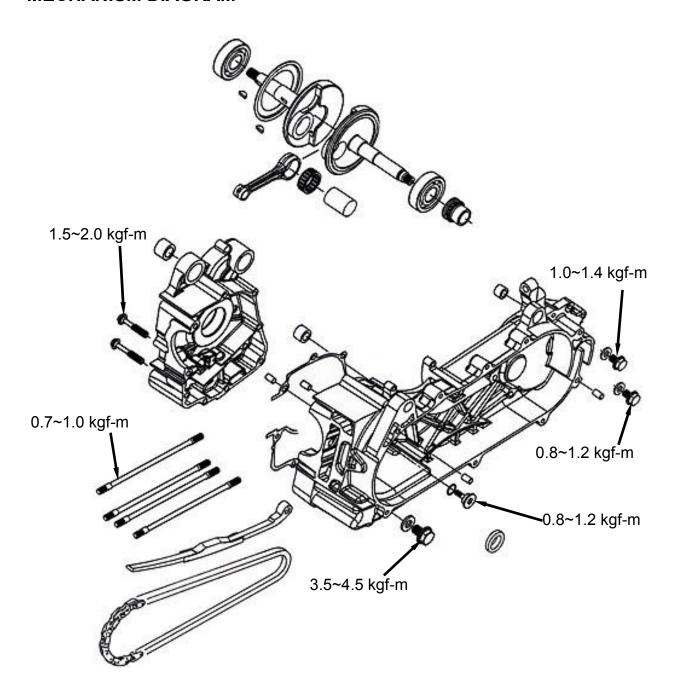

11-2 CRANKCASE/CRANKSHAFT

OPERATIONAL PRECAUTIONS

General Information

 This Section contains descriptions concerning disassembly of the crankcase so that the crankshaft can be serviced.

Complete following operations before disassembling crankcase.

Engine Chapter 5
Cylinder head Chapter 6
Cylinder and piston Chapter 7
V-belt Drive pulley Chapter 8
AC generator/ Starting Clutch Chapter 10
Start motor Chapter 16

 If the crankshaft bearing or timing sprocket need be replaced, then the crankshaft set have to replaced.

Specification

Specification					
Item	Standard	Limit			
Left, right clearance of the big end of the connecting rod	0.100~0.350	0.550			
Radial clearance of the big end of the connecting rod	0.000~0.008	0.050			
Run-out	Left side: Below 0.035 Right side: Below 0.035	Left side: 0.035 Right side: 0.030			

I Init: mm

Torque value

Bolts for crankcase	1.5~2.0 kgf-m
Bolts for cylinder/cylinder head	0.7~1.0 kgf-m
Engine oil draining plug	3.5~4.5 kgf-m
Bolts for cam chain tensioner	0.8~1.2 kgf-m

Special Service Tools

Crankcase remover/set
Crankshaft installation puller
Inner type bearing puller
Outer type bearing puller
Bearing pressing tools
Oil seal pressing tools


TROUBLE DIAGNOSIS

Engine noise

- · Loose crankshaft bearing
- · Loose crankshaft pin bearing
- Wear piston pin or piston pin hole

DISASSEMBLY OF CRANKCASE

Remove the 2 bolts from the right crankcase.

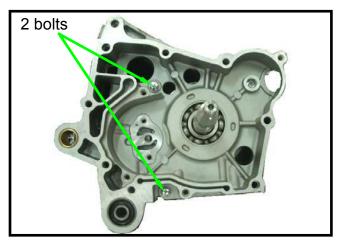

Remove the cam chain tensioner (hex socket bolt) from the left side of crankcase.



Place the left side of crankcase upward, and then install the crankcase remover/set onto the crankcase.


Drive the screw of the crankcase remover/set into the crankcase, and then separate the left and the right crankcases. Remove the cam chain.

⚠ Caution

- Never pry out the connection surfaces of crankcases as separating.
 Otherwise, the connection surfaces could be damaged and cause oil leaking.
- It have to separate the cam chain and the drive gear before pressing out the both left and right crankcases.

Special Service Tools: Crankcase remover/set




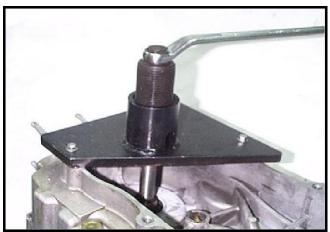

Remove the crankshaft from the right crankcase.

⚠ Caution

 The left and right bearings of crankshaft is to press-fit onto the crankshaft.

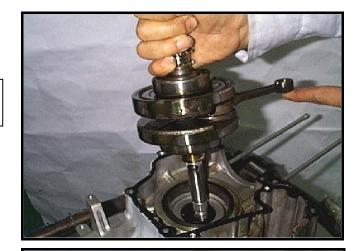


Remove gasket and dowel pins (2). Scrape gasket residues off the crankcase contact surface.

⚠ Caution

- Do not damage contact surface of the crankcase.
- Soap the gasket residues into solvent and the residues will be removed easily.




Remove oil seal from the left crankcase.

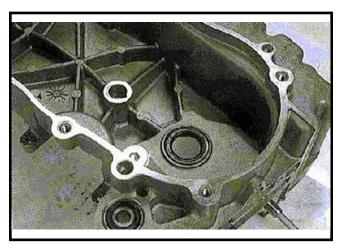

CRANKSHAFT INSPECTION


Measure left and right clearance of connecting rod big end.

Service limit: Replace when it is more than 0.55 mm

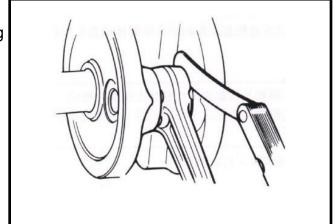


Measure the radical clearance of the big end at the vertical directions.

Service limit: 0.05 mm

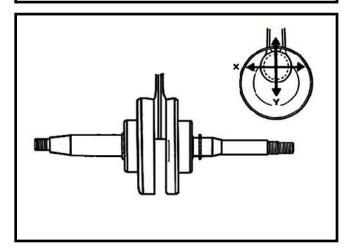

Place the crankshaft onto a V-block and measure run-out of the crankshaft with dial gauge.

Service limit: Left side: 0.035mm Right side: 0.030mm

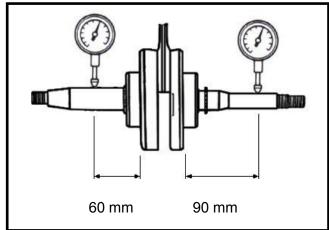


Bearing Inspection

Rotate the bearing with fingers and make sure the bearing can be rotated smoothly and quietly.

Check if the inner ring is connected onto the crankshaft tightly.

Replace crankshaft as a set when noise or looseness is detected.

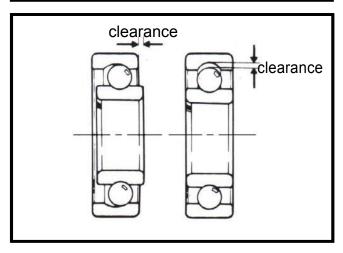


ASSEMBLY OF CRANKCASE


Install cam chain into the chain hole of the left crankcase, and then split out the cam chain.

⚠ Caution

 Do not damage the cam chain as installing the crankshaft.


Install crankshaft into the left crankcase and then install two dowel pins and new crankcase gasket.

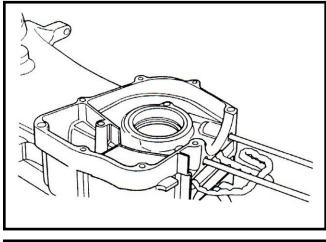

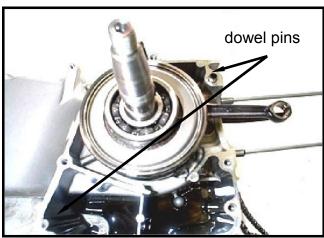

Install the right crankcase and tighten the crankcase bolts (2 bolts).

Torque value: 1.5~2.0 kgf-m

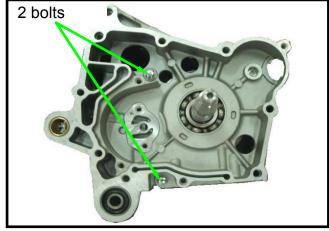

Install the cam chain tensioner.

Install a new O-ring onto the mounting bolt of the chain tensioner.

Apply some oil on the O-ring and tighten the bolt.

Torque value: 0.8~1.2 kgf-m

⚠ Caution

 The O-ring must be installed into the bolt's groove.



Apply with some grease onto the oil seal lip and then install it onto the left crankcase.



Press-fit the oil seal to specified position with the oil seal installer (19.8x30x5).

Special service tools: the oil seal installer (19.8x30x5)



12. BODY COVER

CONTENTS

OUTER PARTS	12-1
MAINTENANCE INFORMATION	12-3
FRONT PANEL	12-4
HANDLE COVER	12-6
TOP OF TOO BOX	12-7
BODY COVER/REAR CARRIER	12-8
/GLOVE BOX/REAR FENDER	12-8
GLVE BOX FRONT COVER	12-11
FLOOR PEDALS	12-11
LIFT/RIGHT SIDE COVER	12-11
FRAME FLOOR	12-12
FENDER BACK	12-12


OUTER PARTS

number	photograph	name	number	photograph	name
1		Rear view mirror	4	1	Front circumference
2	13	Before the instrument cover	5	≥ 3	Lower front wall connection
3	5	Rear carrier	6		lid of a kettle
7	5	Decorative pieces on the front panel	12		Left/Right guard strip
8	5	Instrument shell	13	-1	SEAT ASSY
9		Glove box	14	12	BODY COVER
10		Carburetor adjusting cover	15		Tool box fittings
11		BATTERY COVER	16	-9	Tool box cover

12-2 BODY COVER

17		FLOOR PANEL	21	8	CLIP ASSY CENTER
18		Glove box cover	22		Front fender
19		hold-all	23	14	Front fender back
20	14	VIN NUMBER COVER	24		Frame fender
25		Front fender back	29		Rear wheel fender

MAINTENANCE INFORMATION Body covers disassemble sequence:

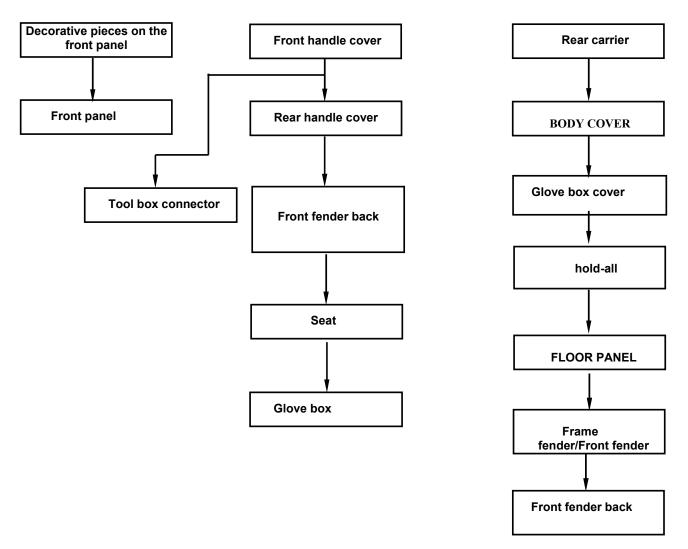

- Be careful not to damage various covers in disassembly or re-assembly operation.
- Never injure hooks molded on the body covers in disassembly or re-assembly operation.
- Align the buckles on the guards with slot on the covers.
- Make sure that each hook is properly installed during the assembly.
- Never compact forcefully or hammer the guard and the covers during assembly.

12-4BODY COVER

FRONT PANEL


Removal:

Remove the Front panel trim.

No need to remove screw fixing, buckle type installation)



Remove the mounting screws and bolt.

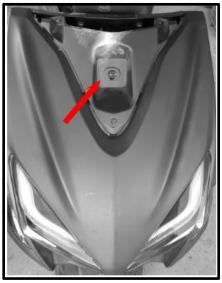

Remove the mounting screws and bolt.



Remove the mounting screws and bolt.(8 screw)



Remove the front under cover 2 mounting screws Between the front under cover and the frame.



Installation:

Install according to the reverse procedure of removal.


⚠ Caution

With the clipper to fix the end-section of the handlebar cover. Do not pull it forcedly to avoid to breaking the hooks.

12-6 BODY COVER

HANDLE COVER Removal

Remove the mounting screws (6 screws) between the front handle cover and the rear handle cover.

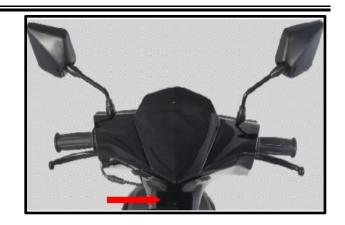

Remove the front handle cover. Remove the speedometer cable.

Remove the rear handlebar cover. (2 screws) Removed the rear handle cover.




Installation:

Install according to the reverse procedure of removal.



With the clipper to fix the end-section of the handlebar cover. Do not pull it forcedly to avoid to breaking the hooks.

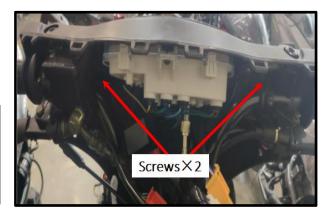

TOP OF TOO BOX

Remove the 6 mounting screws between the front cover and the front inner box.



Remove the hook screw bolt from the Top of toolbox .



Remove the main switch cover.



Remove the front cover and front under cover. Remove the 6 mounting screws between the floor panel and the front inner box.

Installation

Install the top of too box according to the reverse procedure of removal.




12-8 BODY COVER

Remove the Tool box connector.

Installation

Install the inner box A and the front inner box B according to the reverse procedure of removal.

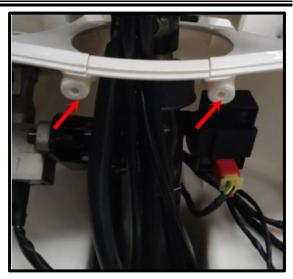


BODY COVER/REAR CARRIER /GLOVE BOX/REAR FENDER

Removal

Open the seat.

Remove 4 bolts in front of the Glove box.

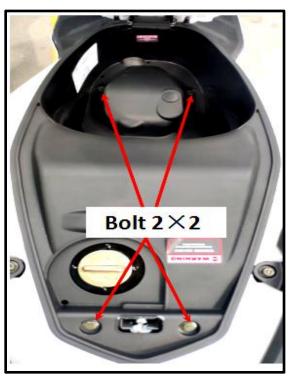


Remove 3 bolts the Rear Carrier.




Remove the 2 mounting bolts of the rear fender.



Remove the 2 mounting screws the Battery cover.

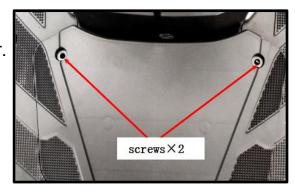

Remove the 4 mounting screws the Box front cover and glove box front cover.

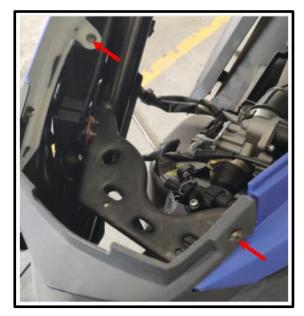

12-10 BODY COVER

Remove entire the body cover between the body cover and the frame. Then you can do further disassembly.





Remove the rear carrier.
Remove the glove box.
Remove the rear fender.
Remove the left/right body cover Installation

Install the body cover and rear carrier and glove box according to the reverse procedure of removal.

GLVE BOX FRONT COVER


Removal
Remove the 2 screws .
Remove the glove box front cover.


Installation

Install the front center cover according to the reverse procedure of removal.

FLOOR PEDALS

Removal
Remove the 4 bolts from the luggage box.
Remove the front center cover

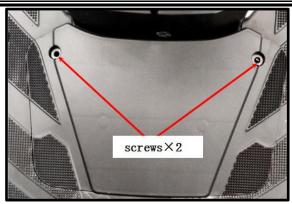

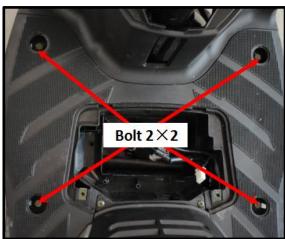

LIFT/RIGHT SIDE COVER

Removal

Remove the left/right side 2 mounting screws in the front of the side cover.

Remove the left/right side cover.
Installation
Install the side cover according to the reverse procedure of removal.



12-12 BODY COVER

FRAME FLOOR

Removal

Remove the floor panel. Remove the left/right side cover.


Remove the left/right side 4 mounting bolts between the under cover and frame.




Install the under cover according to the reverse procedure of removal.

FENDER BACK

Remove front wheels. Remove 3 mounting bolts. Remove 2 screws.

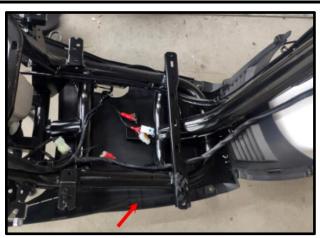

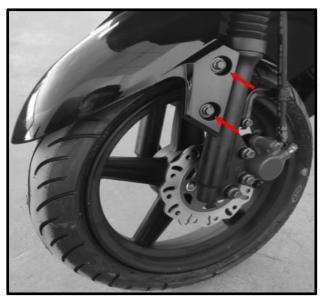

13. BRAKE

CONTENTS

MECHANISM DIAGRAM	13-1
Front Disc Brake System	13-1
MECHANISM DIAGRAM	13-2
Rear Drum Brake System	13-2
MAINTENANCE INFORMATION	13-3
TROUBLE DIOGNOSIS DISC BRAKE	13-4
HYDRAULIC BRAKE SYSTEM INSPECTION	13-5
BRAKE FLUID REPLACEMENT/ AIR-BLEED	13-6
BRAKE CALIPER	13-7
BRAKE DISC	13-8
BRAKE MASTER CYLINDER	13-8
Rear drum brake	13-10

MECHANISM DIAGRAM Front Disc Brake System

- 1.Cap
- 2.Diaphragm
- 3. Master Cylinder
- 4.Piston Set
- 5. Dust Cap
- 6. Front Brake Hose ASSY
- 7. Front Brake Caliper ASSY B
- 8.Piston
- 9.Oil Seal
- 10.O-ring
- 11.Pad ASSY
- 12.Spring
- 13. Caliper Holde
- A.Master Cylinder Bolt
- **B.Brake Hose Bolt**
- C.Bleed Valve
- D.Caliper Bolt

Caution:

Only Grade DOT4 glycol based hydraulic brake fluid is equipped in brake system of this vehicle.

Don't use or mix with silicon or fossil oil based fluid when refilling, otherwise the brake system will be damaged.

Keep the container properly sealed and away from reaching of child when stocking brake fluid. Don't use long-stocking or unsealed brake fluid.


Take care to avoid any dirt or dust interring the brake system when refilling brake fluid. Use fresh brake fluid only to wash the parts of brake system.

Dirty brake disk and pad will affect brake efficiency. Replace or clean it by neutral abstergent.

Warning:

Brake fluid can damage the parts of plastic, paint and rubber due to chemistry.

MECHANISM DIAGRAM Rear Drum Brake System

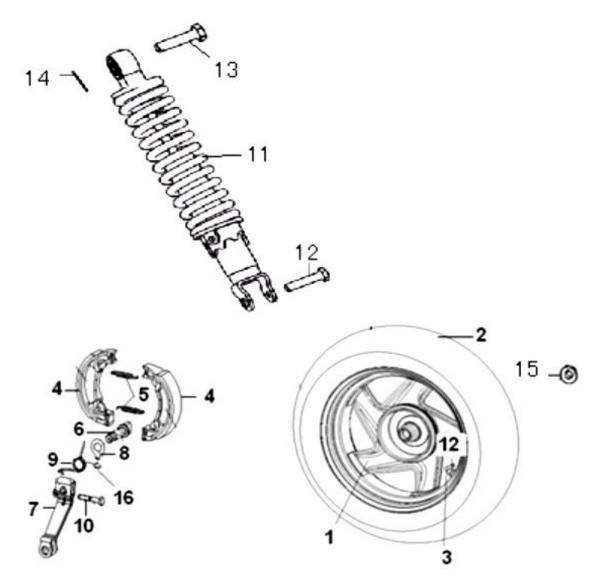

1 RR. RIM COMP. 3.5X12 2. TIRE 120/70-12 3. RIM VALVE Z2-01-1 4. BRAKE SHOE KIT 5. SPRING(BLACK) 6. CAM SHAFT 7. CAM SHAFT LEVER, ASSY 8. BRAKE INDICATOR PLATE 9.TENSION SPRING 10. HEX. BOLT 6X30MM 11. RR. ABSORBER ASSY. (BLACK) 12. BOLT (GOLD COLORED)8X31MM 13. BOLT10X1.25 X40MM 14. SPLIT PIN (GOLD COLORED)1.2X22MM 15. U NUT 16X1.5MM

MAINTENANCE INFORMATION

Precautions in Operation

⚠ Caution

Installing lining dusts may cause disorders of respiration system or cancer, therefore, never use air hose or dry brush to clean brake parts. Use vacuum cleaner or other authorized tool instead.

- The brake caliper can be removed without removing the hydraulic system.
- After the hydraulic system is removed, or the brake system is felt to be too soft, bleed the hydraulic system.
- While refilling brake fluid, care should be taken not to let the foreign material entering into the brake system.
- Do not spill brake fluid on the painted surfaces, plastic or rubber parts to avoid damage.
- Check the operation of the brake system before you go.

Specifications Unit: mm

Item	Standard	Limit
The thickness of front brake disc	3.50	2.00
Front brake disc eccentricity	0.15	0.30
Master cylinder inner diameter	25.40	_
OD of front brake disc	190.00	_
I.D. of rear brake drum	130.00	
Thickness of rear brake shoe	4.50	3.50

Torque values

Bolt for front brake lever	0.8~1.2kgf-m
Bolt for rear brake lever	0.8~1.2kgf-m
Brake hose bolt	3.3~3.7kgf-m
Bolt for brake caliper	3.1~3.5kgf-m
Air-bleed valve	0.8~1.0kgf-m

TROUBLE DIOGNOSIS DISC BRAKE

Soft brake lever

- Air inside the hydraulic system
- Hydraulic system leaking
- Worn master piston
- Worn brake pad
- Poor brake caliper
- Worn brake lining/disc
- Low brake fluid
- Blocked brake pipe
- Warp/bent brake disc
- Bent brake lever

Hard operation of brake lever

- Blocked brake system
- Poor brake caliper
- Blocked brake pipe
- Seized/worn master cylinder piston
- Bent brake lever

Uneven brake

- Dirty brake lining/disc
- Poor wheel alignment
- Clogged brake hose
- Deformed or warped brake disc
- Restricted brake hose and fittings

Tight brake

- Dirty brake lining/disc
- Poor wheel alignment
- Deformed or warped brake disc


Brake noise

- Dirty lining
- Deformed brake disc
- Poor brake caliper installation
- Imbalance brake disc or wheel


HYDRAULIC BRAKE SYSTEM INSPECTION

Inspection

Visual inspect for brake fluid leaking or damage. Check if brake hose connection loosen with wrench and turn the handlebar from right to left motion or press down the shock absorber to check if there is something is interfered with the brake system or brake components.

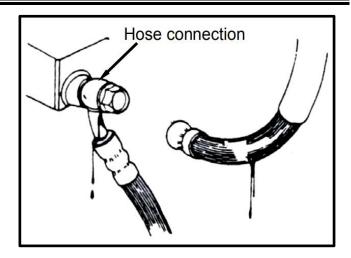

Operate the brake system and check the brake lining. Check the front brake from front side, and replace the brake lining with new one when the brake lining wear limitation groove reaches to the brake disc.

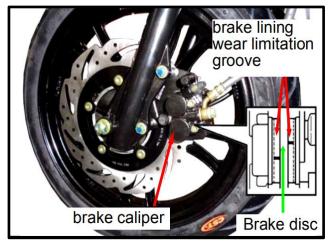

Park the motorcycle on a flat ground and check its brake fluid level.

Recommended brake fluid: WELLRUN DOT 3 brake fluid

⚠ CAUTION

- The fluid level will not be correct if parking the motorcycle in title or just parking. It has to waiting for around 3~5 minutes.
- Never use faked brake fluid to prevent from chemical reaction.
- It has to apply with same brand brake fluid to sure the brake performance.


Brake Fluid Add

Turn the handlebar to let the master cylinder in horizontal position before removed the master cylinder cap.

Place a rag onto painting, plastic or rubber components when conduct brake system maintenance.

⚠ CAUTION

 Do not over the upper level when adding brake fluid and avoid to spilling brake fluid on painted surfaces, plastic or rubber components to result in their damages.

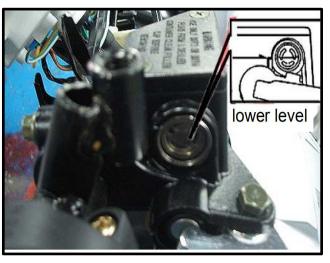



13-6 BRAKE

Remove the master cylinder cap and diaphragm.

Add good quality brake fluid and it has to add same brand brake fluid into the master cylinder. Clean dirty brake disc.

⚠ CAUTION

The dirty brake lining or disc will reduce the brake performance. The mixed non-compatible brake fluid will reduce brake performance. Foreign materials will block the system causing brake performance to be reduced or totally lost.

BRAKE FLUID REPLACEMENT/ AIR-BLEED

Connect drain hose to drain valve.

Open the drain valve on the caliper and hold and release the brake lever alternatively until the old brake fluid is entirely drained out. Close the drain valve and add specified brake fluid into the brake master cylinder.

⚠ CAUTION

To reuse the spent brake fluid will effect brake performance.

Connect one end of transparent hose to the drain valve, and put the other end into a container.


Open the drain valve around 1/4 turns, and at the same time hold the brake lever until the there is no air bubble in the drain hose and also feeling resistance on the brake lever. Close the drain valve when finishing the brake system refilling fluid procedure, and operate the brake lever to check whether air bubble is in brake system or not. If brake is still soft, please bleed the system as described below.

1. Tightly hold the brake lever and open the drain valve around 1/4 turns, and then close the valve.


△ CAUTION

- Do not release the brake lever before the drain valve is closed.
- Always check the brake fluid level when carrying out the air bleeding procedure to avoid air entering into the system.
- Slowly release the brake lever, and wait for a few seconds until it reaches its top position.
- position.

 3. Repeat the steps 1 and 2 until there is no air bubble at the end of the hose. Tightly close the drain valve.
- 4. Make sure the brake fluid is in the UPPER level of the master cylinder, and refill the fluid if necessary.
- 5. Cover the cap.

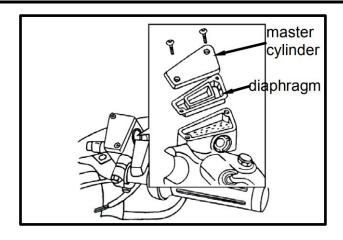



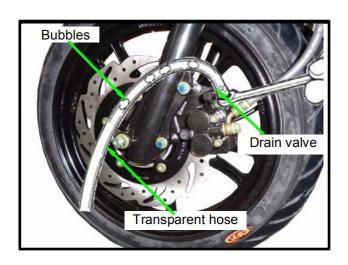

BRAKE CALIPER

Removal

Place a container under the brake caliper, and loosen the brake hose bolt and finally remove the brake hoses.



⚠ CAUTION

 Do not spill brake fluid on painted surfaces.

Remove two caliper bolts and the caliper.

Make sure the brake lining condition. Replace the lining if the brake lining wear limitation groove close to the brake disc.

Brake Lining Replacement

Compress the caliper and let the brake lining out of the caliper mounting plate. Compress the brake lining locking spring. Remove the inner brake lining firstly and then remove the outer brake lining.

Compress the brake caliper at first as installation. Install the inner brake lining firstly, and then install the outer brake lining.



Install the brake caliper and tighten the attaching bolts securely.

Torque: 3.3 kgf-m ⚠ CAUTION

- Use M8 x 35 mm flange bolt only.
- Long bolt will impair the operation of brake disc.


Tighten the lining guide bolt.


Torque: 1.8 kgf-m


Use two seal washers and hose bolts to lock the hose and brake caliper in place.

Torque: 3.5 kgf-m

Refill up the brake fluid to the reservoir and make necessary air bleeding.

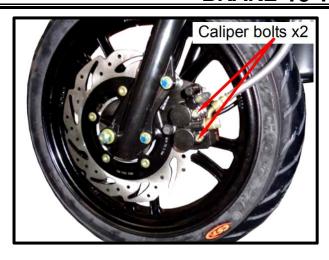

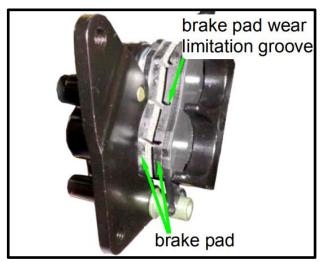

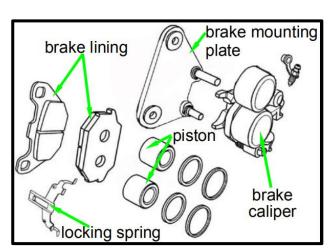

BRAKE DISC

Inspection

Visually check the brake disc for wear or

Measure the thickness of the disc at several places. Replace the disc if it has exceeded the service limit.

Allowable limit: 2.0 mm


brake disc micrometer

Remove the brake disc from wheel. Check the disc for deformation and bend.

Allowable limit: 0.30 mm

CAUTION

- Do not let grease touch to the brake disc that will cause brake performance.
- Do not clean the brake lining with air gun. Operator should wear mask & glove and use vacuum cleaner to clean the brake linina.

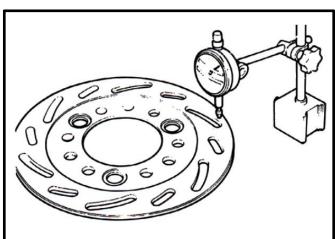

BRAKE MASTER CYLINDER

Removal

 $oldsymbol{\Delta}$ caution

Do not let foreign materials enter into the cylinder.

⚠ CAUTION

The whole set of master cylinder, piston, spring, diaphragm and circlip should be replaced after removal.

Remove the front and rear handlebar guards.

Remove the leads of brake lamp switch. Drain out the brake fluid.

Remove the brake lever from the brake master cylinder.

Remove the brake hose.

Remove the master cylinder seat and the master cylinder.


Remove the rubber pad.


Remove the circlip.

Remove the piston and the spring.

Clean the master cylinder with

recommended brake fluid.

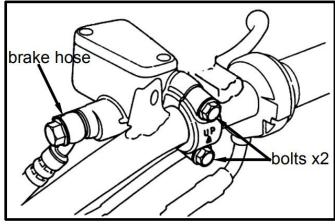

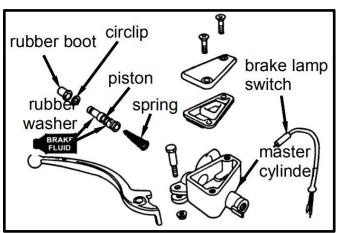

Inspection

Check the master cylinder for damage or scratch. Replace it if necessary.


Measure the cylinder inner diameter at several points along both X and Y directions.


Replace the cylinder if the measured values exceed allowable limit.


Allowable limit: 11.055 mm

Measure the outer diameter of the piston. Replace the piston if its measured value exceeds allowable limit.

Allowable limit: 10.945 mm

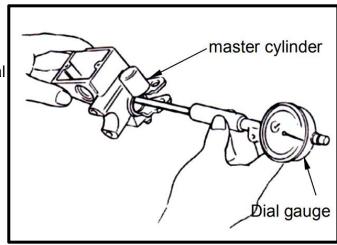

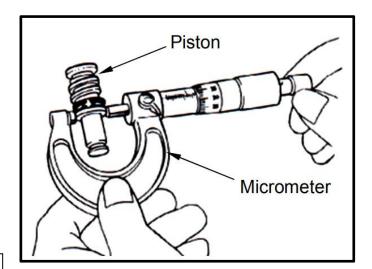

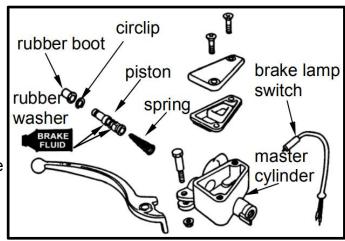

Assembly CAUTION

It is necessary to replace the whole set comprising piston, spring, piston cup,

and circlip.
Make sure there is no dust on all components before assembling.

Apply clean brake fluid to the piston cup, and then install the cup onto the piston.

Install the larger end of the spring onto the master cylinder.

The master cup's cavity should be face inside of master cylinder when installing the master cup.

Install the circlip.

⚠ CAUTION

- Never install cup lip in the opposite direction.
- Make sure the circlip is seated securely in the groove.

Install the rubber pad into groove properly.

INSTALLATION

Place the master cylinder onto handlebar, and install the split ring and bolts. The "UP" mark on the split ring should face upward.

Align the split ring on the master cylinder seat with the alignment point on the handlebar.


Tighten the upper bolt of the seat to specified torque value, and then tighten lower bolt to the same specified torque value.


Install the brake lever, and connect leads to brake lamp switch.

Connect brake hoses with 2 new washes. Tighten the brake hose bolt to the specified torque value.

Torque value: 3.5 kgf-m

Make sure the hose is installed correctly.

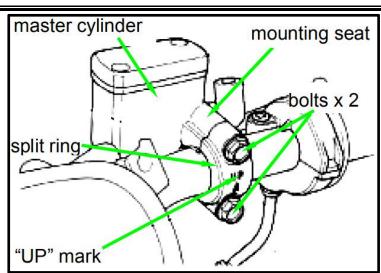

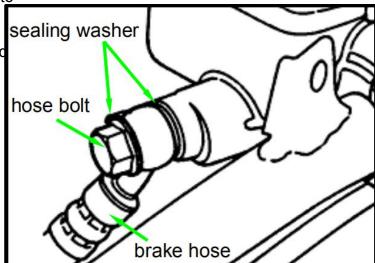

Rear drum brake Disassembly

Remove the muffler.

Remove the fixing nuts of the rear wheel. Remove the rear wheel.


Remove the brake shoe assembly.

△ CAUTION

- Replace the brake shoe assembly.
- If the brake shoe will be used again, mark it on

the side part before disassembly so as to reinstall

it at the original place.

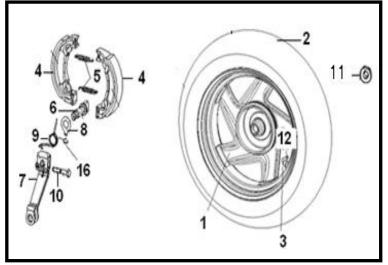

Check

Check whether the brake drum and the brake shoes are abraded. Replace it if necessary.

Measure the maximum brake shoe thickness and the maximum inner diameter of brake drum.

- * Note
- · Measure with micrometer.
- Measure the brake shoe thickness and the inner diameter of brake drum

If the thickness of the brake shoe is below the required value for maintenance or it is stained with grease, please replace it.

Note: replace brake shoes in pair.

Inner diameter of the rear brake drum ϕ 130mm

Thickness of rear brake shoe 4.5mm

Limit for use: inner diameter of brake drum ϕ 131mm

brake shoe

3.5mm

Installation

Install the brake shoe assembly.

Install the rear wheel.


Install the muffler.


Torque force:

Fixing nuts for rear wheel: 100-113N·m

Rear brake:

- 1 mounting bolt of rear rocker arm (12)
- 2. rear brake rocker arm assembly (7)
- 3. set nut for rear wheel (11) 4.real indicator (8)
- 5. rear brake return spring (9)
- 6. rear brake camshaft (6) 7. brake shoe assembly (4)
- 8. brake shoe tension spring (5)
- 9. cover tyre E11 75R 000216 (2)
- 10. rear rim assembly 3.50×12 (1)

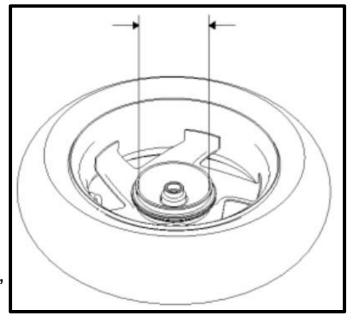

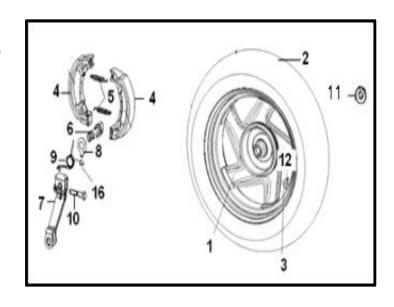


14. STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER

CONTENTS

MECHANISM DIAGRAM	14-1
PRECAUTIONS IN OPERATION	14-2
TROUBLE DIAGNOSIS	14-2
STEERING HANDLE	14-3
FRONT WHEEL	14-4
FRONT SHOCK ABSORBER	14-9
FRONT FORK/STEERING COLUMN	14-9

MECHANISM DIAGRAM

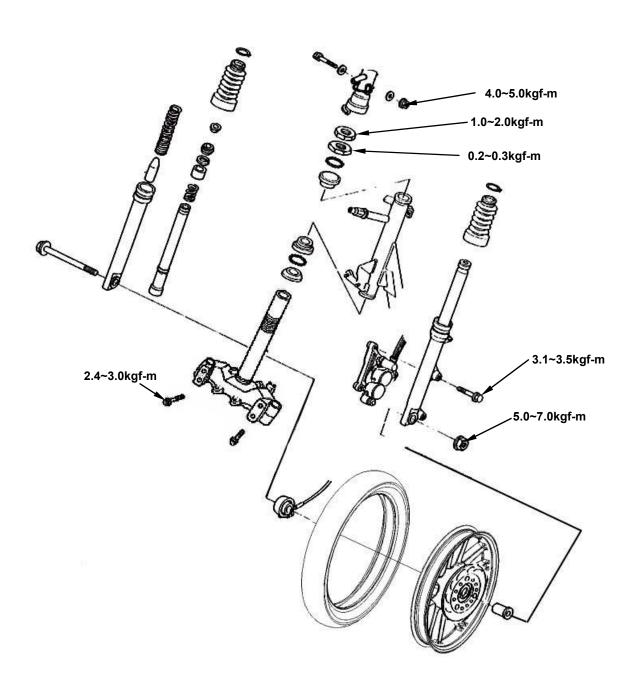

14-2 STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER

PRECAUTIONS IN OPERATION

General Information

- Before remove front wheel, use a jack to lift the body until front wheel free of ground, and take care not to rotate body in reverse.
- Be careful not to allow oil or grease get on brake drum or linings.

Torque values

Front wheel axle	5.0~7.0kgf-m
Steering handlebar nut	4.0~5.0kgf-m
Steering column top cone sliding ring	0.2~0.3kgf-m
Steering column lock nut	1.0~2.0kgf-m
Speedometer cable nut	0.15~0.3kgf-m
Front shock absorber: Upper nut	2.4~3.0kgf-m

Tools

Special service tools

Steering column wrench
Bearing remover
Inner type bearing remover
Attachment, 32×35 mm
Attachment, 42×47 mm
Steering column nut wrench
Steering column top cone ring nut wrench

TROUBLE DIAGNOSIS

Hard steering stem

- Over tightening of steering stem lock nut
- Broken steering stem steel ball and cone bearing seat
- Insufficient tire pressure

Steering stem off center

- Uneven left/right cushion
- Bend fork
- Bent front wheel/tire offset

Front wheel wobbling

- Deformed rim
- · Front wheel bearing loose
- Faulty tire
- Wheel axle nut tightened improperly

Soft front suspension

- Weak fork springs
- Oil leakage of the shock absorber seal

Front suspension noise

- · Cushion cover friction noise
- Cushion bolts loose

STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER 14-3

STEERING HANDLE REMOVAL


Remove handle front & rear covers and the front cover (refer to chapter 12).

Front Disc Brake


Remove the 2 bolts of the brake master cylinder, and then take out the master cylinder and the split ring.

⚠ Caution

Do not operate the front brake lever to avoid to pressing out the brake lining when removing the master cylinder.

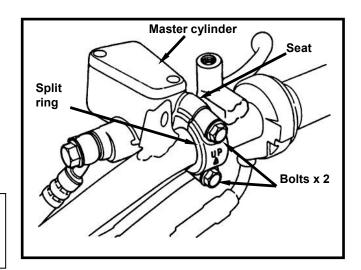


Remove acceleration handlebar screw and then remove the handlebar, acceleration cable, and handlebar cover & seat.

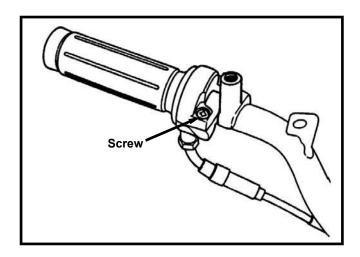

Rear Disc Brake


Remove the 2 bolts of the brake master cylinder, and then take out the master cylinder and the split ring.

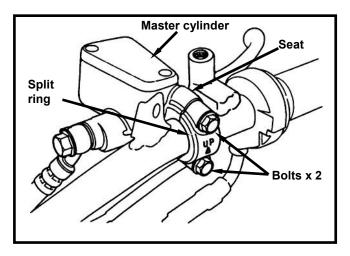

14-4 STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER

With a wrench to hold the handlebar bolt and then remove the nut.


Take out the handlebar after removed the bolt.

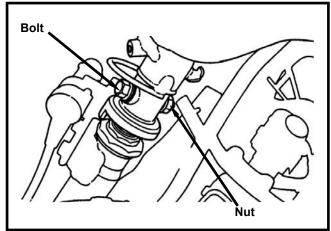

Installation

Install the handlebar according to the reverse procedure of removal.

Apply with some grease onto the handlebar moving parts when installing the acceleration handlebar seat, acceleration handlebar, and acceleration cable.

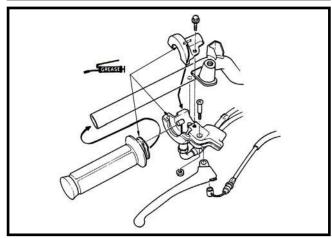


FRONT WHEEL

Removal

Disc Brake type

Support body bottom and lift front wheel free of ground.


Remove the bolts, and disconnect speedometer cable from the gear box.

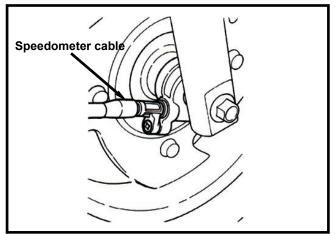

Remove the wheel axle nut and pull out the axle. Then, remove the front wheel.



Do not operate the front brake lever to avoid to pressing out the brake lining when removing the master cylinder.

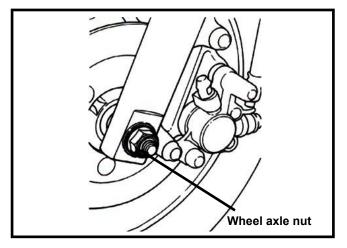


STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER 14-5

Inspection

Wheel axle

Set the axle in V-blocks and measure the run-out.

Service limit: 0.2 mm.

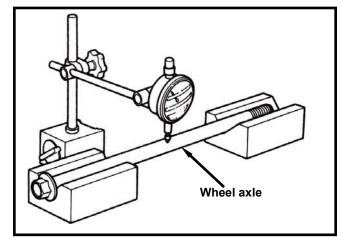


Wheel Rim


Place the wheel onto a rotated bracket. Turn the wheel with hand and measure its wobble value with a dial gauge.

Service limit:

Radial : 2.0 mm Axial: 2.0 mm

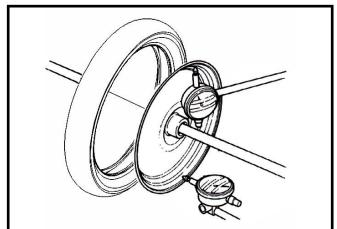

Disassembly (Disc type) Remove 3 hex socket bolts and brake disc.

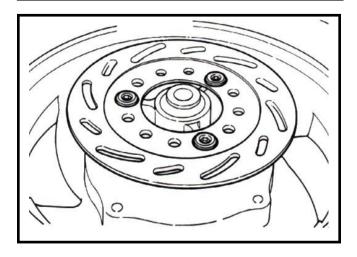

14-6 STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER


Remove the left axle ring and dust seal. Remove the dust seal on the right side of speedometer gear.

Remove the bearing with the inner type bearing remover.

Take out the bearing spacer and then remove the other bearing.

Tool:

Inner type bearing remover

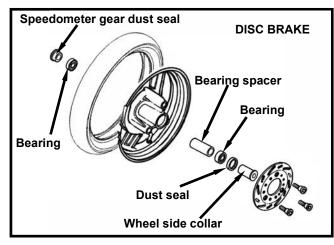

Bearing Inspection

Turn the inner race of bearing with fingers. The bearing should be turn smoothly. Also check if the outer collar is tightly connected to the wheel hub.

If the bearing do not turn smoothly, or if they are too loose in the races, or damaged, then, remove and replace the bearings with new ones.

⚠ Caution


The bearing must be replaced in pair.

Installation

Install the bearing according to the reverse procedure of removal.

Apply some grease into the bearing seat of the wheel hub.

Install the left bearing onto the seat. Install the bearing spacer and then install the right bearing onto the seat.

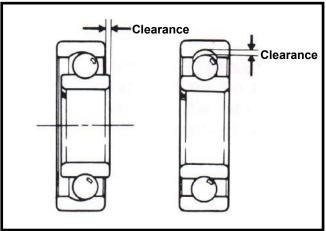

STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER 14-7

⚠ Caution

- Do not install used bearing and replace the bearing once it has been removed.
- Do not the bearing in tile motion when installing.

Tool:


C-type compressor or bearing compressor.


Disc Brake

Apply with some grease inside of the dust bearing.

Install the dust seal and the front wheel side collar

Apply with some grease on both side of the speedometer gear oil seal, and then install the seal.

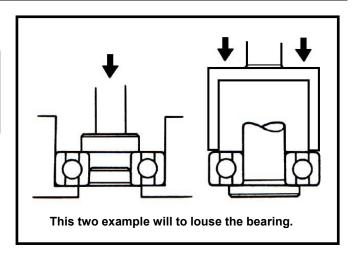

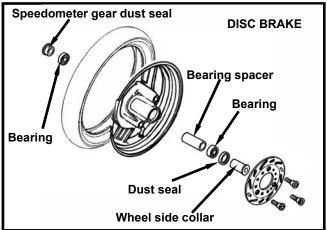

14-8 STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER

Align the flange part on the speedometer gear with the slot of wheel hub, and then install the brake disc (drum brake) or speedometer gear box.

⚠ Caution

Contaminated brake lining will reduce brake performance so the brake lining, brake drum and disc must be free of grease.

Place the front wheel between the front shock absorbers.

Disc Brake


Align the flange part on the speedometer gear with the slot of shock absorber stopper.


Disc Brake


Install the front wheel axle from right shock absorber side.

Install the wheel axle nut, and tighten it to specified torque value.

Torque value: 11.0~13.0kgf-m Connect the speedometer cable to the speedometer gear box.

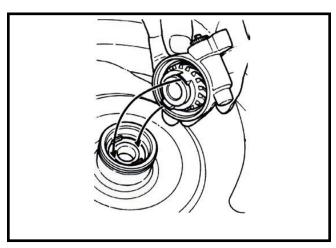

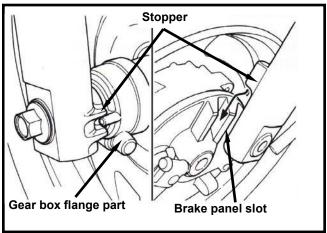

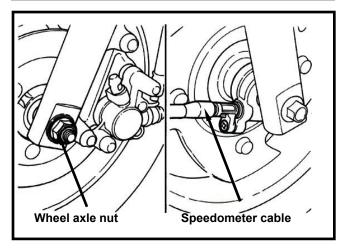


STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER 14-9

FRONT SHOCK ABSORBER


Removal

Remove the front fender, front lower spoiler, front guard, and front wheel as well as front brake components.

Remove the brake fluid hose clipper or cable guide on the left shock absorber. (bolt x 1) As for disc brake, remove the cable guide on the right shock absorber. (bolt x 1)

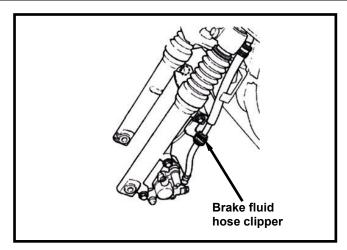

Remove the top connection bolt of the right shock absorber. (bolt x 4)
Remove the shock absorber from the front fork.

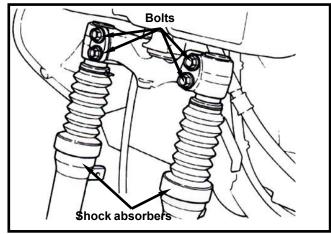


Installation

Install the shock absorbers according to the reverse procedure of removal.

Align the shock absorber top-edge with the top-end level of the front fork when installing the front shock absorber onto the front fork. Then, tighten the nut.

Torque value: 2.4~3.0kgf-m

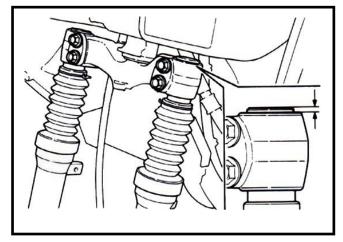

FRONT FORK/STEERING COLUMN


Removal

Firstly, remove the handlebar, front wheel, front brake set, and front shock absorbers. Remove the steering column nut.

Remove the top cone ring, and then remove the steering column.



Place the steering column bearing balls into a parts container to avoid to missing or shortage.

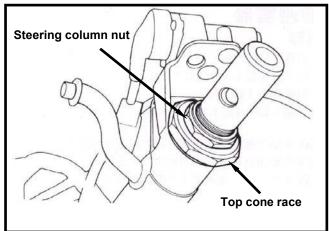

14-10 STEERING/FRONT WHEEL/FRONT SHOCK ABSORBER

With a plastic hammer to tap the steering column slightly, and then remove the top ball bearing seat.

Remove the lower-end cone bearing seat on the frame with a punch.

⚠ Caution

Do not damage the frame and the steering column.

Installation

Install a new top-cone bearing seat onto the top of steering column.

And then, push the lower-cone bearing seat from bottom until to locking position.

⚠ Caution

Do not let the ball bearing in title motion as installation.

Apply with some grease onto the top & bottom bearing balls, and then install the balls into bearing seat.

Press in a new lower cone-race onto the steering column, and lubricate it with grease. Install the steering column.

Lubricate the top-cone race with grease. Drive the cone-race into the steering column until contact with the top bearing seat no clearance. Note, return 1/2 turn and then tighten the top cone race to specified torque. (tighten the race around 1/4~3/8 turn more.)

Torque value: 0.2~0.3kgf-m

⚠ Caution

Do not tighten the top cone race too tight to prevent from damage the ball bearing seat when tightening the top cone race.


Install the steering column nut and lock the top cone race. Then, tighten the nut.


Torque value: 1.0~2.0kgf-m


Install the bearing seat according to the reverse procedure of removal.


⚠ Caution

Check the steering column if it can be turned freely and no clearance in vertical motion.

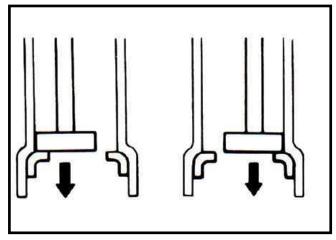

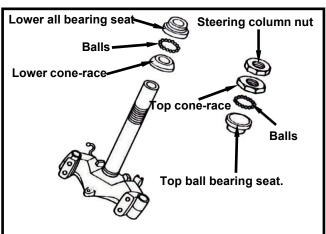

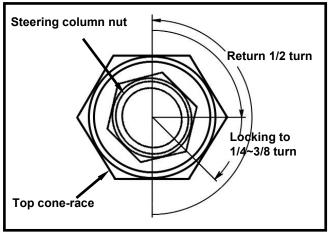


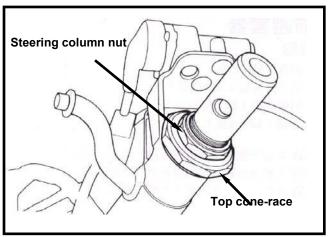

15. REAR WHEEL/REAR SHOCK ABSORBER

CONTENTS			
MECHANISM DIAGRAM15-1			
PRECAUTIONS IN OPERATION			
EXHAUST MUFFLER15-3			
REAR WHEEL15-3			
REAR SHOCK ABSORBER 15-4			

MECHANISM DIAGRAM

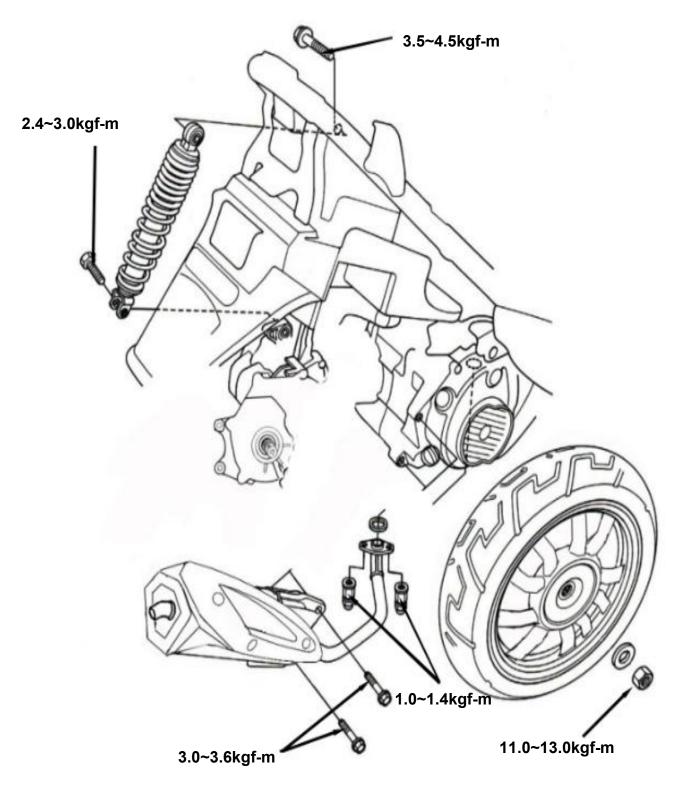

15-2 REAR WHEEL/REAR SHOCK ABSORBER

PRECAUTIONS IN OPERATION

General Information

As for the wheel removal, service, and installation procedures, please refer to the service manual of high speed tire.

Specification

Opcomodicin			
Items		Standard	Limit
Wheel wobbling	Radial	-	2.0
vvrieer wobbiling	Axial	-	2.0
Thickness of rear brake lining		4.0	2.0

Torque values:

Rear axle nut	11.0~13.0kgf-m
Rear shock absorber upper mount bolt	3.5~4.5kgf-m
Rear shock absorber lower mount bolt	2.4~3.0kgf-m
Exhaust muffler connection nut	1.0~1.4kgf-m
Exhaust muffler connection bolt	3.0~3.6kgf-m

TROUBLE DIAGNOSIS

Rear wheel wobbling

- bend wheel rim
- poor tire
- loosen wheel shaft

Shock absorber too soft

insufficient shock absorber spring force

Braking Noise

- worn brake lining
- brake drum deformation
- improperly brake panel installation
- unparalleled brake drum or wheel unparallel.

Poor brake performance

Unit: mm

- Poor brake adjustment
- contaminated brake lining
- worn brake lininggreased brake drum
- contaminated and seized brake cable
- improperly installation of brake cable

EXHAUST MUFFLER

Removal

Remove the front-end nut of the exhaust

muffler. (nuts x 2)

Remove the bolts. (bolts x 3) Remove the exhaust muffler.

Installation


Install the exhaust muffler according to the reverse procedure of removal.





Replace the exhaust muffler gasket if it is broken or deformed.

Torque value:

Exhaust muffler connection bolt: 3.0~3.6kgf-m

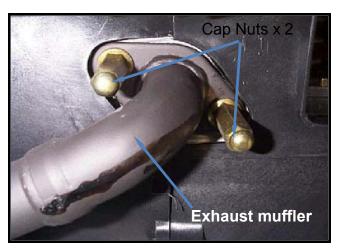

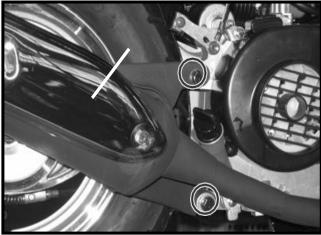

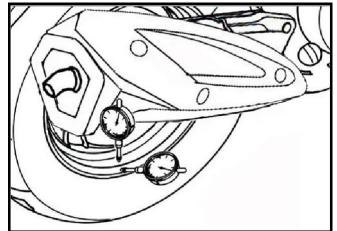



REAR WHEEL

Inspection

Measure wheel rim wobbling.

Service limit: Radial: 2.0mm Axial: 2.0mm

If the wheel rim wobbling out of the specification, except resulted from the wheel rim deformation, it might be loosen or worn final driving shaft bearing or bend, deformed driving shaft.

Removal

Remove the rear inner mudguard. (Bolt x 1) Remove the rear disk brake caliper. (bolts x2)

Remove the rear wheel. (wheel axle nut x1)

15-4 REAR WHEEL/REAR SHOCK ABSORBER

REAR SHOCK ABSORBER

Removal

Remove the luggage box. (bolts x 4) Remove the left & right body covers. (screws x 4, bolts x 3)

Remove the air cleaner bolts (bolts x2) Remove the lower nut of the rear shock absorber (bolt x 1)

Remove the upper nut of the rear shock absorber (bolt x 1)

Remove the rear shock absorber.



Install the rear shock absorber according to the reverse procedure of removal.



The rear shock absorber has to be replaced with one set and can not be replaced by unauthorized persons. Otherwise, it might damage the rubber bushing and construction.

Torque values

Rear shock absorber lower mount bolt: 2.4~3.0 kgf-m
Rear shock absorber upper mount bolt: 3.5~4.5 kgf-m







16. ELECTRICAL EQUIPMENT

MECHANISM DIAGRAM	16-1
PRECAUTIONS IN OPERATION	16-2
SPECIFICATION	16-3
TROUBLE DIAGNOSIS	16-4
BATTERY	16-5
VOLTAGE REGULATOR INSPECTION	16-8
ALTERNATOR CHARGING COIL	16-9
IGNITION COIL	16-9
PULSE GENERATOR	16-11
STARTING SYSTEM	16-12
METER	16-13
HEAD LIGHT	16-15
FRONT TURN SIGNAL	16-16
MAIN SWITCH/HORN	16-17
HANDLE SWITCH	16-18
SIDE STAND SWITCH	16-19
USB	16-20

MECHANISM DIAGRAM

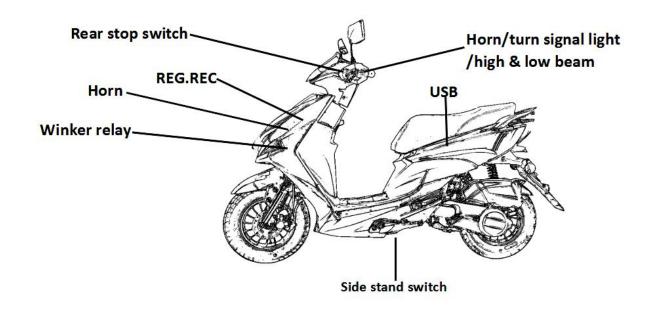

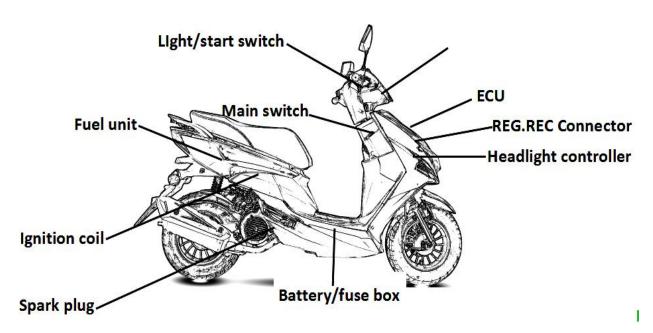

PRECAUTIONS IN OPERATION

Charging System

- When remove the battery, the disconnection sequence of cable terminals shall be strictly observed. (First disconnect the negative cable terminal, next, the positive cable terminal.)
- MF (Maintenance Free) battery does not need to check, add electrolyte or distilled water.
- Battery must be taken out from scooter when charging the battery. But do not open the battery caps.
- Do not quick charge the battery unless in emergency.
- A voltmeter must be used when checking battery charging condition.
- Battery can be charged or discharged alternately. To set a discharged battery idle for a
 prolonged period will shorten its service life and reduce its capacity. Usually, battery's
 capacity will reduce after 1~2 years. After low capacity battery was charged, its voltage
 will increase. If it connects to an additional load, the voltage will reduce suddenly, and
 then go up again.
- Over-charged battery. Usually, the over-charged battery can be seen externally. If a short circuit occurred inside the battery, there will be no voltage on the terminals of battery if voltage regulator does not operate. Then, the battery's voltage will be too high that may reduce battery's life.
- The battery will be self-discharged if it was set idle for a long time. An idle battery must be charged about every 2months.
- A new battery filled with electrolyte will generate a voltage after filled out electrolyte. The
 voltage should be in 12.5V or more after 10 minutes. When electrolyte is not enough, the
 battery must be filled with electrolyte and then charged to prolong the battery's life-span.
- Please check electrical device according to the procedure of diagnosis chart.
- Do not disconnect and connect the connector of electrical devices when current is
 passing these devices because this will generate high voltage and the electrical
 components in the voltage-current regulator will be damaged. The ignition switch must
 be turned OFF before performing anywork.
- Please do not replace with traditional type battery as replacement.
- Please refer to the removal instruction when removing the alternator and the pulse generator.

Precautions in Operation

- When removing the battery, the disconnection sequence of cable terminals shall be strictly observed. (First disconnect the negative cable terminal, next, the positive cable terminal.)
- The model of the spark plug and the tightening torque.
- The ignition timing.
- Adjustment of headlight.
- Removal and installation of AC generator.
- The maintenance-free battery requires no inspection of electrolyte level and refilling of distilled water.
- To recharge the battery, remove the battery from rack without removing ventilation caps.
- Unless in emergency, never rapid-charge the battery.
- The voltage must be checked with the voltmeter while charging the battery.
- As ECU assembly does not require an ignition timing check. In case ignition timing is incorrect, check ECU and AC generator. Verify with an ignition timing light after replacement if necessary.

Starting System

- Starting motor can be removed directly from engine.
- Please refer to chapter 10 for starting clutch removal procedures.

SPECIFICATION

Charging System

Items		3	Specification
	Capacity/type		12V 6Ah
Charging rate		•	STD:0.6A/5~10hrs, emergency charging: 6A/0.5hrs
	Voltage	Full charged	13.5V
	(20°C)	Under charged	12.3V
Capacity			12V / 6.2A
Alternator	Alternator Lighting coil resistance (20°C)		Between yellow-green: 0.8±0.1 Ω
	Charging coil resistance (20°C)		Between white-green: 0.6±0.1Ω
Leaking current			Less 1mA
RPM for starting charging			1700rpm(headlight ON)
Voltage controlled by regulator		ulator	14.5±0.5 V

Ignition System

ightton bystem			
Item		Specification	
	Standard	NGK CR7HSA (Recommended usage)	
	Hot type	NGK CR8HSA	
Spark plug	Cold type	NGK CR6HSA	
	Spark plug gap	0.6~0.7 mm	
	Primary	0.21±10%Ω	
Ignition coil resistance (20°C)	Secondary	With plug cap : 7.6±10%KΩ	
(20 C)	Secondary	Without plug cap : 3.1±10%KΩ	
	"F" Mark	Before TDC 13° / 1800 rpm	
Ignition timing	Timing advanced character	Before TDC 28° / 5000 rpm	
Pulse generator resistance (20°C)		50~200Ω	
Exciting coil resistance (20°C)		400~800Ω	
Ignition coil-primary max. voltage		95~400 V	
Pulse generator voltage		1.7 V above	
Exciting coil voltage		95~400 V	

Starting System

our my oyotom			
Item		Specification	
Starting motor	type	DC TYPE	
	capacity	0.5 KW	

16-4 ELECTRICAL EQUIPMENT

TROUBLE DIAGNOSIS

No voltage

- · Battery discharged
- The cable disconnected
- The fuse is blown
- Improper operation of the main switch
- Low voltage
- The battery is not fully charged
- Poor contact
- Poor charging system
- Poor voltage regulator

No spark produced by spark plug

- The spark plug is out of work
- The cable is poorly connected, open or short-circuited
- Poor connection between ECU and ignition coil
- Poor connection between ECU and the main switch
- Poor main switch
- · Poor ECU.
- A.C.G. is out of work

Starter motor does not work

- The fuse is blown
- The battery is not fully charged
- Poor main switch
- Poor starter switch
- The front and rear brake switches do not operate correctly
- Starter relay is out of work
- The ignition coil is poorly connected, open or short-circuited
- The starter motor is out of work

Intermittent power supply

- The connector of the charging system becomes loose
- Poor connection of the battery cable
- Poor connection or short-circuit of the discharging system
- Poor connection or short-circuit of the power generation system

Charging system does not operate properly

- Burnt fuse
- Poor contact, open or short circuit
- Poor regulator rectifier
- Poor ACG

Engine does not crank smoothly

- · Primary winding circuit
 - Poor ignition coil
 - Poor connection of cable and connectors
 - Poor main switch
- Secondary winding circuit
 - Poor ignition coil
 - Poor spark plug
 - Poor ignition coil cable
 - Current leakage in the spark plug
- Incorrect ignition timing
 - Poor ACG
 - Improper installation of CPS
 - Poor ECU

Weak starter motor

- Poor charging system
- The battery is not fully charged
- Poor connection in the windings
- The motor gear is jammed by foreign material

Starter motor is working, but engine does not crank

- Poor starter motor pinion
- The starter motor runs in reverse direction Poor battery

BATTERY

Removal

Remove the battery cover.

⚠ CAUTION

- Electrolyte (diluted sulfuric acid) is very toxic. Once it spreading on clothes, skin, or eyes, it will cause burned or blind. In case of being spread, flush with great quantity of water immediately, and then send to hospital.
- When clothes is spread by electrolyte, it will contact with skin. So, it must flush with great quantity water to take off the clothes.


Remove the battery cover.


Disconnect the negative (-) cable from the battery first, then the positive (+) cable. Remove the battery.


Install the battery in reverse order of removal.

⚠ CAUTION

 To prevent form circuit short, connect positive(+) terminal at first, and next negative (-) terminal.

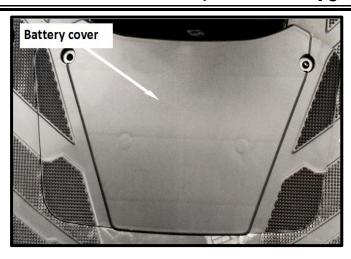

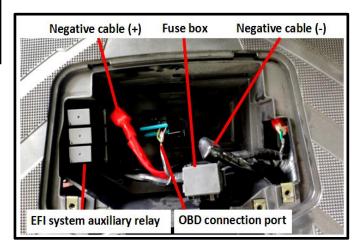

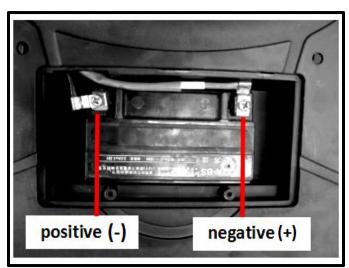

16-6 ELECTRICAL EQUIPMENT

VOLTAGE CHECK

With a digital voltage meter or multimeter to measure battery voltage.

Voltage:

Fully charged: 13.0 – 13.2V (at 20°C) Undercharged: Below

12.3 V (at 20°C)




Connect the Charger positive (+) to the battery positive (+) terminal.


Connect the Charger negative (-) to the battery negative (-) terminal.

	Standard	Max.
Charging current	0.6A	6.0A
Charging time	5~10H	1H

⚠ Warning

- Strictly keep flames away from a charging battery.
- The charging "ON"/ "OFF" is controlled by the charger's switch. Do not control the charging by battery jump wires.
- Turn the charger's switch "OFF" at first before or after charging to prevent from sparks created on the connectors and explosion.
- To charge a battery must be based on the battery's ampere-hour showed on label.

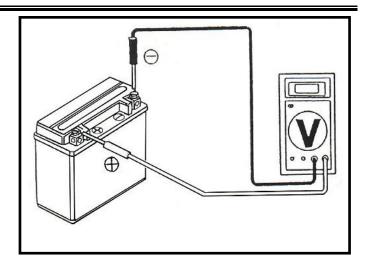

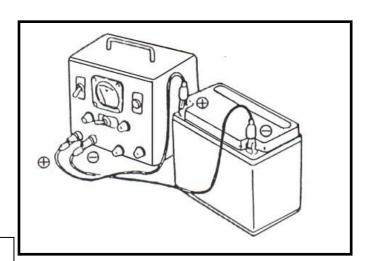

∆ CAUTION

- Quick charge a battery should be used only in an emergency.
- Make sure the current and charging time of above description.
- The battery will be damaged by too much current or too rush charging.
- When finishing charge, it is necessary to measure voltage after 30 minutes.
- After installing the battery, coat the terminals with clean grease.

Charging Voltage/Current Inspection

⚠ Caution

- Before conducting the inspection, be sure that the battery is fully charged. Use a fully charged battery having a voltage larger than 13.1 V. If undercharged, the current changes dramatically.
- While starting the engine, the starter motor draws large amount of current from the battery. Thus, do not start the engine with battery.

After the engine is warmed up, replace original battery with a fully charged battery. Connect a digital voltmeter to the battery terminals.


Connect an ammeter between both ends of the main fuse.

⚠ Caution

When the probe is reversibly connected, use a voltmeter having an indication that the current flows from the positive or the negative direction and the measurement should be at zero, ammeter at one direction only.

⚠ Caution

- Do not use short-circuit cable.
- It is possible to measure the current by connecting an ammeter between the battery positive terminal and the cable position terminal, however, while the starter motor is activated, the surge current of the motor draws from the battery may damage the ammeter. Use the kick lever to start the engine.
- The main switch shall be turned to OFF position during the process of inspection. Never tamper with the ammeter and the cable while there is current flowing through. It may damage the ammeter.

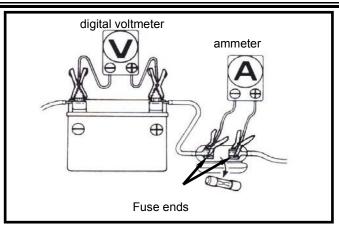

Connect a tachometer.

Turn on the headlight to high beam and start the

Accelerate the engine gradually to the specified revolution per minute and measure the charging voltage/current.

Specified Charging Current:

(headlight OFF) 0.6 A or more/2500rpm 1.2 A or more / 6000 rpm (headlight ON) 0.4 A or more/2500rpm 1.0 A or more / 6000 rpm

Control Charging Voltage: 14.0+/0.5 V / 2000 rpm

⚠ Caution

To replace the old battery, use a new battery with the same current and voltage.

The following problems are related to the charging system, follow the instructions provided in the checking list to correct it if any one of the problems takes place.

- The charging voltage can not exceed the voltage between two battery terminals and the charging current is in the discharging direction.
- The charging voltage and current are too much higher than the standard values.

The following problems are not related to the charging system; correct it if any by following steps indicate in the checking list.

- The standard charging voltage and current can only reach when the revolution of the engine exceeds the specified rpm.
 - Bulbs used exceed their rate and consume too much power.
 - The replacement battery is aged and does not have enough capacity.
- The charging voltage is normal, but the (2) current is not.
 - The replacement battery is aged and does not have enough capacity.
 - Battery used do not have enough electricity or is over charged.
 - The fuse of the ammeter is blown.
 - The ammeter is improperly connected.
- The charging current is normal, but the voltage is not.
 - The fuse of the voltmeter is blown.

16-8 ELECTRICAL EQUIPMENT

VOLTAGE REGULATOR INSPECTION

Remove the front cover. (screws 4 x 2). Remove the front cover mounting bolt(bolt x 1)and remove the left/right turnlight wiring connector. check the continuity between main wire terminals according to following method.

Main wire circuit inspection

man who on our mopostion	
Item (wire color)	Judgment
Check voltage between	
battery terminal (red) and	Battery voltage
ground (green).	
Check continuity between	
ground(green) and frame.	Continuity
Check illumination wire	
(yellow) to ground. (disconnect	
the connector of the resistor's	Continuity &
pin and automatic by-starter	resistance
pin.	
Illumination switch is in OFF)	
Check charging coil (white) to	Continuity &
ground)	resistance

If the measured value is abnormal. check the abnormal wire circuit. If components are good, it could be a poor wire circuit.


If all items are in good condition, then replace the voltage regulator. If main wire circuit check is in normal and there is no loose in the pins of voltage regulator connector, then measure the resistance between the connector of voltage regulator.


Voltage Regulator Check


Unit: Ω If the resistance values are abnormal among the pins, replace the voltage regulator.

⚠ Caution

- Do not touch the probe of multi-meter by fingers, then the resistance values will be incorrect because there is some resistance existence in human body.
- To use the multi-meter recommended by SYM. Otherwise, the measured resistance might be different.

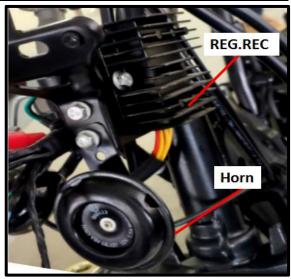

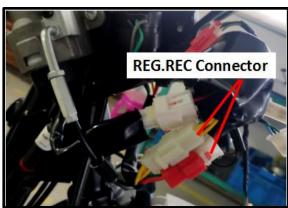

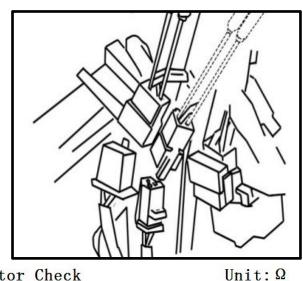

Regulator Check

Red	yellow	yellow	yellow	red	green
yellow		/	/	/	4
ye11ow	/		/	/	5
yellow	/	/		/	5
red	5	5	5		12
green	/	/	/	/	

ALTERNATOR CHARGING COIL

∆ Caution

The check of alternator charging coil and illumination coil can be done when the alternator is mounted on engine.

Check

Remove the 3P connector of the alternator. Measure the resistance between the white wire on yellow wire with a multi-meter.

Standard: $0.6\pm0.1\Omega$ (20°C) Replace the alternator charging coil if the measured value exceeds standard.




Removal


Remove the luggage box, center cover. Remove spark plug cap. Remove the primary coil wire of ignition coil. Remove the fix bolts for the ignition coil, and remove the ignition coil.


Install the ignition coil in reverse order of removal.

△Caution

Install primary coil with black/yellow lead connected to black connector and green lead connected to green connector.

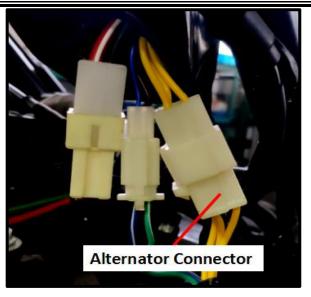

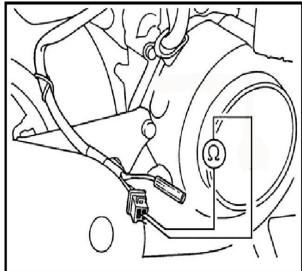

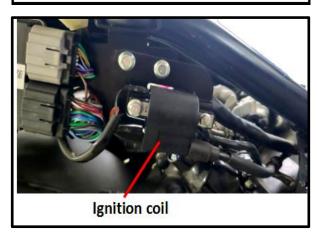

16-10 ELECTRICAL EQUIPMENT

Spark plug confirmation

Remove the spark plug and install a good plug into plug cap, and then ground it to engine ground. Make sure its spark condition. If it is in not good or burnt spark plug, replace the spark plug with new one.

⚠ Caution

 Make sure each wire connection is correct, and test as required. Even the wire connection is in correct, sometimes, it might not be tested occurred.

Connect the high voltage shunt with a multi-meter or input a resistor in the 10M Ω 100V of voltage meter. Connect ignition coil wires, and connect a shunt between primary terminal (black/yellow and green) and frame ground.

Press the starting motor button, or starting lever to test the max. primary voltage of ignition coil. Connection: connect (+) terminal to green side, and (-) to black/yellow side.

⚠ Caution

Do not touch metal parts on the test probe with fingers to avoid electric shock.

Min.voltage:Above95V.

Disconnect the primary coil connector and check the resistance


between primary coil terminals.


Primary coil check


Standard: $0.21\Omega \pm 10\%\Omega$ (at 20° C) Primary coil is good if resistance

within standard.

Primary coil is broken if resistance is infinite. Replace the coil.

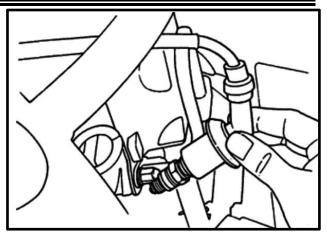

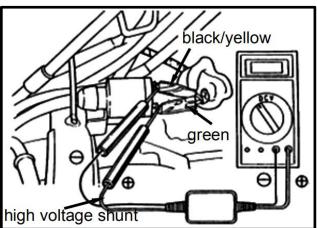

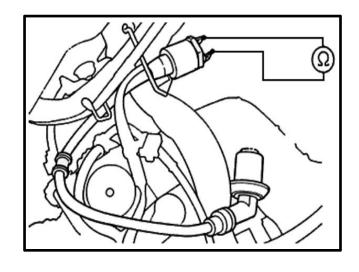

Secondary coil

Attached the spark plug cap, measure the resistance between plug cap side and green terminal.

Standard value: 7-12 kΩ (20°C)


Remove the spark plug cap, measure the resistance between plug cap side and green terminal.


Standard value: 3-5 kΩ (20°C)

Secondary coil is good if resistance within standard.
Secondary coil is broken if resistance is infinite. If the spark plug cap attached and the measured value is exceed standard value, it means the spark plug cap is in not good.

Replacement

Remove the ignition coil bolt to replace the ignition coil if necessary.

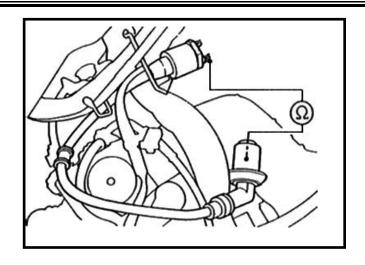

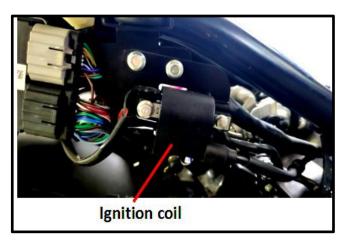

PULSE GENERATOR

⚠ Caution

Checking pulse generator can be done on engine. But, the spark plug must be installed onto the cylinder head, and cylinder compression pressure must be in normal condition.


Check

Remove body cover.

Remove the pulse generator connector. Measure the resistance between blue/yellow terminal on engine side and frame ground.


Standard: $140\pm20\Omega$ (20°C)

Replace the alternator if the measured value exceeds standard value.

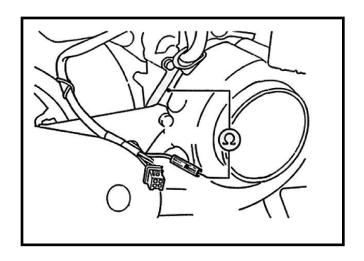

STARTING SYSTEM

Starting Circuit

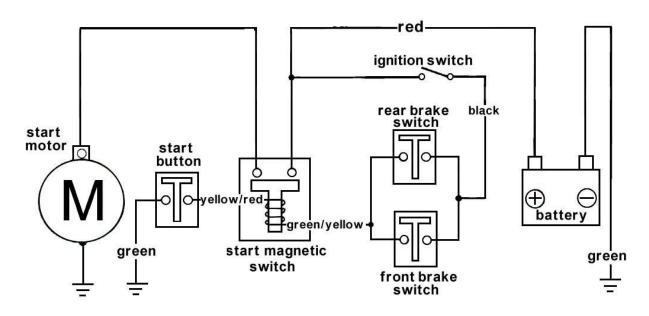


Starter magnetic switch inspection Turn main switch to "on", and operate the brake lever. Then press starting button to check if there a click sound. It is normal if there is a click sound.


Remove the luggage box.
Disconnect the battery negative (-)
terminal. Remove the battery positive
(+) connection and starting motor

(+) connection and starting motor wires from the starter magnetic switch large pin.

Remove the power control connector of the Starter magnetic switch.
Connect a Ohmmeter between the Starter magnetic switch large pins.
Connect the green/yellow wire to battery positive (+) terminal, and yellow/red to battery negative (-) terminal.

Check the continuity between the Starter magnetic switch large pins. If it is not continuity, then replace the starter magnetic switch.

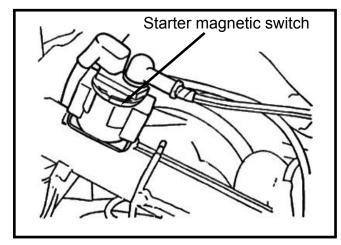

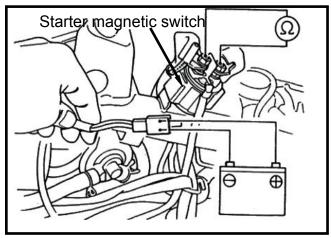


Starting Motor Removal

Remove the battery cover.
Firstly, remove the battery negative
(-) terminal, and then remove the positive (+) terminal.
Remove the luggage box.
Remove the starting motor power wire. Remove the starting motor mounting bolts and motor.

Starting Motor Installation

Install the motor in reverse order of removal.

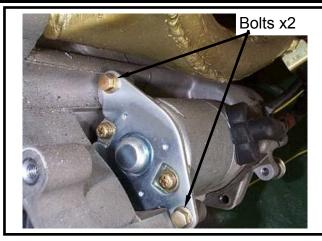


METER

Removal


Remove the front handle cover.



Remove the speedometer cable.

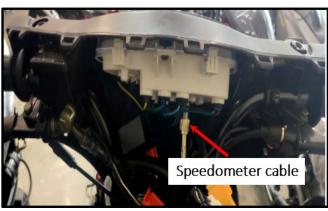


Remove the front cover.
Remove the power connector of the meter.

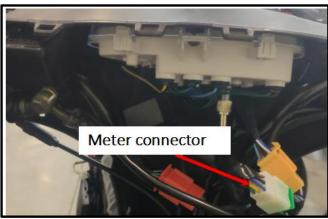

16-14 ELECTRICAL EQUIPMENT

Remove the rear handle cover. Remove the meter mounting screws. Take out the meter.

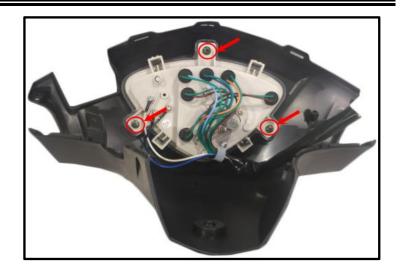

Inspection


Check conductance of wires by multi-meter.

SP: Speedometer light: (+)---Brown

(-) ---Black/white HI: High beam indicator: (+)---Blue

(-)---Black/white TU: Winker indicator(+): Orange (RH)

(LH) (-)---Black/white Light blue

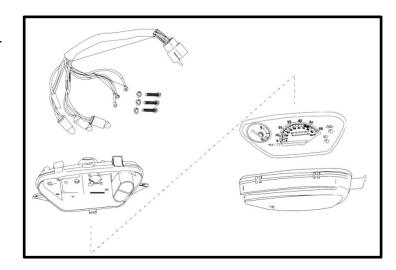

⚠ Caution

Do not wipe the meter or headlight with organic solvent such as gasoline to prevent from damage these components.

Installation

Install the meter in reverse order of removal.

HEAD LIGHT

Headlight Replacement Rear the front cover. Disconnect the headlight wire connector.



Install the head light in reverse order of removal. Turn the main switch ON/OFF to check if the light has been installed properly after installation.



▲ Caution

The headlight is led and cannot be replaced alone. If it is broken, please replace the whole headlight.



FRONT TURN SIGNAL


Replacement

Remove the front cover.
Remove the wire connector of the turn signal light.



∆ Caution

The headlight is led and cannot be replaced alone. If it is broken, please replace the whole headlight.

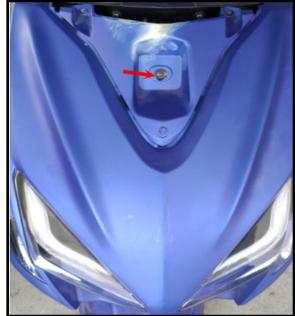

Installation

Install the turn signal light in reverse order of removal.

Replacement of tail light/brake light/rear turn signal light.

Remove the taillight &left/right turn light .

Remove the tail light assembly.



Installation

Install in reverse order of removal.

MAIN SWITCH/HORN

Main Swith Check


Remove the headlight connector and the front cover. Disconnect main switch leads connector. Check connector terminals for continuity.


color Location	Black	Black/ white	Red
OFF	•		•
ON	•—		-


Replacement

Remove the main switch connector and fixing bolts (bolts x 2)

Remove the main switch. Install a new main switch and tighten the bolts. (bolts x2)

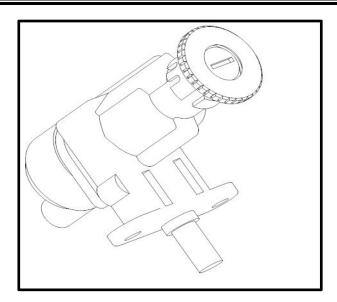

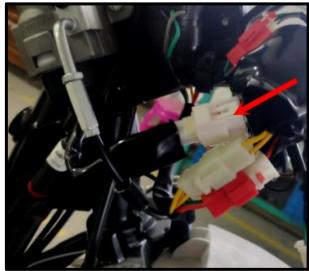


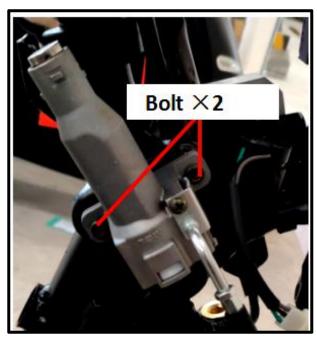


HANDLE SWITCH

Remove the front handle cover. Disconnect the connector of the handle switch. Check the continuity of follow pins listed below columns.

color	Red/Black	Black
C		
Ø	•	

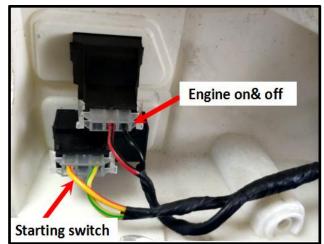

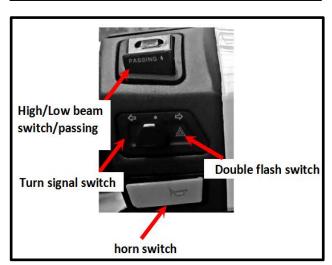

Starting switch


color	Yellow/red	Yellow/green
FREE		
(\$)	•	•

High/Low beam switch/passing

color Location	blue	white	dark green	red
	•		•	
		•—	•	
	•			•

Horn switch


color Location	brown/red	green/black
FREE		
Jè	•	•

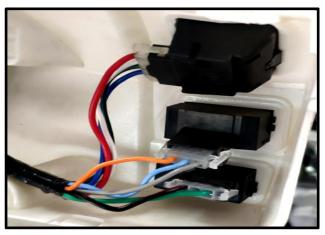

Brake light switch

The circuit of black wire and the green/yellow wire on the brake light switch should be in continuity when operating the brake lever.

If the switch damaged, replace it with new one.

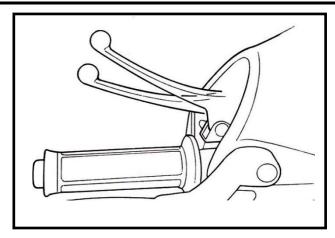


Horn

Remove the front cover.

Connect the light blue wire on the horn to the battery positive (+) terminal, and the green wire to the battery negative (-) terminal.


Then, the horn should sound. Replace it if necessary

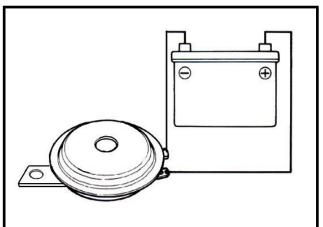

SIDE STAND SWITCH

Check connector terminals for continuity.

If the connection is normal, it needs to be replaced.

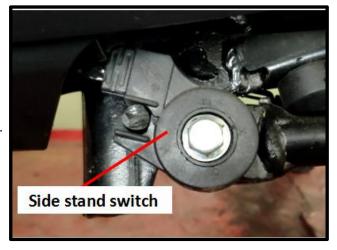


Replacement

Remove the side stand switch connector and fixing bolts(bolts x 1).

Remove the side stand switch

Install a new main switch and tighten the bolts. (bolts x1)

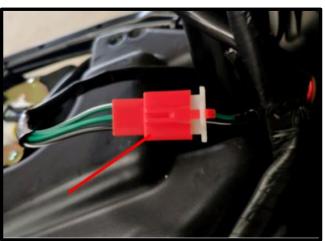

16-20 ELECTRICAL EQUIPMENT

USB

(This motorcycle is equipped with USB interface USB output voltage for DC5V can charge your mobile device).

Check connector terminals for continuity. If the connection is normal, it needs to be replaced.



USB check

First turn on the power lock to measure
Black and green wires on the USB connector. Use the
DCto measure the black line and the green Line voltage
If the measured voltage is above 12V, then USB is
damaged.




Replacement

Open the front cover, find the USB retaining nut and rotate it in the opposite direction.



17-Wiring diagram

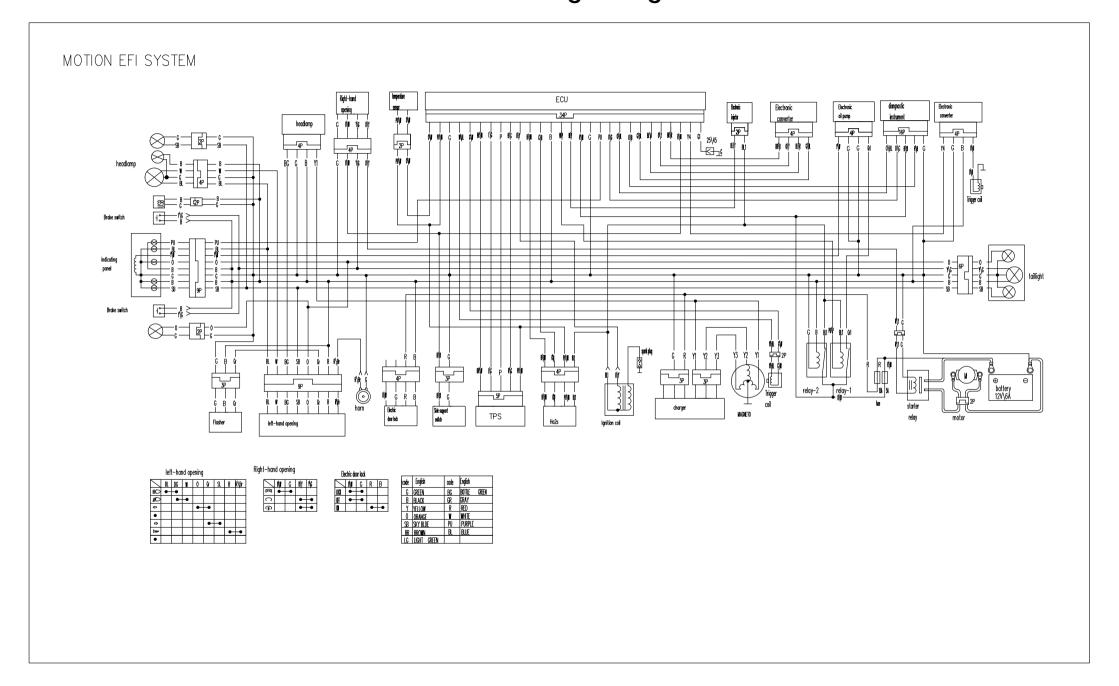



The copyright lies with the company/manufacturer:

KSR Group GmbH

Im Wirtschaftspark 15

3494 Gedersdorf

Austria

Copyright ©2021

All rights reserved.

This manual is protected by copyright.

Reproduction in mechanical, electronic or any other form without the written permission of the manufacturer is prohibited.